


# ADVANTECH

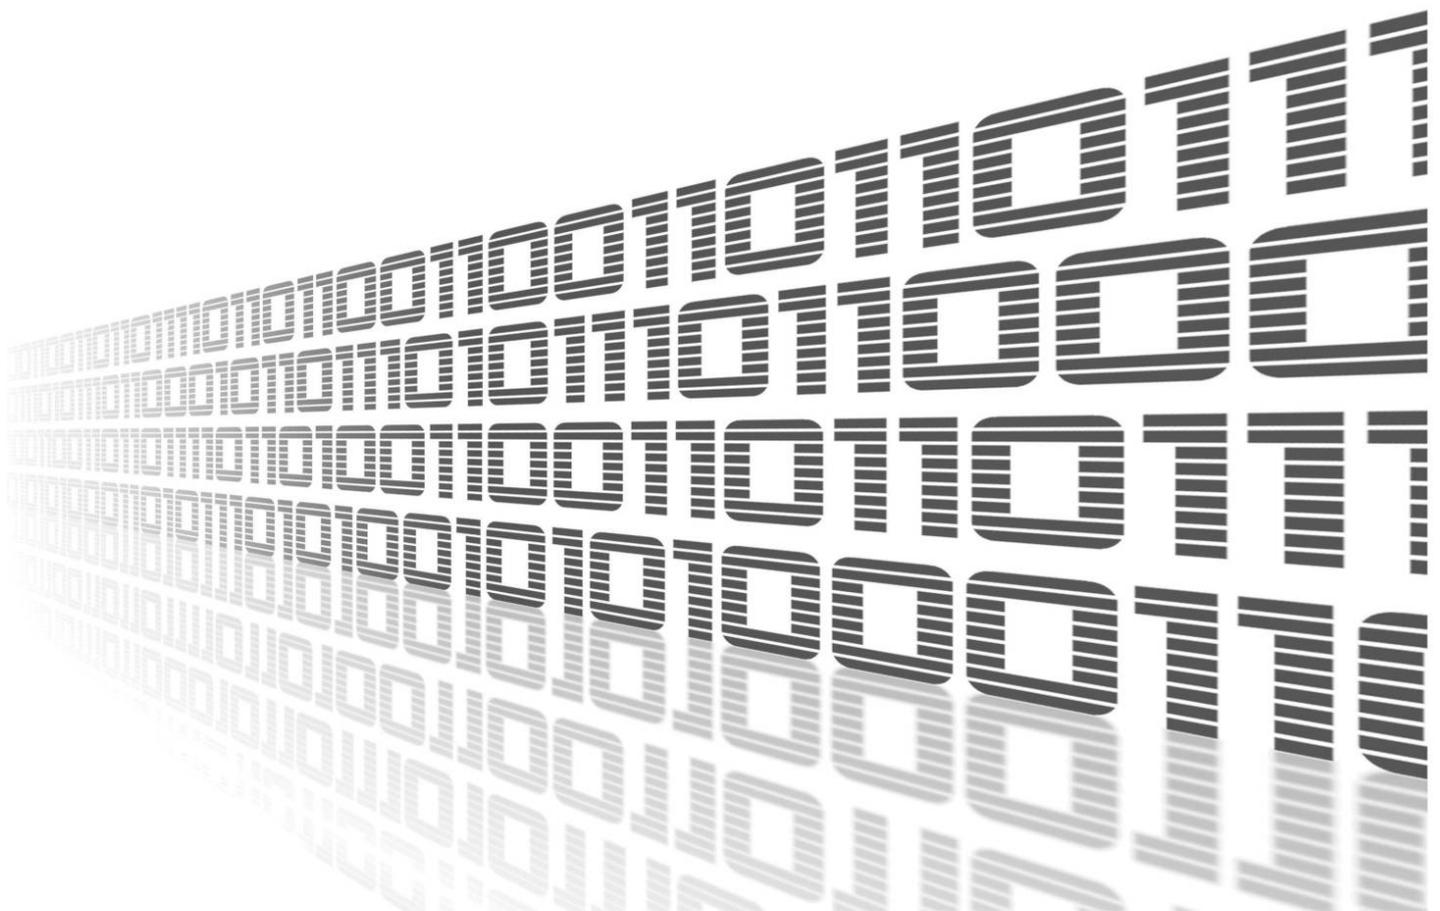

## NMAP



© 2023 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and it does not represent a commitment on the part of Advantech.

Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

# Used symbols

 *Danger* – Information regarding user safety or potential damage to the router.

 *Attention* – Problems that can arise in specific situations.

 *Information* – Useful tips or information of special interest.

 *Example* – Example of function, command or script.

# Contents

<b>1. Changelog</b>	<b>1</b>
1.1 NMAP Changelog . . . . .	1
<b>2. Description of router app</b>	<b>2</b>
<b>3. Licenses</b>	<b>4</b>
<b>4. Related Documents</b>	<b>5</b>

## List of Figures

1	Web interface . . . . .	2
2	NMAP help (Telnet or SSH) . . . . .	3
3	licenses . . . . .	4

## List of Tables

# 1. Changelog

## 1.1 NMAP Changelog

### **v1.0.0 (2011-11-02)**

- First release.

### **v1.0.1 (2011-11-25)**

- Minor improvements in HTML code.

### **v1.0.2 (2019-01-02)**

- Added licenses information.

### **v1.1.0 (2020-10-01)**

- MUpdated CSS and HTML code to match firmware 6.2.0+.

### **v5.51.6 (2021-05-25)**

- Updated nmap version to 5.51.6.

## 2. Description of router app



Router app *NMAP* is not contained in the standard router firmware. Uploading of this is described in the Configuration manual (see Chapter [Related Documents](#)).

This module allows user to perform TCP and UDP scan. It can also be used for sending pings (i.e. IP datagrams, which are intended to verify the functionality of a connection between two network interfaces).

*NMAP* module has a web interface which can be invoked by pressing the module name on the *Router Apps* page of the router web interface. The left part of the web interface (ie. menu) contains only the *Return* item, which switches this web interface to the interface of the router. In the right part are displayed the following information:

- Nmap module is located in `/opt/nmap/bin/nmap`
- For help type `/opt/nmap/bin/nmap -h`

Status	NMAP Info
Info	Nmap module is located in <code>/opt/nmap/bin/nmap</code>
Information	For help type <code>/opt/nmap/bin/nmap -h</code>
Licenses	
Customization	
Return	

Figure 1: Web interface

The first line informs about the location of NMAP router app and the second informs about a way to display help for this module. After invoking the help, a list of all parameters which can be used in the context of this module is printed (see the figure on next page). Most of them can be combined.

```
192.168.2.242 - PuTTY
# /opt/nmap/bin/nmap -h
nmap V. 2.09 usage: nmap [Scan Type(s)] [Options] <host or net #1 ... [#N]>
Scan types
  -sT tcp connect() port scan
  -sS tcp SYN stealth port scan (must be root)
  -sF,-sX,-sN Stealth FIN, Xmas, or Null scan (only works against UNIX).
  -sP ping "scan". Find which hosts on specified network(s) are up but don't
      port scan them
  -sU UDP port scan, must be r00t
  -b <ftp_relay_host> ftp "bounce attack" port scan
Options (none are required, most can be combined):
  -f use tiny fragmented packets for SYN, FIN, Xmas, or NULL scan.
  -P0 Don't ping hosts (needed to scan www.microsoft.com and others)
  -PT Use "TCP Ping" to see what hosts are up (for normal and ping scans).
  -PT21 Use "TCP Ping" scan with probe destination port of 21 (or whatever).
  -PI Use ICMP ping packet to determines hosts that are up
  -PB Do BOTH TCP & ICMP scans in parallel (TCP dest port can be specified after the 'B')
  -PS Use TCP SYN sweep rather than the default ACK sweep used in "TCP ping"
  -O Use TCP/IP fingerprinting to guess what OS the remote host is running
  -p <range> ports: ex: '-p 23' will only try port 23 of the host(s)
      '-p 20-30,63000-' scans 20-30 and 63000-65535. default: 1-1024 + /etc/services
  -Ddecoy_host1,decoy2,ME,decoy3[...] Launch scans from decoy host(s) along
      with the real one. If you care about the order your real IP appears,
      stick "ME" somewhere in the list. Even if the target detects the
      scan, they are unlikely to know which IP is scanning them and which
      are decoys.
  -F fast scan. Only scans ports in /etc/services, a la strobe(1).
  -I Get identd (rfc 1413) info on listening TCP processes.
  -n Don't DNS resolve anything unless we have to (makes ping scans faster)
  -R Try to resolve all hosts, even down ones (can take a lot of time)
  -o <logfile> Output scan logs to <logfile> in human readable.
  -m <logfile> Output scan logs to <logfile> in machine parseable format.
  -i <inputfile> Grab IP numbers or hostnames from file. Use '-' for stdin
  -g <portnumber> Sets the source port used for scans. 20 and 53 are good choices.
  -S <your IP> If you want to specify the source address of SYN or FYN scan.
  -v Verbose. Its use is recommended. Use twice for greater effect.
  -h help, print this junk. Also see http://www.insecure.org/nmap/
  -V Print version number and exit.
  -e <devicename>. Send packets on interface <devicename> (eth0,ppp0,etc.).
  -q quash argv to something benign, currently set to "pine". (deprecated)
Hostnames specified as internet hostname or IP address. Optional '/mask' specifies subnet. For example:
cert.org/24 or 192.88.209.5/24 or 192.88.209.0-255 or '128.88.209.*' all scan CERT's Class C.
SEE THE MAN PAGE FOR MORE THOROUGH EXPLANATIONS AND EXAMPLES.
#
```

Figure 2: NMAP help (Telnet or SSH)

# 3. Licenses

Summarizes Open-Source Software (OSS) licenses used by this module.

NMAP Licenses		
Project	License	More Information
nmap	GPLv2	<a href="#">License</a>

Figure 3: licenses

## 4. Related Documents

You can obtain product-related documents on *Engineering Portal* at [icr.advantech.cz](http://icr.advantech.cz) address.

To get your router's *Quick Start Guide*, *User Manual*, *Configuration Manual*, or *Firmware* go to the [Router Models](#) page, find the required model, and switch to the *Manuals* or *Firmware* tab, respectively.

The *Router Apps* installation packages and manuals are available on the [Router Apps](#) page.

For the *Development Documents*, go to the [DevZone](#) page.