



DHCP Relay



© 2024 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and it does not represent a commitment on the part of Advantech.


Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

Used symbols

 *Danger* – Information regarding user safety or potential damage to the router.

 *Attention* – Problems that can arise in specific situations.

 *Information* – Useful tips or information of special interest.

 *Example* – Example of function, command or script.

Contents

1. RouterApp Changelog	1
2. Router App DHCP Relay	2
2.1 Description	2
2.2 Installation	2
2.3 Module Configuration	4
2.4 Other Pages	5
2.5 Licenses	5
3. Related Documents	6

List of Figures

1 DHCP Relay Functional Scheme	2
2 Main Menu	3
3 Configuration Example	4
4 Status Page	5
5 licenses	5

List of Tables

1 Description of Configuration Items	4
--	---

1. Changelog



This Router App has been tested on a router with firmware version 6.3.10. After updating the router's firmware to a higher version, make sure that a newer version of the Router App has not also been released, as it is necessary to update it as well for compatibility reasons.

1.1 DHCP Relay Changelog

v1.0.0 (2020-08-21)

- First release
- Router App works with route-based IPsec only!

2. Router App DHCP Relay

2.1 Description



This Router app is not contained in the standard router firmware. Uploading of this router app is described in the Configuration manual (see Chapter [Related Documents](#)).

This router app provides the *DHCP relay agent* to enable the communication from a DHCP server to DHCP clients on subnets other than the one the server resides on. Moreover, the DHCP server can reside on a **virtual interface** such as **IPSec** or **OpenVPN**. The DHCP relay agent transfers DHCP messages from DHCP clients located on a subnet without a DHCP server to other subnets. It also relays answers from DHCP servers to DHCP clients. For the functional scheme of the DHCP relay functionality, see Figure 1.

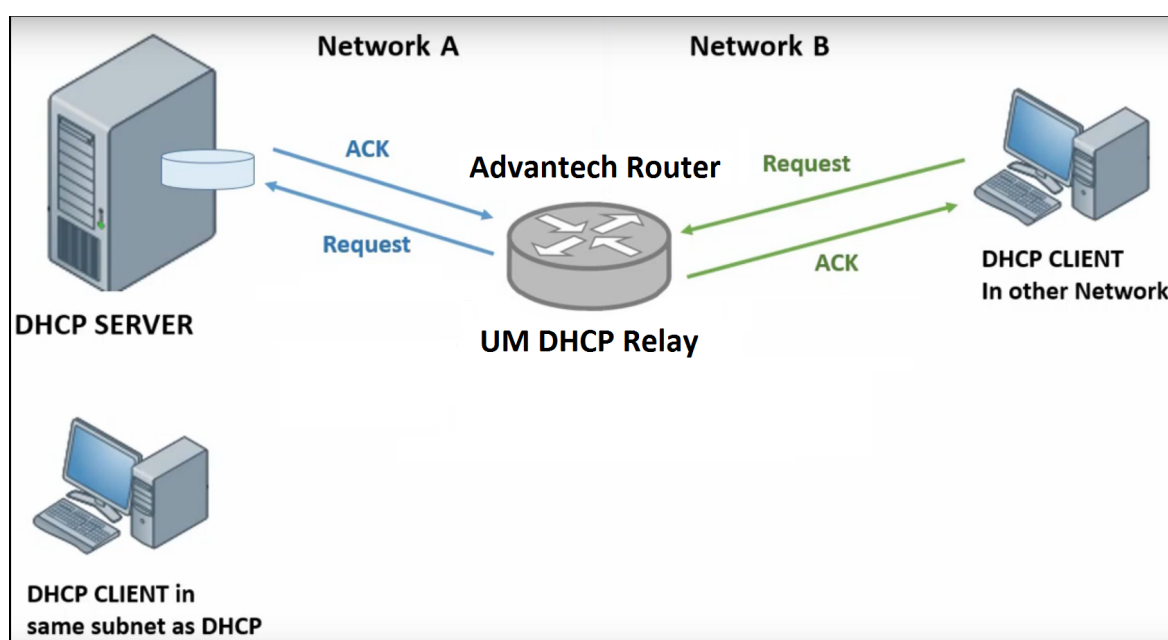


Figure 1: DHCP Relay Functional Scheme

The DHCP relay agent is transparent to both the client and the server. Neither side is aware of the communications that pass through the DHCP relay agent. As DHCP clients broadcast requests, the DHCP relay agent receives the packets and forwards them to the DHCP server. During this process, the DHCP relay agent increases the hop count by one before forwarding the DHCP message to the server. A DHCP server includes the hop count from the DHCP request that it receives in the response that it returns to the client.

2.2 Installation

In the GUI of the router navigate to *Customization -> Router Apps* page. Here choose the downloaded module's installation file and click to the *Add or Update* button.

Once the installation of the module is complete, the module's GUI can be invoked by clicking the module name on the *Router Apps* page. Figure 2 shows the main menu of the module. It has the *Status* menu section, followed by the *Configuration*, *Information* and *General* menu sections. To return back to the router's web GUI, click on the *Return* item.

DHCP Relay

Status
Overview
System Log
Configuration
Global
Information
Licenses
Customization
Return

Figure 2: Main Menu

2.3 Module Configuration

Configuration of this router app can be done on *Global* page, under *Configuration* menu section. Up to six different rules can be configured. Configuration form is shown in Figure 3. All configuration items are described in Table 1.

Global Configuration				
<input checked="" type="checkbox"/> Enable DHCP Relay service				
Enabled	Local Interface	Local IP Address	Outgoing Interface	DHCP Server IP Address
<input checked="" type="checkbox"/>	eth0	192.168.1.1	eth2	192.163.3.254
<input checked="" type="checkbox"/>	eth1	192.168.2.1	ipsec0	192.163.10.254
<input type="checkbox"/>	eth0		ipsec0	
<input type="checkbox"/>	eth0		ipsec0	
<input type="checkbox"/>	eth0		ipsec0	
<input type="checkbox"/>	eth0		ipsec0	
<input type="button" value="Apply"/>				

Figure 3: Configuration Example

There are two DHCP Relay rules defined in the configuration example above.

The first rule forwards the DHCP requests from 192.168.1.0/24 network connected to the ETH0 interface to the DHCP server (IP 192.163.3.254) on ETH2 interface connected to the 192.168.1.0/24 network.

The second rule forwards the DHCP requests from 192.168.2.0/24 network connected to the ETH1 interface to the DHCP server (IP 192.163.10.254) on the 192.168.10.0/24 network connected through the first IPsec tunnel.

Item	Description
Enable DHCP Relay service	If enabled, the functionality of the module (DHCP Relay agent) is turned on.
Enabled	Enables the rule configured in a relevant row configuration.
Local Interface	The incoming interface connected to the network without the DHCP server.
Local IP Address	IP address of the local interface.
Outgoing Interface	The outgoing interface connected to the network having the DHCP server.
DHCP Server IP Address	IP address of the DHCP server running in the network connected to the outgoing interface.

Table 1: Description of Configuration Items

2.4 Other Pages

The status of all of the DHCP Relay Services can be observed at Overview page under the *Status* menu section, see Figure 4.

Status Overview	
Services	
DHCP Relay Service 1	: Running
Nov 3 14:06:04 dnsmasq[12091]: started, version 2.81 DNS disabled	
Nov 3 14:06:04 dnsmasq-dhcp[12091]: DHCP relay from 192.168.1.1 to 192.163.3.254	
DHCP Relay Service 2	: Stopped
DHCP Relay Service 3	: Stopped
DHCP Relay Service 4	: Stopped
DHCP Relay Service 5	: Stopped
DHCP Relay Service 6	: Stopped

Figure 4: Status Page

The *System Log* page under the *Status* menu section, contains the full system log messages, not just the module related.

The *Licenses* page under the *Information* menu section, contains information related the licensees related to the router app.

2.5 Licenses

Summarizes Open-Source Software (OSS) licenses used by this module.

DHCP Relay Licenses		
Project	License	More Information
dnsmasq	GPLv2	License

Figure 5: licenses

3. Related Documents

You can obtain product-related documents on *Engineering Portal* at icr.advantech.com address.

To get your router's *Quick Start Guide*, *User Manual*, *Configuration Manual*, or *Firmware* go to the [Router Models](#) page, find the required model, and switch to the *Manuals* or *Firmware* tab, respectively.

The *Router Apps* installation packages and manuals are available on the [Router Apps](#) page.

For the *Development Documents*, go to the [DevZone](#) page.