

ADVANTECH



Protocol PIM-SM — DEPRECATED —



© 2024 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and it does not represent a commitment on the part of Advantech.

Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

Used symbols



Danger – Information regarding user safety or potential damage to the router.



Attention – Problems that can arise in specific situations.



Information – Useful tips or information of special interest.

Contents

1. Changelog	1
1.1 Protocol PIM-SM Changelog	1
2. Description of Router App	2
3. Configuration	4
3.1 Configuration example – Static selection of RP	5
3.2 Configuration example – Dynamic selection of RP	6
3.3 System Log	7
4. Interoperability	8
5. Licenses	9
6. Related Documents	10

List of Figures

1 Static selection of RP	6
2 Dynamic selection of RP	7
3 Licenses	9

List of Tables

1. Changelog



This Router App has been tested on a router with firmware version 6.3.10. After updating the router's firmware to a higher version, make sure that a newer version of the Router App has not also been released, as it is necessary to update it as well for compatibility reasons.

1.1 Protocol PIM-SM Changelog

v1.0.0 (2012-06-11)

- First release

v1.1.0 (2013-11-13)

- Added support of timer period settings - hello, join/prune, bootstrap

v1.2.0 (2017-03-20)

- Recompiled with new SDK

v1.2.1 (2018-09-27)

- Added expected ranges of values to JavaScript error messages

v1.2.2 (2019-01-02)

- Added licenses information

v1.3.0 (2020-10-01)

- Updated CSS and HTML code to match firmware 6.2.0+

v1.3.1 (2022-03-24)

- Removed hoard-coded settings path

v1.4.0 (2022-11-03)

- Reworked license information

v1.5.0 (2023-07-24)

- Upgraded pimd to version 2.3.2

v1.51 (2024-02-29)

- Added description and summary files
- Recompiled with ModulesSDK 2.1.3

2. Description of Router App



The *Protocol PIM-SM Router App* has been deprecated, and its functionality has been integrated into the *FRR Router App*. We strongly recommend installing the *FRR Router App*, as *Protocol PIM-SM Router App* will no longer be maintained or supported in the future.



Router app *Protocol PIM-SM* is not included in the standard router firmware. Uploading of this router app is described in the Configuration manual (see Chapter [Related Documents](#)).

Due to this module the PIM-SM (Protocol Independent Multicast – Sparse Mode) protocol is available. It is the most commonly used multicast routing protocol that is designed on the assumption that recipients for any particular multicast group will be sparsely distributed throughout the network. In order to receive multicast data, routers must explicitly tell their upstream neighbors about their interest in particular groups and sources. PIM-SM by default uses shared trees, which are multicast distribution trees rooted at some selected node (this router is called the Rendezvous Point, RP) and used by all sources sending to the multicast group.

For configuration *PIM SM* router app is available web interface, which is invoked by pressing the module name on the *Router apps* page of the router web interface. The left part of the web interface contains the menu with pages for *Configuration*, monitoring (*Status*) and *Customization* of the module. *Customization* block contains only the *Return* item, which switches this web interface to the interface of the router. In the configuration part of web interface is possible to find form which includes the following:

- **Enable PIM-SM**

Enables activation of the module (particularly runs the application – pimd deamon) implementing PIM-SM protocol.

- **Network Interfaces**

List of network interfaces ethX and greX in which the PIM-SM protocol will be activated. In accord with the setting of this item is set "allmulti" flag for ethX interface (e.g. eth0) and "multicast" flag for greX interface (e.g. gre1). TTL (Time to Live) value is 64. Return path filtering for all types of network interfaces mentioned in the list is forbidden. This is done by setting the appropriate *rp_filter* item in the proc file system (e.g. `echo 0 > /proc/sys/net/ipv4/conf/eth0/rp_filter`).

Example:

```
eth0 gre1
```

- **Disable Vifs**

Corresponds to *-N*, or *-disable-vifs* (see [3]), in the process of running application (pimd deamon) implementing PIM-SM protocol. If this item is checked, all network interfaces in terms of PIM-SM are inactive and must be enabled selectively (*enable* option of *phyint* command in chapter 3 [Configuration](#) on page 4). If this item is not checked, then the situation is reversed and all network interfaces that should not have active PIM-SM protocol (e.g. ppp0) must be explicitly forbidden. Details can be found in the documentation for the pimd deamon (see [3]).

- **Timer Hello Period**

PIM hello messages are sent periodically on each interface that has PIM enabled in configuration file

of pimd daemon (it's possible to define it in *pimd.conf* field). This item specifies period of sending these messages. Default value is 30 seconds.

- **Timer Join/Prune Period**

Using this item can be specified the time interval at which the router sends the PIM join/prune messages to the upstream RPF (Reverse Path Forwarding) neighbor. The default join/prune message interval is 60 seconds.

- **Timer Bootstrap Period**

This item specifies period of sending bootstrap messages. Default value is 60 seconds.

- **pimd.conf**

Configuration file of pimd daemon. Details and examples can be found in the documentation for the pimd daemon.

The changes will apply after pressing the *Apply* button.

3. Configuration

The following list mentions commands that can be used when editing `pimd.conf` file (represented by the same name item in the configuration web interface) and detailed description of these commands.

- **default_source_preference** <preference>
Preference value is used when forwarder and upstream router is selected for the LAN. Due to the unreliability of obtaining preferences from unicast routing protocols is allowed to enter the default value via this command. It is entered at the beginning of the file. The lower the value, the more likely the router will be selected for above mentioned purposes. But it is not desirable for dedicated applications such as `pimd` to be selected at the expense of more general application, so it is suitable to set the *preference* value somewhat higher (it can be for example 101).
- **default_source_metric** <metric>
Sets the cost for sending data through this router. The preferred default value is 1024.
- **phyint** <local-addr|ifname> [*disable/enable*] [*altnet <network> masklen <masklen>*] [*scoped <network> masklen <masklen>*] [*threshold thr*] [*preference pref*] [*metric cost*]
Specifies interfaces either by its IP address or name. If you want to activate this interface with default values, you don't need to put anything else. Otherwise enter additional values (detailed description is in the `pimd` daemon documentation [3]).
- **cand_rp** [<local-addr>] [*priority <number>*] [*time <number>*]
Rendezvous point (RP) is the key element in networks with the PIM-SM protocol. This is the point (router) that brings together data from multicast sources and requirements for taking this data from multicast recipients. Rendezvous point in the PIM can be selected statically or dynamically.
For dynamic selection is used bootstrap mechanism. From several candidates for the bootstrap router (CBSR) is selected by simple algorithm one BSR. This router ensures the selection of one RP from set of CRP (Candidate Rendezvous Point). The result should be one RP for the multicast group in the PIM domain.
If you use `cand_rp` command in `pimd.conf` file, the corresponding router will become CRP. Parameters are the address of the network interface that is used for reporting parameters of this CRP, priority of CRP (lower number means higher priority) and reporting period.
- **cand_bootstrap_router** [<local-addr>] [*priority <number>*]
If you use `cand_bootstrap_router` command in `pimd.conf` file, the corresponding router will become CBSR (see `cand_rp` description). Parameters of this command are similar to those of `cand_rp` command.
- **rp_address** <rp-addr> [<group-addr>] [*masklen <masklen>*] [*priority <number>*]]
This command is applied when the static method of RP selection is used (see description of `cand_rp`). A required parameter is the IP (unicast) address of RP or a multicast group. Additional parameters can limit the use of RP.
- **group_prefix** <group-addr> [*masklen <masklen>*] [*priority <number>*]
This command is applied when the dynamic method of RP selection is used. Specifies the multicast group for which the router acts as a RP in case that this router is selected from the set of CRPs. The maximum number of these specifications in the `pimd.conf` file is 255.

- **switch_data_threshold** [*rate <number> interval <number>*]

PIM-SM protocol uses several ways to transfer packets with multicast addresses between sources (transmitters) and recipients (receivers). For each of these ways is a characteristic logical network topology. This topology is established by reports that are sent between PIM-SM routers.

Each of these topologies – tree structures – has its name. There are also RP tree (RPT) that is the same as the shared tree. Another option is source-specific tree and finally there is source-specific shortest-path tree.

These types of tree structures are listed in the order in which it increases overhead required for their assembly and maintenance. Likewise in most cases also increases its transmission capacity.

The *switch_data_threshold* command sets a limit for the transition to a logical topology with higher throughput.


- **switch_register_threshold** [*rate <number> interval <number>*]
Opposite to the previous command.

3.1 Configuration example – Static selection of RP

Below is an example of configuring with a static selection of RP (Rendezvous Point). Configuration is entered into the *pimd.conf* field in web interface of this router app.

```
default_source_preference 101

phyint eth1 enable
phyint gre1 enable preference 102
rp_address 10.168.254.1
switch_data_threshold rate 60000 interval 10
switch_register_threshold rate 60000 interval 10
```

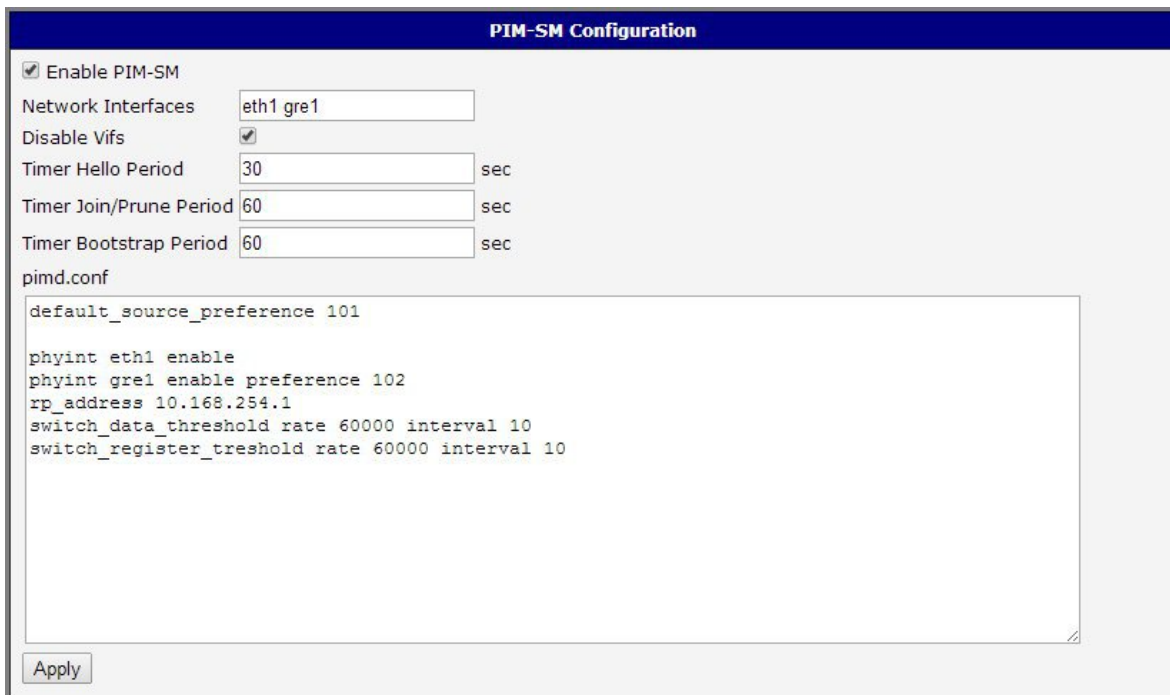

The screenshot shows the 'PIM-SM Configuration' web interface. It includes a checkbox for 'Enable PIM-SM' which is checked. Below it are input fields for 'Network Interfaces' (eth1 gre1), 'Disable Vifs' (checked), and three timer fields: 'Timer Hello Period' (30 sec), 'Timer Join/Prune Period' (60 sec), and 'Timer Bootstrap Period' (60 sec). A text area labeled 'pimd.conf' contains the following configuration:

```
default_source_preference 101

phyint eth1 enable
phyint gre1 enable preference 102
rp_address 10.168.254.1
switch_data_threshold rate 60000 interval 10
switch_register_treshold rate 60000 interval 10
```

An 'Apply' button is located at the bottom left of the configuration area.


Figure 1: Static selection of RP

3.2 Configuration example – Dynamic selection of RP

Below is an example of configuring with a dynamic selection of RP (Rendezvous Point). Configuration is entered into the *pimd.conf* field in web interface of this router app.

```
default_source_preference 101

phyint eth1 enable
phyint gre1 enable preference 102
cand_rp 10.168.254.1 priority 10
cand_bootstrap_router 10.168.254.1 priority 10
group_prefix 239.0.0.0 masklen 8 priority 10
switch_data_threshold rate 60000 interval 10
switch_register_threshold rate 60000 interval 10
```

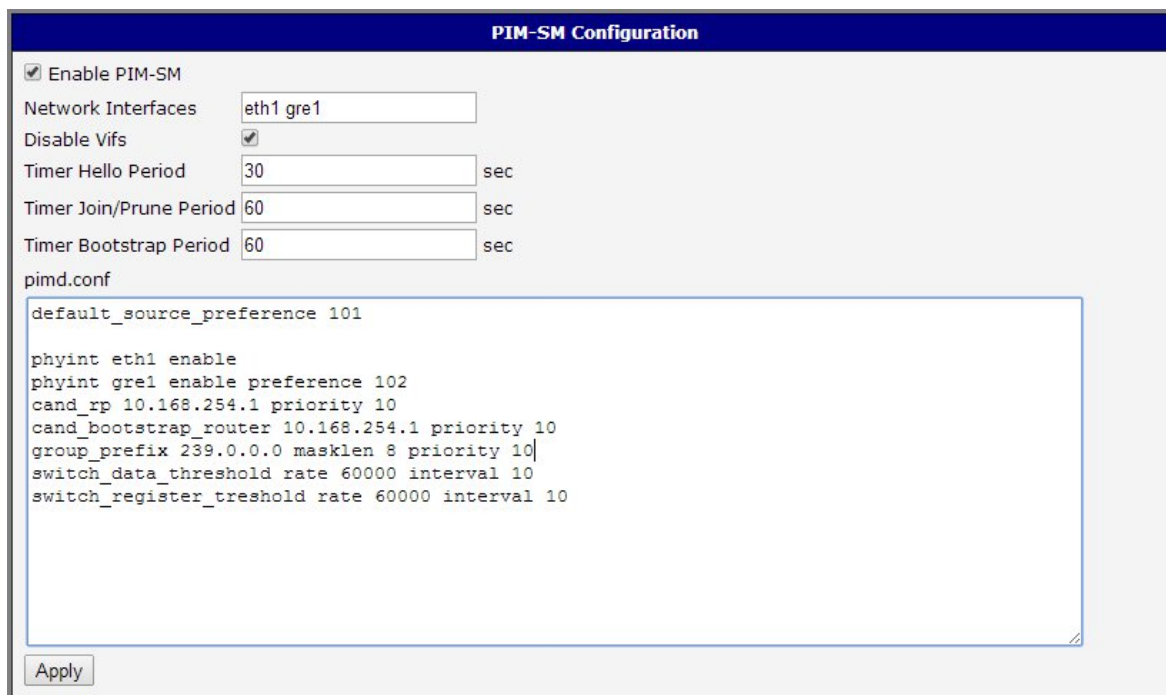

PIM-SM Configuration

Enable PIM-SM

Network Interfaces:

Disable Vifs:

Timer Hello Period: sec

Timer Join/Prune Period: sec

Timer Bootstrap Period: sec

pimd.conf

```
default_source_preference 101

phyint eth1 enable
phyint gre1 enable preference 102
cand_rp 10.168.254.1 priority 10
cand_bootstrap_router 10.168.254.1 priority 10
group_prefix 239.0.0.0 masklen 8 priority 10
switch_data_threshold rate 60000 interval 10
switch_register_treshold rate 60000 interval 10
```

Figure 2: Dynamic selection of RP

3.3 System Log

In case of any problems it is possible to view the system log by pressing the *System Log* menu item. In the window are displayed detailed reports from individual applications running in the router including possible reports relating to the *PIM SM* module.

4. Interoperability

Pimd is able to work with other software products that meet the specification of PIM-SM protocol. The exceptions are some older versions of IOS (Cisco) that do not meet this specification at one point. More specifically, the issue is the calculation of the checksum of PIM_REGISTER messages. In newer versions of IOS this problem is already resolved.

5. Licenses

Summarizes Open-Source Software (OSS) licenses used by this module.

PIM-SM Licenses		
Project	License	More Information
pimd	Pimd	License
mrouterd	Mrouterd	License

Figure 3: Licenses

6. Related Documents

[1] Internet: manpages.ubuntu.com/manpages/maverick/man8/pimd.8.html

You can obtain product-related documents on *Engineering Portal* at icr.advantech.com address.

To get your router's *Quick Start Guide*, *User Manual*, *Configuration Manual*, or *Firmware* go to the [Router Models](#) page, find the required model, and switch to the *Manuals* or *Firmware* tab, respectively.

The *Router Apps* installation packages and manuals are available on the [Router Apps](#) page.

For the *Development Documents*, go to the [DevZone](#) page.