

ADVANTECH



Transparent Mode





© 2023 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and it does not represent a commitment on the part of Advantech.


Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.


All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

Used symbols

 *Danger* – Information regarding user safety or potential damage to the router.

 *Attention* – Problems that can arise in specific situations.

 *Information* – Useful tips or information of special interest.

 *Example* – Example of function, command or script.

Contents

1. Changelog	1
1.1 Transparent Mode Changelog	1
2. Description of router app	2
3. Configuration	3
3.1 Automatic configuration during the module installation	3
3.2 Automatic forwarding from the router	4
3.3 Access to the router	5
4. Related Documents	6

List of Figures

1	Functional scheme	2
2	Reconfiguration of <i>Lease Time</i>	3
3	Configuration of forwarding	4
4	Access to the router from the outside	5

List of Tables

1. Changelog

1.1 Transparent Mode Changelog

v1.0.0 (2014-06-24)

- First release.

v1.0.1 (2014-07-03)

- Fixed DNS issue.
- DHCP lease time increased to 60 seconds.

v1.0.2 (2014-07-07)

- Fixed DNS issue that occurs when the operator do not assign DNS.

v1.0.3 (2014-07-08)

- Added support of port forwarding.

v1.0.4 (2014-07-16)

- Added support of outbond traffic from router.

v1.0.5 (2014-08-21)

- Fixed NAT bugs with incoming traffic.

v1.1.0 (2017-03-21)

- Recompiled with new SDK.

v1.1.1 (2017-06-22)

- Added using of the largest possible netmask on internal network.

v1.1.2 (2020-06-19)

- Fixed handling with modules without arp.

2. Description of router app



Router app is not contained in the standard router firmware. Uploading of this router app is described in the Configuration manual (see Chapter [Related Documents](#)).



This router app works for the ETH0 interface only.

After loading the router app into any Advantech router, this router becomes "invisible" for the remote devices. It is available only for a device that is located behind the router. The default IP address of the ETH0 interface is 192.168.1.1. All communication with the device, that is located behind this router, runs directly. This means that communication from the Internet toward the SIM IP will be redirected to the interface of the device behind this router.

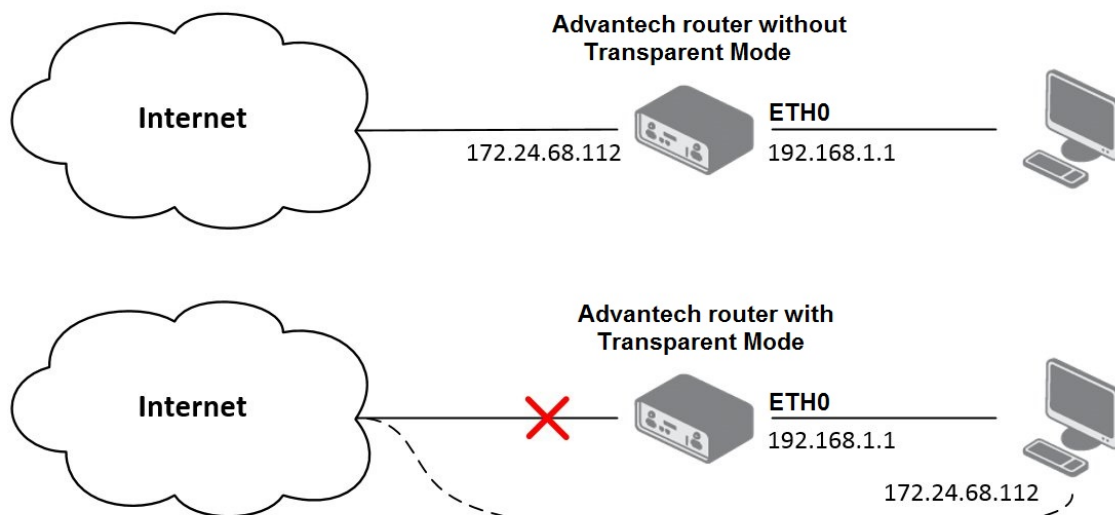


Figure 1: Functional scheme



The router app has no web interface and it is not necessary to activate it (it's active immediately after uploading).

3. Configuration

3.1 Automatic configuration during the module installation

During the installation of *Transparent Mode* module to the router, DHCP server (dynamic distributing of IP addresses) is disabled. IP address is allocated only when cellular connection is established. For cases when cellular connection is not established, it is necessary to set a static IP address for a device behind the router. The moment the router app is uninstalled, the router is reconfigured to its original state. If the DHCP server was enabled before installing *Transparent Mode* module, after uninstalling this module will be enabled again.

LAN Configuration		
	Primary LAN	Secondary LAN
DHCP Client	disabled ▼	disabled ▼
IP Address	192.168.1.1	
Subnet Mask	255.255.255.0	
Bridged	no ▼	no ▼
Media Type	auto-negotiation ▼	auto-negotiation ▼
Default Gateway		
DNS Server		
<input type="checkbox"/> Enable dynamic DHCP leases		
IP Pool Start	192.168.1.2	
IP Pool End	192.168.1.254	
Lease Time	10	sec
<input type="checkbox"/> Enable static DHCP leases		
MAC Address	IP Address	
<input type="button" value="Apply"/>		

Figure 2: Reconfiguration of *Lease Time*



During the installation of this module, *Masquerade outgoing packets* item (on *NAT* page of router web interface) is disabled. **This item must never be enabled!**

4. Related Documents

You can obtain product-related documents on *Engineering Portal* at icr.advantech.cz address.

To get your router's *Quick Start Guide*, *User Manual*, *Configuration Manual*, or *Firmware* go to the [Router Models](#) page, find the required model, and switch to the *Manuals* or *Firmware* tab, respectively.

The *Router Apps* installation packages and manuals are available on the [Router Apps](#) page.

For the *Development Documents*, go to the [DevZone](#) page.