


**ADVANTECH**

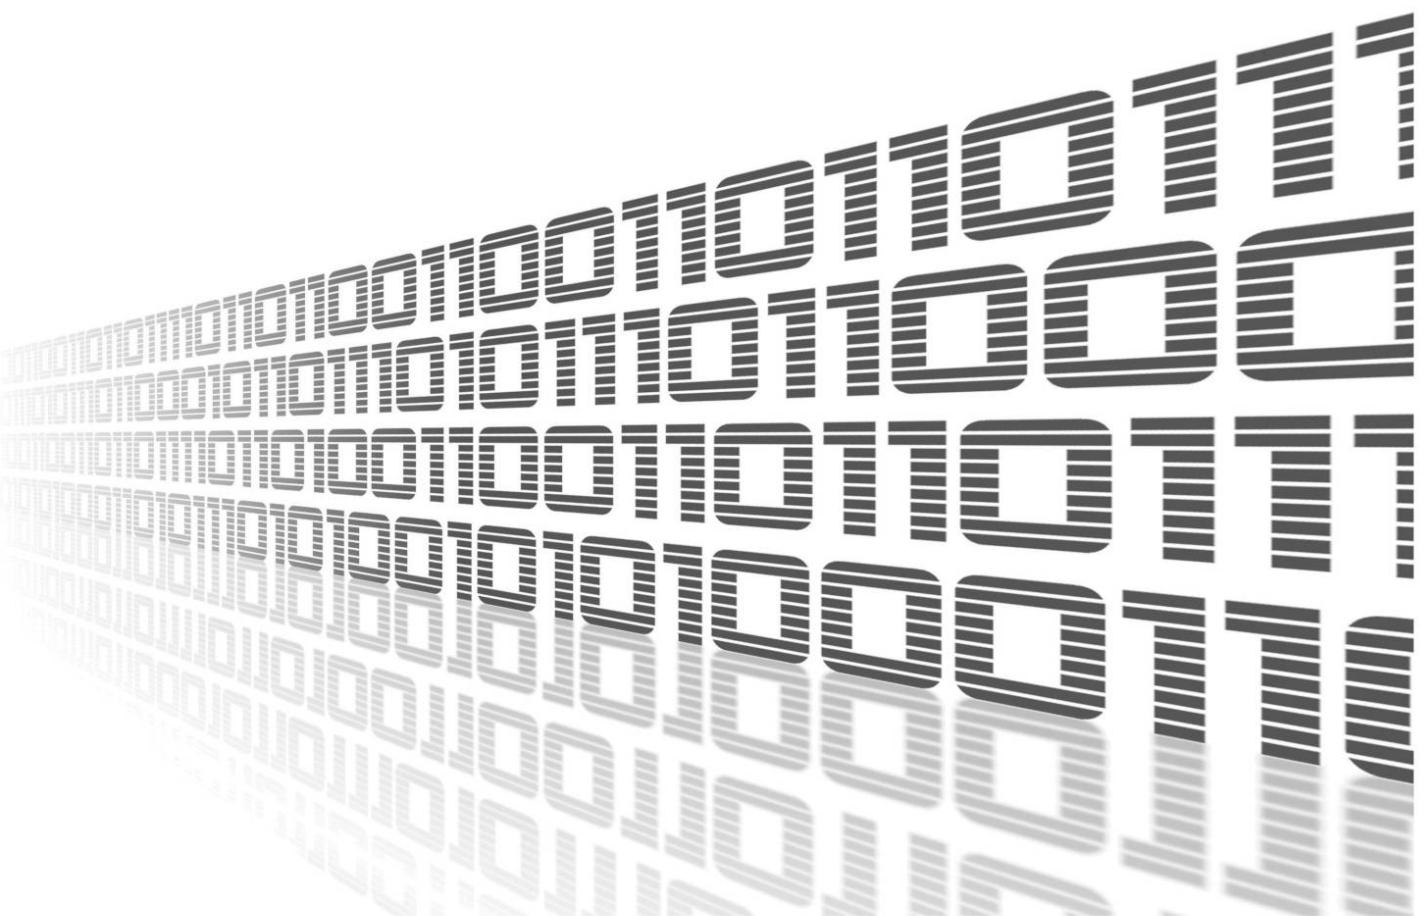

## Modbus to MQTT



© 2024 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and it does not represent a commitment on the part of Advantech.

Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

# Used symbols

 *Danger* – Information regarding user safety or potential damage to the router.

 *Attention* – Problems that can arise in specific situations.

 *Information* – Useful tips or information of special interest.

 *Example* – Example of function, command or script.

# Contents

<b>1. Changelog</b>	<b>1</b>
1.1 Modbus to MQTT Changelog	1
<b>2. Router App Description</b>	<b>3</b>
2.1 Modbus To MQTT	3
2.2 Web Interface	3
<b>3. Configuration</b>	<b>4</b>
3.1 Settings	4
3.2 CSV config file	7
<b>4. Status</b>	<b>10</b>
4.1 Log	10
4.2 Mapping table	10
4.3 MQTT Data Format	10
<b>5. Related Documents</b>	<b>12</b>

## List of Figures

1 Menu	3
2 Settings Part 1	4
3 Settings Part 2	6
4 CSV file	7
5 CVS file import	9
6 Mapping table	10

## List of Tables

1 Settings Example Items Description	5
2 Configuration items description	8

# 1. Changelog

## 1.1 Modbus to MQTT Changelog

### v2.0.5

- Change openssl (1.0.2u) to static library.

### v2.0.6

- Add option of Azure SAS-token generation.
- Need to install Python3 user module.
- Add Data Type: Double Word - Frame.
- Add "Byte Swap" field in csv file.
- Add supported Data type "String".
- Add "Word Swap" and "Byte Swap" for String Data Type.

### v2.0.7

- Add show mosquitto error code and error message in the connected/disconnected function.

### v2.0.8

- Add upload local cert and local key features for AWS.

### v2.0.9

- Change modbus command maximum from 100 to 500.

### v2.0.10

- Add polling the user module processes for each 5 seconds, if the user module crashed, it will run again.

### v2.0.11

- Add "Custom2 Field" field in csv file.
- Add "Send Group" field in csv file, for MQTT send group feature.
- Add "Send interval" field in csv file, for MQTT send group feature.

### v2.0.12

- Add Azure SAS-token generation (without Python3 user module). When Python3 user module installed, it will use SAS-token generation by python.

### v2.0.13

- Added ability to edit CSV, CA certificate, Local certificate and Local Private Key from WebUI.

### v2.0.14

- Fixed issue when the Router App mb2mqtt is loading default configuration after Firmware update.

### v2.0.15

- Fixed an issue with displaying space values in the Mapping Table page.
- Fixed an issue where the old value was displayed in the Mapping Table page when the configuration value was empty.

### v2.0.16

- For WADMP: Fixed the issue that the default value has whitespaces.

### v2.0.17

- To support Integer with 2 bytes size (Example: convert 0xFFFF to -1).
- Set permissions to 755 for all files in the User Module.

### v2.0.18

- Fixed an issue with integer-to-float conversion.
- Add more log message for MQTT value.

### v2.0.19

- Increase Custom Fields to 10 (CSV configuration fields : Q, R, U AB)

### v2.0.20

- Fixed an issue where configuration comments were causing issues in the management system WADMP.

### v2.1.0 (1.3.2024)

- To support platforms v2i, v3, v4 and v4i.
- Update OpenSSL to 3.0.12
- Update mosquitto to 2.0.12

## 2. Router App Description



This Router app is not contained in the standard router firmware. Uploading of this router app is described in the Configuration manual (see Chapter [Related Documents](#)).



This Router App is compatible only with firmware version 6.4.x

### 2.1 Modbus To MQTT

Modbus to MQTT is an router app for providing seamless communication between Modbus/TCP devices and MQTT device. Modbus to MQTT works as Modbus/TCP master to communicate with Modbus/TCP devices, and works as MQTT publisher/subscriber to communicate with MQTT broker.

### 2.2 Web Interface

Once the installation of the module is complete, the module's GUI can be invoked by clicking the module name on the Router Apps page of router's web interface.

Left part of this GUI contains menu with Status, Configuration and Customization menu sections. Status menu section contains Log and Mapping table menu items. Configuration menu section contains Settings menu item and Customization contains only Return menu item which switches back from the module's web page to the router's web configuration pages. The main menu of module's GUI is shown on Figure 1.

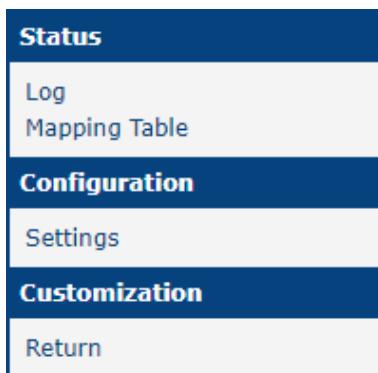


Figure 1: Menu

# 3. Configuration

## 3.1 Settings

Configuration of this router app can be done on Settings page, under Configuration menu section. All configuration items for Settings configuration page are described in the table below.

Modbus to MQTT Settings		
Modbus to MQTT		
Service Enable	OFF	Enable the Modbus to MQTT.
Log Enable	OFF	Enable the Service Log.
Broker Address	127.0.0.1	The remote Broker Server Address.
Broker Server Port	1883	The Broker Server Port Number ( 1 - 65535 ).
MQTT Keepalive	60	
MQTT QoS	0	
MQTT Retain	OFF	
Client ID		
MQTT Anonymous	Disable	
Azure SAS-token generation	Disable	
MQTT Username		
MQTT Password		
MQTT TLS	Disable	
Timeout	1000 msec	The Modbus TCP Timeout.
CSV config		
	<a href="#">Upload CSV config file</a>	<a href="#">Download CSV config file</a>
CA certificate		
	<a href="#">Upload CA certificate file</a>	
Local Certificate		
	<a href="#">Upload Local certificate file</a>	
Local Private Key		
	<a href="#">Upload Local Private Key file</a>	

Figure 2: Settings Part 1

Item	Description
Service Enable	Enabled, Modbus to MQTT APN functionality of the module is turned on.
Log Enable APN	Enable the Service Log.
Broker Address	Enter the remote Broker Server Address.
Broker Server Port	Enter Broker Server Port Number (1-65535).
MQTT Keepalive	Enter MQTT keepalive interval (1-3600).
MQTT QoS	Enter MQTT QoS value (0,1,2).

Continued on the next page

---

Continued from previous page

Item	Description
MQTT Retain	Enable for message retaining.
Client ID	Enter Client ID.
MQTT Anonymous	Enable MQTT Anonymous
MQTT Username	Enter MQTT Username.
MQTT Password	Enter MQTT Password.
MQTT TLS	Enable MQTT TLS.
Interval(ms)	Enter Modbus TCP Polling Interval.
Timeout(ms)	Enter Modbus TCP Timeout.
CSV Config	Upload the file containing your CSV config here.
CA Certificate	Upload your CA Certificate here.
Local Certificate	Upload your Local Certificate here.
Local Private Key	Upload your Local Private Key here.

Table 1: Settings Example Items Description

### 3.1 Settings

---

Second part of MQTT settings is about MQTT Payload. MQTT Payload refers to the data transmitted within an MQTT message. It's the actual content of the message being sent from a publisher to a subscriber or between MQTT clients.

The payload can contain any type of data, such as sensor readings, status updates, commands, or any other information relevant to the application using MQTT. The payload is typically encoded in a specific format depending on the requirements of the application.

In our case the payload have pre-defined variables - **Topic, Name, Value, Time, IP, Port, ID, FC, Address** and **Data Length** with possibility to use another 10 custom fields.

MQTT Payload Settings		
Name	Enable	Field Name
Topic	Enable	topic
Name	Enable	name
Value	Enable	value
Time	Enable	time
IP	Enable	ip
Port	Enable	port
ID	Enable	id
FC	Enable	fc
Address	Enable	address
Data Length	Enable	data_length

Extend MQTT Payload Settings			
Name	Enable	Field Name	
Custom1 Field	Disable	custom1_field	CSV Config Field : Q.
Custom2 Field	Disable	custom2_field	CSV Config Field : R.
Custom3 Field	Disable	custom3_field	CSV Config Field : U.
Custom4 Field	Disable	custom4_field	CSV Config Field : V.
Custom5 Field	Disable	custom5_field	CSV Config Field : W.
Custom6 Field	Disable	custom6_field	CSV Config Field : X.
Custom7 Field	Disable	custom7_field	CSV Config Field : Y.
Custom8 Field	Disable	custom8_field	CSV Config Field : Z.
Custom9 Field	Disable	custom9_field	CSV Config Field : AA.
Custom10 Field	Disable	custom10_field	CSV Config Field : AB.

Apply
-------

Figure 3: Settings Part 2

## 3.2 CSV config file

In Modbus to MQTT, user configures the mapping between Modbus/TCP and MQTT through CSV file. In the csv file, the field separator (delimiter) is a comma.

Topic	Name	IP	Port	Device ID	Function Code	Address	Data length	Modbus Data type	Data Swap	Byte Swap
env1-DI	DI_01	192.168.1.15	502	1	2	1	1	1 Boolean	None	False
env1-DO	DO	192.168.1.15	502	1	1	1	1	1 Boolean	None	False
env1-Temp	Temperature	192.168.1.15	502	1	4	1	2	2 Float	None	False
env1-Mode	Mode	192.168.1.15	502	1	3	10	2	2 Unsigned Integer	None	False
env1-Mode-w	Mode	192.168.1.15	502	1	16	10	2	2 Unsigned Integer	None	False
.....										
env2-DI	DI_01	192.168.1.16	502	1	2	1	1	1 Boolean	None	False
env2-DO	DO	192.168.1.16	502	1	1	1	1	1 Boolean	None	False
env2-Temp	Temperature	192.168.1.16	502	1	4	1	2	2 Float	None	False
env2-Mode	Mode	192.168.1.16	502	1	3	10	2	2 Unsigned Integer	None	False
env2-Mode-w	Mode	192.168.1.15	502	1	16	10	2	2 Unsigned Integer	None	False
.....										
MQTT Data Type	Multiplier	Offset	Polling Interval (ms)	Send When Change	Custom Field	custom2 field	Send Group	Send Interval		
Boolean	1	0	10000	No	0	0	0	0	1	
Boolean	1	0	10000	No	0	0	0	0	1	
Float	1	0	10000	Yes	0	0	0	0	1	
Unsigned Integer	1	0	10000	No	0	0	0	0	1	
Unsigned Integer	1	0	10000	No	0	0	0	0	1	
.....										
Boolean	1	0	10000	No	0	0	0	0	1	
Boolean	1	0	10000	No	0	0	0	0	1	
Float	1	0	10000	Yes	0	0	0	0	1	
Unsigned Integer	1	0	10000	No	0	0	0	0	1	
Unsigned Integer	1	0	10000	No	0	0	0	0	1	

Figure 4: CSV file

Item	Description
Topic	MQTT topic
Name	The name to identify the mapping.
IP	The Modbus device IP address.
Port	The TCP port number of the remote Modbus slave device.
Device ID	The Modbus/TCP slave ID.
Function Code	Modbus Function Code (FC). In Modbus to MQTT, supported function codes are: 1, 2, 3, 4, 5, 6, 15, 16 <b>01:</b> Read coils; <b>02:</b> Read discrete inputs; <b>03:</b> Read holding registers; <b>04:</b> Read input register; <b>05:</b> Write single coil; <b>06:</b> Write single register; <b>15:</b> Write multiple coils; <b>16:</b> Write multiple registers.
Address	Designate the read from/write to starting address for the Modbus registry.
Data length	When FC=1, 2, 5 or 15, the unit is bit(s) When FC=3, 4, 6 or 16, the unit is word(s)
Modbus Data type	Modbus data type. Options: Boolean, Integer, Unsigned Integer, Float

Continued on the next page

Continued from previous page

Item	Description
Data Swap	The Data Swap field determines the order in which the particular bytes of the received/transmitted data are delivered. <b>None:</b> Do not swap; <b>Word:</b> 0x01, 0x02 becomes 0x02, 0x01; <b>Double Word:</b> 0x01, 0x02, 0x03, 0x04 becomes 0x04, 0x03, 0x02, 0x01. <b>Double Word - Frame:</b> 0x01, 0x02, 0x03, 0x04 becomes 0x04, 0x03, 0x02, 0x01. <b>Quad Word:</b> 0x01, 0x02, 0x03, 0x04, 0x05, 0x06, 0x07980 becomes 0x07980, 0x05, 0x06, 0x03, 0x04, 0x01, 0x02.
Byte Swap	Option: True, False When option is True: 0x01, 0x02 becomes 0x01, 0x02. 0x01, 0x02, 0x03, 0x04 becomes 0x01, 0x02, 0x03, 0x04.
MQTT Data type	MQTT data type. Options: Boolean, Integer, Unsigned Integer, Float, Long Integer, Unsigned
Multiplier	The value used to multiply the data value.
Offset	The value used to add/subtract the data value.
Polling Interval (ms)	Modbus Polling Interval, unit: milliseconds. The value range: 1 ~ 10000000
Send When Change	Select that the data is sent immediately when change happens on modbus slave. Options: Yes, No
Custom Field	Custom definition value
Custom2 Field	Custom definition value
Send Group	Set group number for MQTT multiple messages to one message. The value range is from 0 to 500. When the value is 0, this feature is disabled.
Send Interval	Send MQTT message interval for the group in seconds. The value range is from 1 to 10000 seconds.

Table 2: Configuration items description

The CSV file can be imported into Advantech router in router app Setting WEB page. After import CSV file and click “Save” button, the new mapping configuration will take effect immediately.

Figure 5: CVS file import

### CSV Example

Copy-pastable example from the section above:

```

env1-DI,DI_01,192.168.1.15,502,1,2,1,1,Boolean,None,FALSE,Boolean,1,0,10000,No,0,0,0,1
env1-D0,D0,192.168.1.15,502,1,1,1,1,Boolean,None,FALSE,Boolean,1,0,10000,No,0,0,0,1
env1-Temp,Temperature,192.168.1.15,502,1,4,1,2,Float,None,FALSE,Float,1,0,10000,Yes,0,0,0,1
env1-Mode,Mode,192.168.1.15,502,1,3,10,2,Unsigned Integer,None,FALSE,Unsigned Integer
    ,1,0,10000,No,0,0,0,1
env1-Mode-w,Mode,192.168.1.15,502,1,16,10,2,Unsigned Integer,None,FALSE,Unsigned Integer
    ,1,0,10000,No,0,0,0,1
env2-DI,DI_01,192.168.1.16,502,1,2,1,1,Boolean,None,FALSE,Boolean,1,0,10000,No,0,0,0,1
env2-D0,D0,192.168.1.16,502,1,1,1,1,Boolean,None,FALSE,Boolean,1,0,10000,No,0,0,0,1
env2-Temp,Temperature,192.168.1.16,502,1,4,1,2,Float,None,FALSE,Float,1,0,10000,Yes,0,0,0,1
env2-Mode,Mode,192.168.1.16,502,1,3,10,2,Unsigned Integer,None,FALSE,Unsigned Integer
    ,1,0,10000,No,0,0,0,1
env2-Mode-w,Mode,192.168.1.15,502,1,16,10,2,Unsigned Integer,None,FALSE,Unsigned Integer
    ,1,0,10000,No,0,0,0,1

```

# 4. Status

## 4.1 Log

Log messages from the Router App will be displayed in this section.

## 4.2 Mapping table

The Modbus/TCP to MQTT mapping will be shown in Mapping Table WEB page.

Status		Modbus to MQTT Settings																
		Mapping Table																
Configuration		Topic	Name	Modbus IP-Port	Modbus Slave ID	Modbus Function Code	Modbus Address	Modbus Data Length	Modbus Data Type	MQTT Data Type	Data Swap	Byte Swap	Multiplier	Offset	Polling Interval	Send When Change	Send Group	Send Interval
env1-DI	DI_01	192.168.1.15	1	2	1	1	1	1	Boolean	Boolean	None	False	1.000000	0.000000	10000	No	0	1
env1-DO	DO	192.168.1.15	1	1	1	1	1	1	Boolean	Boolean	None	False	1.000000	0.000000	10000	No	0	1
env1-Temp	Temperature	192.168.1.15	1	4	1	2	Float	Float	None	None	False	1.000000	0.000000	10000	Yes	0	1	
env1-Mode	Mode	192.168.1.15	1	3	10	2	Unsigned-Int	Unsigned-Int	None	None	False	1.000000	0.000000	10000	No	0	1	
env1-Mode-w	Mode	192.168.1.15	1	16	10	2	Unsigned-Int	Unsigned-Int	None	None	False	1.000000	0.000000	10000	No	0	1	
env2-DI	DI_01	192.168.1.16	1	2	1	1	1	1	Boolean	Boolean	None	False	1.000000	0.000000	10000	No	0	1
env2-DO	DO	192.168.1.16	1	1	1	1	1	1	Boolean	Boolean	None	False	1.000000	0.000000	10000	No	0	1
env2-Temp	Temperature	192.168.1.16	1	4	1	2	Float	Float	None	None	False	1.000000	0.000000	10000	Yes	0	1	
env2-Mode	Mode	192.168.1.16	1	3	10	2	Unsigned-Int	Unsigned-Int	None	None	False	1.000000	0.000000	10000	No	0	1	
env2-Mode-w	Mode	192.168.1.16	1	16	10	2	Unsigned-Int	Unsigned-Int	None	None	False	1.000000	0.000000	10000	No	0	1	
		0	0	0	0	0	Boolean	Boolean	None	None	False	0.000000	0.000000	0	No	0	0	
		0	0	0	0	0	Boolean	Boolean	None	None	False	0.000000	0.000000	0	No	0	0	
Custom Field Mapping Table																		
Name	Field 1	Field 2	Field 3	Field 4	Field 5	Field 6	Field 7	Field 8	Field 9	Field 10								
DI_01	0	0	ouE															
DO	0	0																
Temperature	0	0																
Mode	0	0																
Mode	0	0																
DI_01	0	0																
DO	0	0																
Temperature	0	0																
Mode	0	0																
Mode	0	0																

Figure 6: Mapping table

## 4.3 MQTT Data Format

When Modbus/TCP FC is 1, 2, 3 or 4, Modbus to MQTT will work as MQTT publisher to post Modbus/TCP data in JSON format to MQTT broker. When Modbus/TCP FC is 5, 6, 15 or 16, Modbus to MQTT will work as MQTT subscriber to ask subscription information, and forward the data to Modbus/TCP device.

Here are the example of MQTT data that is published from Modbus to MQTT.

```
{  
    "time" : "2020-06-09 15:25:06.667",  
    "topic" : "env1-DI"  
    "name" : "DI_01",  
    "value" : true,  
    "ip" : "192.168.1.15",  
    "port" : "502",  
    "id" : "1",  
    "fc" : "1",  
    "address" : "1",  
    "data length" : "1"  
}
```

Note that Modbus to MQTT verify just topic, name and value fields of the received subscription information.

```
{  
    "topic": "env1-Mode-w",  
    "name": "Mode",  
    "value": "1234"  
}
```

# 5. Related Documents

You can obtain product-related documents on *Engineering Portal* at [icr.advantech.com](http://icr.advantech.com) address.

To get your router's *Quick Start Guide*, *User Manual*, *Configuration Manual*, or *Firmware* go to the [Router Models](#) page, find the required model, and switch to the *Manuals* or *Firmware* tab, respectively.

The *Router Apps* installation packages and manuals are available on the [Router Apps](#) page.

For the *Development Documents*, go to the [DevZone](#) page.