

Hardware Manual

Industrial Cellular Router

ICR-3211



Advantech Czech s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic Document No. MAN-0041-EN, revision from 31st October, 2023.



Used symbols



Danger - Information regarding user safety or potential damage to the router.

- Attention Problems that can arise in specific situations.
- Information Useful tips or information of special interest.





Contents

1.	Proc	duct Overview	1					
	1.10	Product Introduction Product Usage Examples Hardware Overview Product Versions Order Codes Package Contents Product Dimensions Mounting Recommendations Wall Mounting DIN Rail Mounting Product Label	1 6 7 7 8 9 10 11					
2.	Haro	dware Functionality	14					
	2.1 2.2 2.3 2.4 2.5 2.6 2.7 2.8 2.9	SIM Card Slots Antenna Ethernet Interfaces Power Supply Low Power Mode Serial Interfaces and I/O Port LED Status Indication Power Backup Feature Reset Functions	14 15 15 16 17 18 20 21					
3.	First	t Use	25					
	3.1 3.2	Accessories Connection						
4.	Tech	nnical Parameters	26					
		Basic Parameters	27 28 29					
Αp	pend	dix A: Troubleshooting	31					
Αp	Appendix B: Customer Support 34							
Αp	pend	dix C: Regulatory & Safety Information	35					
Αp	Appendix D: Related Documents 36							

List of Figures

1	Access to the Internet from LAN	2
2	Backed up Access to the Internet	3
3	Using VPN Tunnel	4
4	Serial Gateway	5
5	Hardware Overview of the Router	6
6	Router Preview	7
7	Basic dimensions of the router box	9
8	Basic dimensions of the router box	9
9	Rotated Wall Mounting Clips	1
10	Removing from the DIN rail	2
11	Product Label	3
12	SIM Cards Insertion	4
13	Ethernet Connector Pinout	5
14	Power connector	6
15	Connection of power supply	6
16	Serial + I/O connector	8
17	Functional scheme of the binary interface	9
18	Resetting the Router	4

List of Tables

1	Hardware Overview of the Router
2	Router versions
3	Order Codes Overview
4	Contents of package
5	Ethernet Connector Pinout Description
6	Connection of power connector
7	Connection of RS485
8	Connection of I/O
9	Connection of RS232
10	Status indication
11	Basic parameters
12	Standards and Regulations
13	Type tests and environmental conditions
14	Technical parameters of cellular module
15	Other technical parameters

1. Product Overview

1.1 Product Introduction

ICR-3211 is an industrial cellular router intended for the market in Europe, Middle East and Africa (EMEA) area as well as for the North American market (NAM). The ICR-3211 router is designed for wireless communication in mobile networks that use traditional cellular technologies. The primary purpose of this router is its use in the **Category M1** (Cat M1) and **Narrowband Internet of Things** (NB-IoT cat. NB1) services on the cellular LTE network.

LTE Cat M1 is a new cellular technology specifically designed for the needs of applications targeting the Internet of Things (IoT) or machine-to-machine (M2M) communications. LTE Cat M1 is a low-power wide-area (**LPWA**) air interface that lets you connect IoT and M2M devices with medium data rate requirements (375 kbps upload and download speeds in half duplex mode).

The standard configuration includes two Ethernet 10/100 ports, serial line **RS232**, **RS485**, one **binary input** and one **binary output**. The device also has two readers for 3 V and 1.8 V **SIM cards**, which are located on the left panel of the router. The router can be provided only in a **metal casing**.

The ICR-3211 router is equipped with a **power backup feature**. It is a short-term power backup (maximum 15 seconds - depending on technology) which is used to complete the running operation or to send the required data immediately after failure of power supply.

Configuration of the router may be done via a password-protected **Web interface**. Web interface provides detailed statistics about the router's activities, signal strength, detailed system log etc. The router supports the creation of VPN tunnels using **IPSec**, **OpenVPN** and **L2TP** to ensure safe communication. **DHCP**, **NAT**, **NAT-T**, **DynDNS**, **NTP**, **VRRP**, control by SMS, backup primary connection and many other functions are supported.

The router provides diagnostic functions which include automatically monitoring the PPP connection, automatic restart in case of connection losses, Low Power Mode and a hardware watchdog that monitors the router status. The user may insert Linux scripts which are started on various actions. It is possible to create up to four different configurations for the same router. These configurations can be switched whenever necessary via Web interface, SMS or binary input status. The router can automatically upgrade its configuration and firmware from your central server. This allows for mass reconfiguration of numerous routers at the same time.

The router also supports additional software like **R-SeeNet** or **WebAccess/VPN** for permanent traffic monitoring of routers.



Examples of possible applications

- · mobile office
- fleet management
- · security system
- · telematic

- · telemetric
- · remote monitoring
- · vending and dispatcher machines

1.2 Product Usage Examples

Access to the Internet from LAN

 This example illustrates a typical case when the cellular router is used to access the Internet through the cellular network.

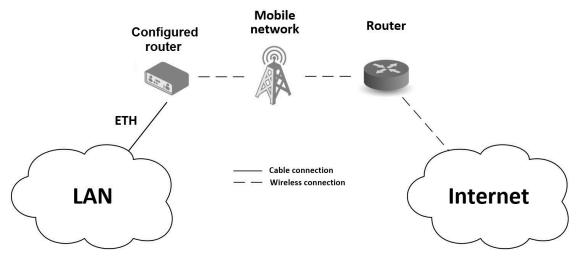


Figure 1: Access to the Internet from LAN

• Not supported by LAN routers without a cellular interface.

Backed up access to the Internet (from LAN)

- This example illustrates the function of backing up the access to the Internet for a cellular router.
- The access can be backed up by a PPPoE connection, Ethernet wired connection, or by WiFi (for models supporting WiFi).

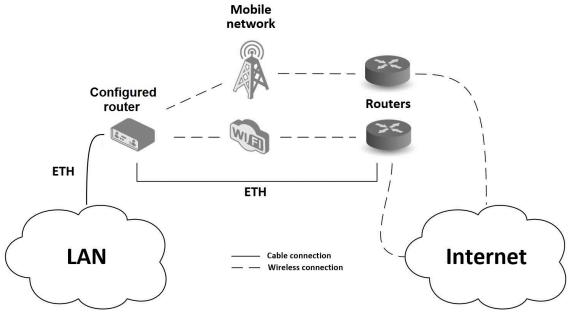


Figure 2: Backed up Access to the Internet

Secure networks interconnection or using VPN

• This example illustrates the secure VPN tunnel interconnection between the configured Advantech router and a router of a remote network behind the Internet. The cellular network is used to connect the configured router to the Internet.

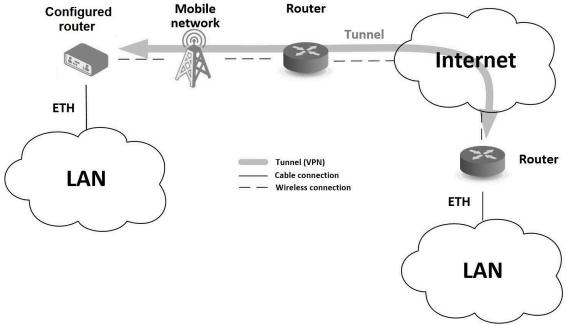


Figure 3: Using VPN Tunnel

Serial Gateway

- This example illustrates the situation when the configured Advantech router provides access to a PLC device connected by a serial interface to this router.
- The PLC device can be controlled from a remote local network running the SCADA system, for instance. This device is accessible on the entire Internet network. Supported only by a router equipped with a serial interface.

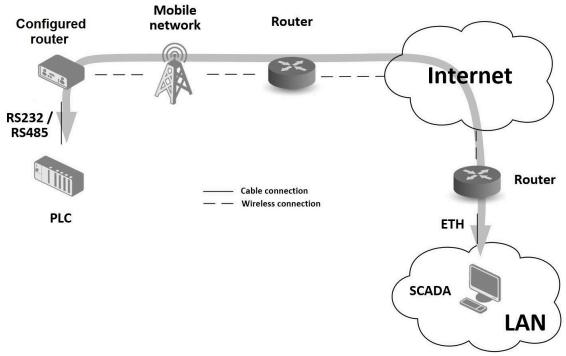


Figure 4: Serial Gateway

1. Product Overview 1.3 Hardware Overview

1.3 Hardware Overview

The router case preview is shown in Figure 5. A short description of hardware parts of the router is listed in Table 1, including the links to the chapters with a detailed description.

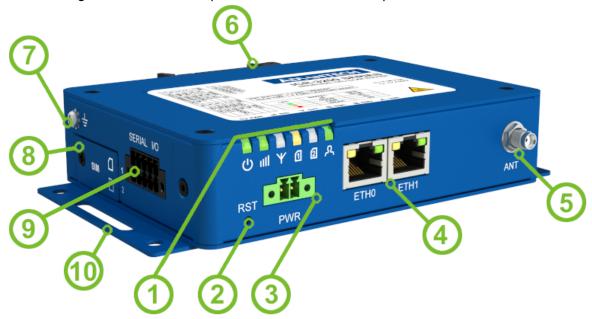


Figure 5: Hardware Overview of the Router

#	Item/Captio	Туре	Description	
1	LEDs	-	Status LED indication; see Chapter 2.7.	
2	RST	-	Button to reboot the router or to restore the default configuration; see Chapter 2.9.	
3	PWR	2-pin	Power supply 2-pin terminal socket; see Chapter 2.4.	
4	ETH0, ETH1	RJ45	100 MB Ethernet connection for the firts and second LAN; see Chapter 2.3.	
5	ANT	SMA	Connector for the main antenna of the cellular module; see Chapter 2.2 and Chapter 4.4 for cellular module parameters.	
6	DIN clip	-	DIN rail clip, included as standard accessories; see Chapter 1.10.	
7	Grounding screw	M3	Pay attention to proper grounding; see Chapter 2.4.	
8	SIM slots	Mini SIM	Two SIM card slots; see Chapter 2.1.	
9	SERIAL I/O	10-pin terminal	RS232, RS485, binary inputs, and binary outputs interfaces. See Chapter 2.6 for more information.	
10	Wall clips	-	Wall mounting clips, included as standard accessories; see Chapter 1.9.	

Table 1: Hardware Overview of the Router

1. Product Overview 1.4 Product Versions

1.4 Product Versions

ICR-3211 router is supplied in the following versions (see table below). All versions are available in a metal box.



Table 2: Router versions



Figure 6: Router Preview

1.5 Order Codes

Order codes overview is shown in the table below.

Product type	Product name	Order code	Features – interfaces
ICR-3200	ICR-3211	ICR-3211B	LTE module for NAM, 2x ETH, 1x BI, 1x BO, 1x RS232, 1x RS485, 2x SIM reader

Table 3: Order Codes Overview

1. Product Overview 1.6 Package Contents

1.6 Package Contents

The standard set of router includes items listed in the following table:

Item#	Description	Figure	Q'ty
1	ICR-3211 router		1 pcs
2	DIN holder (screwed on the router)	*	1 pcs
3	Wing for wall mounting (screwed on the router)	*	2 pcs
4	2-pin terminal block for power supply (deployed on the router)		1 pcs
5	10-pin terminal block for RS232, RS485 and I/O (deployed on the router)		1 pcs
6	Quick Start Guide Leaflet		1 pcs

Table 4: Contents of package

1. Product Overview 1.7 Product Dimensions

1.7 Product Dimensions

For the dimensions of the product in metal and plastic boxes see the figures below. Note that all sizes are measured in millimeters.

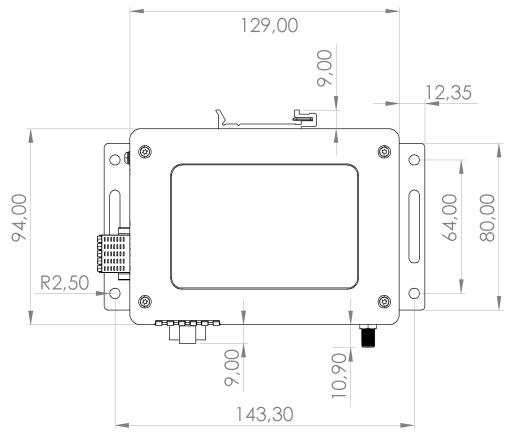


Figure 7: Basic dimensions of the router box

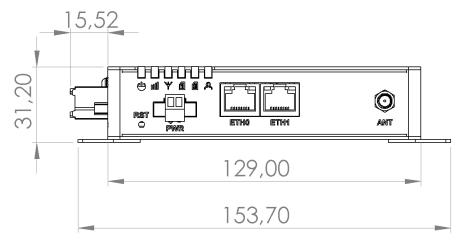


Figure 8: Basic dimensions of the router box

1.8 Mounting Recommendations

The router can be placed:

- · on a flat surface,
- on a wall (or another surface) using the side wings,
- on a DIN rail EN 60715 with the included metal DIN rail clip.

For most applications with a built-in router within a switchboard, it is possible to recognize two kinds of environments:

- A non-public, industry environment of low voltage with high interference,
- a public environment of low voltage and without high interference.

For both of these environments, it is possible to mount the router to a switchboard, after which there is no need to have examination immunity or issues in connection with EMC according to EN 61439-1:2011.



In compliance with the EN 61439-1:2011 specification, it is necessary to observe the following assembly instructions for a router attached to a switchboard:

- For whip antennas it is recommended to observe a minimum distance of 6 cm from cables and metal surfaces on every side in order to avoid interference. When using an external antenna separate from the switchboard it is necessary to fit a lightning conductor.
- When mounting a router on sheet-steel we recommend using a cable antenna.
- For all cables, we recommend to bind the bunch, and for this we recommend:
 - The length of the bunch (the combination of power supply and data cables) should be a maximum 1.5 m. If the length of data cables exceeds 1.5 m or if the cable is leading towards the switchboard, we recommend installing surge protectors.
 - Data cables must not have a reticular tension of \sim 230 V/50 Hz or \sim 120 V/60 Hz.
- Sufficient space must be left between each connector for the handling of cables,
- To ensure the correct functioning of the router we recommend the use of an earth-bonding distribution frame for the grounding of the power supply of the router, data cables and antenna within the switchboard.

1. Product Overview 1.9 Wall Mounting

1.9 Wall Mounting

1

The wall mounting clip is supplied with the router as standard accessories.

The router can be screwed to a wall (or another surface) using the wall mounting clips. Two wall mounting clips are assembled to the router during the production and need to be roteted as shown of Figure 9.

There are two wholes on the clip with a diameter of 5 millimeters. For detailed information about the mounting dimensions see Chapter 1.7.



When mounting the wall mounting clip, tighten the screws with max. torque of 0.4 Nm.

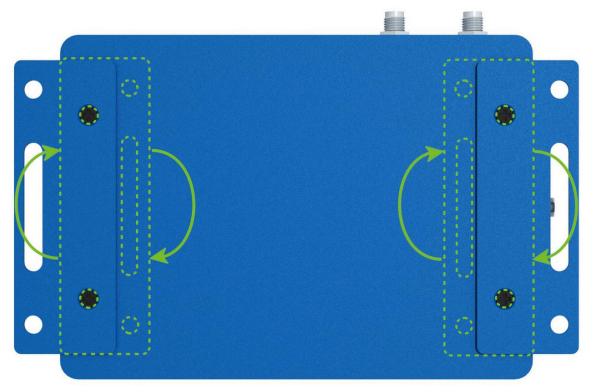


Figure 9: Rotated Wall Mounting Clips

1. Product Overview 1.10 DIN Rail Mounting

1.10 DIN Rail Mounting

The DIN rail clip is suitable for a DIN rail according to EN 60715 standards.



When mounting the DIN rail clip, tighten the screws with max. torque of 0.4 Nm.

To remove the router from the DIN rail it is necessary to lightly push down the router so that the bottom part of the DIN rail clip hitched to the DIN rail get out of this rail and then fold out the bottom part of the router away from the DIN rail.

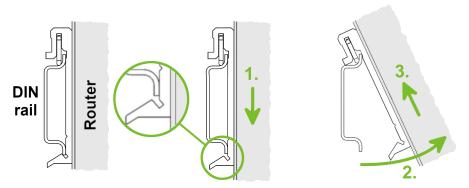


Figure 10: Removing from the DIN rail

1. Product Overview 1.11 Product Label

1.11 Product Label

The figure below shows an example of the product labels with all the information printed on them.





Contains: FCC ID XMR201707BG96 IC ID 10224A-201709BG96 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Figure 11: Product Label

2. Hardware Functionality

See Chapter 1.3 for an overview of the product's hardware. Table 1 provides a concise description of the hardware, along with links to chapters offering detailed explanations.

2.1 SIM Card Slots

Slots for two SIM cards are located on the router beneath a metal cover. If you plan to use this device for cellular network communication, insert an activated data-provisioned SIM card into the SIM card reader.

You have the option to install two SIM cards simultaneously for utilizing the switching feature. The SIM cards can have different Access Point Names (APNs) configured. The procedure for changing SIM cards is outlined below. If the SIM requires a PIN, input it in the router's web interface (*Administration -> Unlock SIM Card*).



Inserting the SIM card:

- Always disconnect the router from the power supply before handling the SIM card.
- Unscrew the two screws on the SIM card cover and remove the cover.
- To remove an inserted SIM card, use the flat end of a spudger or your fingernail to press the SIM card slightly into its slot until you hear a click. Upon hearing the click, release the card, and it will pop out of its slot.
- To insert a SIM card, push the card into the slot until it clicks into place.
- · Replace the cover and secure it with the two screws.

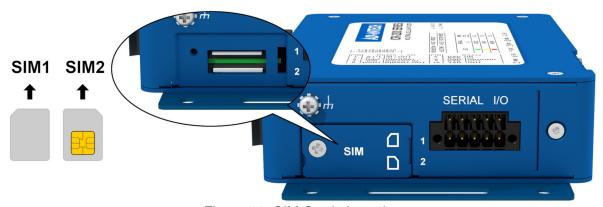


Figure 12: SIM Cards Insertion

For *Verizon Wireless* network, SMS messages will be transmitted successfully only if both end devices are equipped with an LTE Cat-M cellular module.

2.2 Antenna

Connect cellular antenna to the router to main (ANT) SMA female connector.



Only run the router with a cellular antenna connected to the main antenna connector, as the energy from the transmission is effectively reflected by the open end and can damage the equipment.



Recommended tightening moment for screwing the antenna to the SMA female connectors is 0.9 Nm.

2.3 Ethernet Interfaces

The panel socket of RJ45 is used for Ethernet interface. The pinout of the socket is shown in Figure 13 and described in Table 5.

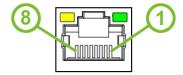


Figure 13: Ethernet Connector Pinout

Pin	Signal mark	Description
1	Tx+	Transmit Data+ (positive pole)
2	Tx-	Transmit Data- (negative pole)
3	Rx+	Receive Data+ (positive pole)
4	_	_
5	_	_
6	Rx-	Receive Data- (negative pole)
7	_	_
8	_	_

Table 5: Ethernet Connector Pinout Description



The isolation barrier of the Ethernet ports against the ground is 1500 V.

2.4 Power Supply

Terminal block 3.5 mm.

Pin number	Signal mark	Description
1	VCC(+)	Positive pole of DC supply voltage (+9 to +36 V DC)
2	GND(-)	Negative pole of DC supply voltage

Table 6: Connection of power connector



Figure 14: Power connector

Power supply for router is required between +9 V to +36 V DC supply. Protection against reversed polarity without signaling is built into the router.



If the router is grounded, using the grounding screw, there is no protection against the reversed polarity. The negative pole of the DC power supply must be at the same voltage reference as the grounding screw. If not, a voltage difference between these two points might damage the router, and only an authorized service center can fix it.

For correct operation it is necessary that the power source is able to supply a peak current of 1.2 A.



Unit has to be supplied by a power supply specified as a Limited Power Source (LPS) or CEC/NEC Class 2 source of supply.

Circuit example:



Figure 15: Connection of power supply



All metal parts, including the box, are connected together with the negative pole of power supply (common pole). To ground the router can be used the grounding screw located on the left panel.

2.5 Low Power Mode



In applications requiring low power consumption (such as solar power - not 7/24 mode) is strictly recommended to use LPM mode prior to powering down the entire router.

LPM (Low Power Mode) is a router mode where the router is in sleep mode with minimal power consumption; see Chapter 4.1 for the LPM consumption. The router can be woken up from this mode by a signal applied to the BIN0 input or after a predetermined period of time. Putting the router into LPM mode can be done using the 1pm command, see Commands and Scripts application note for more details.

2.6 Serial Interfaces and I/O Port

The RS232 and RS485 serial interfaces together with the I/O interface are physically connected to the 10-pin panel socket. All three interfaces are not isolated from the router. The pinout of this conector is described in the tables below.

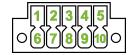


Figure 16: Serial + I/O connector

Pin	Signal mark	Description
1	B (+)	IN/OUT
2	A (-)	IN/OUT
3	GND	GROUND

Table 7: Connection of RS485



We recommend connecting a termination resistor outside the router. Without termination resistors, signal reflections off the unterminated end of the cable can cause data corruption. Termination resistors also reduce electrical noise sensitivity due to the lower impedance.

Pin	Signal mark	Description
4	BIN	BINARY IN
5	BOUT	BINARY OUT

Table 8: Connection of I/O

Pin	Signal mark	Description
6	RXD	IN
7	CTS	IN
8	GND	GROUND
9	RTS	OUT
10	TXD	OUT

Table 9: Connection of RS232

The I/O user interface is designed for binary input processing and binary output control. By default, the binary output is open, so it is not grounded. The maximum binary output load is 36 V at 500 mA. The constant current supplied by the binary input is 3 mA.

The functional scheme of connection for the binary input and binary output is drawn on the picture below.

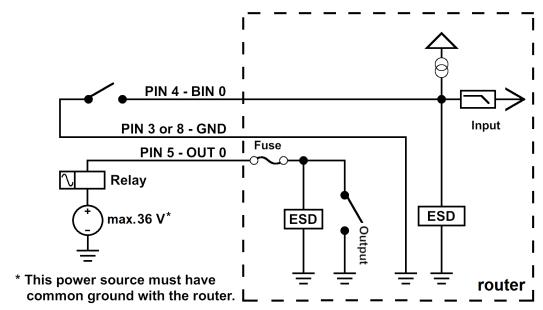


Figure 17: Functional scheme of the binary interface

2.7 LED Status Indication

There are six LED indicators on the front panel to provide router status information. Each ETH port has two additional LEDs that provide information about the port status.

	Caption	Color	State	Description
மு	PWR	Green Green Green	On Blinking Fast blinking	The router is booting up. The router booted up and is ready. The router firmware is being updated.
ıIII	SIG	Green Orange Red	On On On	Good cellular signal. Fair cellular signal. Poor cellular signal.
Y	DAT	Green	Blinking	Cellular communication is in progress.
1	SIM1	Green Green Orange Red Red	Blinking On On On Fast blinking	SIM1 is active and waiting for the data connection. The active SIM uses 4G technology. The active SIM uses 3G technology. The active SIM uses 2G technology. A SIM1 issue (missing card or PIN not entered).
2	SIM2	Green Green Orange Red Red	Blinking On On On Fast blinking	SIM2 is active and waiting for the data connection. The active SIM uses 4G technology. The active SIM uses 3G technology. The active SIM uses 2G technology. A SIM2 issue (missing card or PIN not entered).
ኢ	USR	Green	_	The function of this LED is user-defined.
	ETH0 ETH1	Green Green	On Off	Selected 100 Mbps bit rate. Selected 10 Mbps bit rate.
	ETH0 ETH1	Yellow Yellow Yellow	On Blinking Off	The network cable is connected. Data transmission. The network cable is not connected.

Table 10: Status indication

2.8 Power Backup Feature

This router is equipped with a power backup feature. It is a short-term power backup, which is used to complete the running operation or to send the required data immediately after the failure of the power supply. The maximal operation time for the power outage depends on actual cellular technology used and is up to 15 seconds.

The easiest way how to handle this state is to write a custom script and store it in *Configuration -> Scripts -> Startup*. Below you can see scripts for three different actions of sending an SMS, sending an e-mail and sending an SNMP trap.

Send an SMS

done

This script is going to send an SMS message for when the power supply will reach the defined threshold voltage.

Following items should be revised in the script:

- · destined phone number,
- · threshold for minimal power supply voltage,
- content of the SMS message, (\$VOLTAGE variable stands for the value of the actual power supply voltage).

```
# This script monitors the supply voltage and will send an SMS if below the defined threshold.
PHONE=+xxx123456...
                       # Set the destined phone number
THRESHOLD=8
                       # Set the threshold voltage level
SENT=0
while true; do
  VOLTAGE='status sys | awk '/Voltage/ { print $4 }'
  if [ $THRESHOLD -lt ${VOLTAGE%.*} ]; then
   SENT=0
  elif [ $SENT -eq 0 ]; then
   # Sending SMS message
   sms $PHONE "Power supply below defined threshold! Actual voltage is $VOLTAGE V."
   SENT=1
  fi
  sleep 1
```

Send an E-mail

This script is going to send an e-mail message for when the power supply will reach the defined threshold voltage. Firts, ensure the SNMP credentials are configured in the *Configuration -> Services -> SMTP* configuration page.

Following items should be revised in the script:

- · destined e-mail address.
- threshold for minimal power supply voltage,
- subject and body of the e-mail (\$VOLTAGE variable stands for the value of the actual power supply voltage).

```
# This script monitors the supply voltage and will send an e-mail if below the treshold.
EMAIL_TO="xxx@organization.com" # Set the destined e-mail address
THRESHOLD=8
                               # Set the threshold voltage level
SENT=0
while true; do
  VOLTAGE='status sys | awk '/Voltage/ { print $4 }'
 if [ $THRESHOLD -lt ${VOLTAGE%.*} ]; then
   SENT=0
  elif [ $SENT -eq 0 ]; then
  # Sending the e-mail with subject (-s) and body (-m).
  email -t $EMAIL_TO -s "Power supply outage..." -m "Actual voltage is $VOLTAGE V."
   SENT=1
 fi
  sleep 1
done
```

Send an SNMP Trap

This script is going to send an SNMP trap for when the power supply will reach the defined threshold voltage.

Following items should be revised in the script:

- SNMP destinated IP address,
- · OID of the SNMP trap,
- threshold for minimal power supply voltage.

```
# This script monitors the supply voltage and will send an SNMP trap if below the treshold.
SNMP_IP=192.168.1.1 # Set SNMP destinated IP address
OID="1.2.3.4.5.6.7.8" # Set the OID
THRESHOLD=8
                    # Set the threshold voltage level
SENT=0
while true; do
 VOLTAGE='status sys | awk '/Voltage/ { print $4 }''
 if [ $THRESHOLD -lt ${VOLTAGE%.*} ]; then
   SENT=0
 elif [ $SENT -eq 0 ]; then
  # Sending the SNMP trap
  snmptrap -c public $SNMP_IP $OID s $VOLTAGE
   SENT=1
 fi
 sleep 1
done
```

2.9 Reset Functions



Before initiating a factory reset on the router, consider creating a backup of its configuration.

The *RST* button serves three different purposes:

- Reset: Hold the RST button for less than 4 seconds; the router will reboot, applying its customized
 configuration. You can also trigger the router reset by selecting the Reboot menu option in the router
 web GUI.
- Factory Reset: To restore the router to its default factory configuration, press and hold the *RST* button for more than 4 seconds. The *PWR* LED will turn off and then back on. It's recommended to hold the *RST* button for an additional 1 second after the PWR LED comes on.
- Emergency Factory Reset: If the router fails to boot due to incorrect configuration, power off the router by disconnecting its power supply. Then, while holding the *RST* button, power on the router and continue holding the *RST* button for at least 10 seconds. This action will reset the router's configuration to the default settings.
- Use a narrow screwdriver or any small tool to press the RST button.

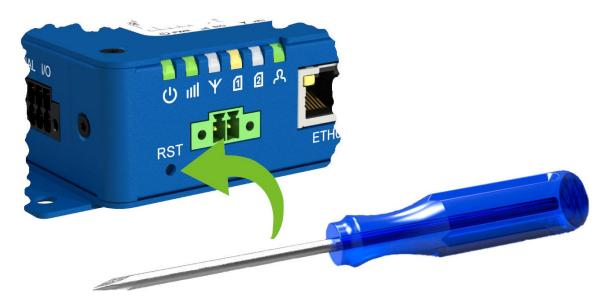


Figure 18: Resetting the Router

3. First Use

3.1 Accessories Connection

Before putting the router into operation, make sure to connect all the components required for running your applications. Refer to Chapter 1.3 for an overview of the hardware. Also, remember to insert a SIM card for the cellular connection as explained in Chapter 2.1.



Ensure you do not operate the router without an antenna connected to the main antenna connector. Transmitting energy is effectively reflected by the open end, which could potentially damage the equipment.

3.2 Router Configuration

You can perform the initial configuration of the router using a web browser on your PC. This interface allows for router monitoring, configuration, and administration.

Begin by connecting the power supply to the router (refer to Chapter 2.4). The router will initiate its boot process. By default, the router will automatically establish a connection to the default Access Point Name (APN) of the inserted SIM card. Ensure your PC is configured to obtain IP settings automatically from the network. Connect your PC's network card to the default LAN interface of the router, Ethernet port ETH0. The DHCP server will assign an IP address to your PC.

To access the router's web interface, enter the following address in your web browser: https://192.168.

1.1. Please note that using the HTTPS protocol for secure communication over the network is mandatory. There is just the root user account created on the router by default. Check the **product label** on the router for the **default password**¹ Access the web interface by logging in with the root user and the corresponding password. Successful login grants access to the router's web interface. Consult the router **Configuration Manual** [1] for detailed descriptions and examples of router configuration.



After logging on to the device for the first time, we strongly recommend changing the default password due to security reasons.



For security reasons, we recommend regularly updating the router's firmware to the latest version. Downgrading the firmware to an older version than the production version or uploading firmware intended for a different device may cause the device's malfunction.



All routers have the WebAccess/DMP client pre-installed by default. The activated client periodically uploads router identifiers and configuration to the WebAccess/DMP server. See the configuration manual [1], chapter Basic Information -> WebAccess/DMP Configuration, for more information.

¹ If the router's label lacks a unique password, use the password root.

4. Technical Parameters

4.1 Basic Parameters

Router parameters			
Temperature range	Operating Storage	-40 °C to +75 °C (-40 °F to +167 °F) -40 °C to +85 °C (-40 °F to +185 °F)	
Humidity	Operating Storage	0 to 95 % relative humidity non condensing 0 to 95 % relative humidity non condensing	
Altitude	Operating	2000 m/70 kPa	
Degree of protection		IP30	
Supply voltage		9 to 36 V DC	
Battery for RTC		CR1225	
Consumption @ 9 V	Idle Average Peak LPM mode	2.3 W 3.8 W 5.4 W 100 mW	
Dimensions of device		31,2 \times 94 \times 129 mm (1.23" \times 3.7" \times 5.08")	
DIN rail clip dimensions		DIN 35 mm, EN 60715	
Weight	Metal box	480 g (1.05 lbs)	
Antenna connectors		1 $ imes$ SMA for LTE – 50 Ω	
User interface	2× ETH SERIAL I/O	Ethernet RJ-45 (10/100 Mbit/s) 10-pin panel socket Terminal Block (for RS232, RS485 and I/O)	

Table 11: Basic parameters

4.2 Standards and Regulations

The router complies with the following standards and regulations:

Parameter	Description
Radio	PTCRB, EN 301 511, EN 301 908-1, EN 301 908-13, EN 303 413
EMC	EN 301 489-1, EN 301 489-19, EN 301 489-52, EN 61000-6-2, EN 61000-6-4, FCC 15.107 Class B, FCC 15.109 Class B, IC
Safety	IEC 62368-1:2014
Transportation	EN 45545-2
Railway	EN 50155 (A1, OT4, ST1, H1, Cat 1 Class B, S3, C2, L4, PD1, K2, PC2)
Carrier approvals	Verizon, AT&T
National	FCC, IC, CE, UKCA compliant
Environmental	REACH, RoHS3 and WEEE compliant

Table 12: Standards and Regulations

4.3 Type Tests and Environmental Conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact Enclosure air	\pm 6 kV (crit. A) \pm 8 kV (crit. A)
RF field AM modulated	EN 61000-4-3	Enclosure	20 V/m (crit. A) (80 – 10000 MHz) 10 V/m (crit. A) (1 – 6 GHz)
Fast transient	EN 61000-4-4	Signal ports Power ports Ethernet ports	± 1 kV (crit. A) ± 2 kV (crit. A) ± 1 kV (crit. A)
Surge	EN 61000-4-5	Ethernet ports Power ports	\pm 1 kV (crit. A), shielded cab. \pm 2 kV (crit. A)
RF conducted	EN 61000-4-6	All ports	10 V/m (crit. A) (0,15 – 80 MHz)
Radiated emission	EN 55032	Enclosure	Class B
Conducted emission	EN 55032	DC power ports Ethernet ports	Class B Class B
Dry heat	EN 60068-2-2 MIL-STD-810G SAE J1455	+75 °C *, 40 % rel. humidity	
Cold	EN 60068-2-1 MIL-STD-810G SAE J1455	-40 °C *	
Damp heat	EN 60068-2-78 MIL-STD-810G SAE J1455	95 % rel. humidity (+40 °C)	
Vibration	EN 60068-2-64 ed. 2 MIL-STD-810G SAE J1455	Vibration spectrum A.3 (rolling stock)	Category 1 (3 axis, 8 hours per axis)
Shock	EN 60068-2-27 ed. 2 MIL-STD-810G SAE J1455	half-sine, 50 g peak, 1	1 ms

Table 13: Type tests and environmental conditions

4.4 Parameters of Cellular Module

Technical parameters of cellular module				
LTE parameters	LTE: Cat M1/NB-IoT (cat. NB1) FDD frequencies: B12, B13, B28 (700 MHz), B20 (800 MHz), B5, B18, B19, B26 (850 MHz), B8 (900 MHz), B4 (1700 MHz), B3 (1800 MHz), B2 (1900 MHz), B1 (2100 MHz) TDD frequencies: B39 (1900 MHz) LTE bit rates: 375 Kbps (DL) / 375 Kbps (UL)			
EDGE parameters	Supported frequencies: 850 MHz, 900 MHz, 1800 MHz, 1900 MHz EDGE bit rates: 296 Kbps (DL) / 236.8 Kbps (UL)			
GPRS parameters	Supported frequencies: 850 MHz, 900 MHz, 1800 MHz, 1900 MHz GPRS bit rates: 107 Kbps (DL) / 85.6 Kbps (UL)			

Table 14: Technical parameters of cellular module

Antenna Requirements

- VSWR: <2:1 (Antenna input impedance response as function of frequency. This shows the antenna resonances and its bandwidth).
- SMA: 50 Ω

4.5 Other Technical Parameters

Parameter	Description
CPU	Cortex A8, 1 GHz 2 DMIPS per MHz
Flash memory	 Available memory space 1862 MB 2x 256 MB – FW 512 MB – User data storage 838 MB – Space for Router Apps
RAM	512 MB

Table 15: Other technical parameters

Appendix A: Troubleshooting

If you cannot connect to the router from your PC, your network card may be configured in such a way that it is not possible to connect to the router. Take one or more of the following steps in order to solve the problem:

- Make sure your PC's network card is configured to obtain the IP address form the DHCP server (by default the DHCP server is running in the router).
- · Connect the router to the PC via Switch.
- Connect the router to the PC, start the router first and then start the PC after the router's initialization.

Ethernet connection fails or is not establishing.

• It is possible to turn auto negotiation off and set a rate and duplex manually on the Ethernet interface of the router. Available on "LAN Configuration" page in the router.

Mobile WAN connection fails.

- Check the signal power ("Mobile WAN status" page). If the signal power is weak, you will have to use a better antenna. If the neighbouring cells have a similar signal strength, you will need to use a directional antenna. For proper operation, the signal levels have to be good.
- Try to enable automatic ping from the router, which will check the connection when there are no data running and in the case of a failed ping, restart the connection. This can be done on the "Mobile WAN Configuration" page in the router in the "Check connection" section. "Enable + bind" option is to ensure the ping goes always through Mobile WAN network interface.

Mobile WAN connection cannot be established.

- Check the "Mobile WAN Configuration" APN, name, password and IP address (all can be blank).
- Try to enter the SIM card PIN verify that the SIM card has the PIN code entered. Available on "Unlock SIM Card" page in the "Administration" section.
- In a private APN it is not recommended to get the DNS settings from operator (on "Mobile WAN" page)
- Go to "System Log" page in "Status" section and observe where the error occurs.

I cannot connect from the Internet to the device behind the router. I have NAT enabled.

• The device's gateway has to be configured so it points to the router.

I can't access my Web server placed behind the router over NAT.

• The remote HTTP access to the router has to be disabled on "NAT Configuration" page in the router. Also enable "Send all remaining incoming packets to default server" feature and fill in the IP address of your Web server. On the Web server, the default gateway has to be the IP address of the router.

DynDNS doesn't work.

· With private APN this will not work.

- If the same IP address is recorded in your canonic name as a dynamically assigned address, it means that the operator is using NAT or a firewall.
- You can verify NAT using ping to your server with static address and then compare with router's IP address.
- You can verify a Firewall by accessing remotely to the router's Web interface.
- The operator may not provide the address of DNS server and without DNS server's address it is impossible to connect to the dyndns.org server. The following messages will be shown in the System Log:
 - DynDNS daemon started
 - Error resolving hostname: no such file or directory
 - Connect to DynDNS server failed

L2TP or IPSec isn't establishing.

Check the "System Log" page for error messages.

IPSec tunnel establishes but the communication does not run.

• Probably there are bad routing rules defined in the connected devices, or the default gateway.

I switched the router to offline mode by SMS message, but the router is in online mode after reboot.

• SMS messages do not change the router configuration. They remain in effect only until the router is rebooted.

Serial communication is not working.

• Verify that the router model supports serial communications. Also verify the serial communication settings. To do so, open the router's configuration menu via the web browser, select the appropriate "Expansion Port" from "Configuration" part of the menu and verify the settings.

Is the router Cisco compatible? Can I use the Cisco configuration?

• No, the Firmware in the router (Conel OS) is based on Linux with BusyBox. Thus the Cisco configuration cannot be used. But network connections are defined by standards so connecting the router to the Cisco or other networking devices is possible and will be compatible.

FTP or SFTP does not work

• FTP will work on v2 routers only. You can use SFTP on all routers to transfer files to/from the router. If having troubles with FTP on v2 routers, make sure you have FTP enabled: "Configuration" section, "Services", "FTP". Then you can connect with any client on port 21 with name and password same as for the Web interface. If having troubles with SFTP, make sure you have SSH enabled: "Configuration" section, "Services", "SSH". Then you can connect with any client on port 22 with name and password same as for the Web interface.

Mow can I connect to the router's command line? (SSH, Telnet)

• You can use SSH on all routers or Telnet on v2 routers only. SSH is enabled by default, but you can verify in Web interface in "Configuration" section, "Services", "SSH". Then connect with any SSH client on port 22 of the router. User and password is the same as for the Web interface. Telnet on v2 routers can be enabled here: "Configuration" section, "Services", "Telnet".

Appendix B: Customer Support

Customer Support for Europe

Advantech Czech s.r.o.

Sokolska 71 562 04, Usti nad Orlici Czech Republic

Phone: +353 91 792444 Fax: +353 91 792445

E-mail: iiotcustomerservice@advantech.eu

Web: www.advantech.com

Customer Support for NAM

Advantech B+B SmartWorx

707 Dayton Road Ottawa, IL 61350 USA

Phone: +1-800-346-3119 (Monday – Friday, 7 a.m. to 5:30 p.m. CST)

Fax: +1-815-433-5109

E-mail: support@advantech-bb.com Web: www.advantech-bb.com

Customer Support for Asia

Phone: +886-2-2792-7818 #1299 (Monday – Friday, 9 a.m. to 5:30 p.m. UTC+8)

Fax: +886-2-2794-7327

E-mail: icg.support@advantech.com.tw

Web: www.advantech.com

Appendix C: Regulatory & Safety Information

Safety Notices



Please, observe the following instructions:

- The router must adhere to all relevant international and national laws, including any specific restrictions governing its use in designated applications and environments.
- To prevent potential injury and appliance damage, ensure compliance with regulations by using only authorized accessories. Unauthorized modifications or use of unapproved accessories could damage the router, violate regulations, and void the warranty.
- · Do not attempt to open the router.
- Before handling the SIM card, turn off the router and disconnect it from the power supply.
- · Caution! This equipment is not suitable for use in areas with children. Small children could swallow the SIM card.
 - Ensure the power supply does not exceed 48 V DC maximum.
 - · Avoid exposing the router to extreme ambient conditions. Safeguard it against dust, moisture, and high temperatures.
 - Only deploy routers with appropriate certification and labeling in environments containing flammable or explosive materials, such as gas stations, chemical plants, or areas involving explosives. Users must observe restrictions pertaining to radio device usage in such settings.
 - When traveling by plane, switch off the router. Using it onboard could jeopardize flight operations, disrupt mobile networks, and potentially violate regulations. Non-compliance may result in telephone service suspension, cancellation, or legal repercussions.
 - Exercise heightened caution when operating the router near personal medical devices like cardiac pacemakers or hearing aids.
 - The router may cause interference when operated in close proximity to TV sets, radio receivers, or personal computers.
 - It's advisable to create a suitable backup of all critical settings stored in the device's memory.


Product Disposal Instructions

The WEEE (Waste Electrical and Electronic Equipment: 2012/19/EU) directive was introduced to ensure that electrical/electronic products are recycled using the best available recovery techniques to minimize the environmental impact. This product contains high quality materials and components which can be recycled. At the end of it's life this pro- duct MUST NOT be mixed with other commercial waste for disposal. The device contains a battery. Remove the battery from the device before disposal. The battery in the device needs to be disposed of apart accordingly. Check the terms and conditions of your supplier for disposal information.



Appendix D: Related Documents

[1] Configuration Manual for ICR-3200 Platform

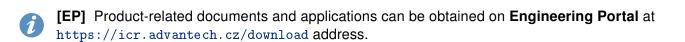



We, Advantech Czech s.r.o., declare that the radio equipment narrated in this user's manual complies with Directive 2014/53/EU.



We, Advantech Czech s.r.o., declare that the radio equipment narrated in this user's manual complies with Radio Equipment Regulations 2017 (S.I. 2017 No. 1206).

The full text of the EU Declaration of Conformity is available at the following internet address: icr.advantech.cz/eudoc