

Hardware Manual

LAN Industrial Router **ICR-4401**



© 2026 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system, without prior written consent. Information in this manual is subject to change without notice and does not represent a commitment by Advantech.

Advantech Czech s.r.o. shall not be liable for any incidental or consequential damages arising from the use, performance, or furnishing of this manual.

All brand names used in this manual are registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not imply endorsement by the trademark holder.

Used symbols

Important



Important — Indicates a risk to personal safety or potential damage to the router. Follow these instructions precisely to prevent injury or equipment damage.

Warning



Warning — Highlights conditions that may cause malfunction, loss of data, or unexpected behavior in specific situations. Read carefully before proceeding.

Info



Info — Provides helpful tips, context, or references that improve understanding but are not strictly required to complete the task.

Code Example



Code Example – Copy-pasteable configuration snippets or CLI commands.

Contents

1. Product Overview	1
1.1 Product Introduction	1
1.2 Hardware Overview	2
1.3 Order Codes	4
1.4 Product Revisions	4
1.5 Package Contents	5
1.6 Product Dimensions	6
1.7 Mounting Recommendations	8
1.8 Wall-Mounting	9
1.9 DIN Rail Mounting	10
1.10 Product Label	11
1.11 First Use	12
2. Hardware Functionality	13
2.1 Antennas Interfaces	13
2.2 Ethernet Interfaces	14
2.3 Power over Ethernet (PoE) PSE	15
2.4 SFP Cage	17
2.5 Power Supply	18
2.6 Low Power Mode	19
2.7 I/O Port Interfaces	20
2.8 Serial Interfaces	21
2.9 USB Port	22
2.10 microSD Card Reader	23
2.11 LED Status Indication	24
2.12 Reset Functions	25
3. Technical Parameters	26
3.1 Basic Technical Parameters	26
3.2 Standards and Regulations	27
3.3 Type Testing and Environmental Conditions	28
3.4 Parameters of Wi-Fi	29
3.5 Parameters of I/O Ports	30
3.6 Parameters of Serial Interfaces	30
3.7 Parameters of PoE	30
3.8 System Configuration	31
Appendix A: Troubleshooting	32
Appendix B: Customer Support	34
Appendix C: Regulatory & Safety Information	35
Appendix D: Related Documents	37

List of Figures

1	Router hardware overview – front view	2
2	Router hardware overview – rear view	3
3	Router dimensions – front, top and right view with wall-mounting holder	6
4	Router dimensions – front, top and right view with DIN rail clip	7
5	Rotated wall-mounting clips	9
6	Default position of the DIN rail clips	10
7	Removing the router from the DIN rail	10
8	Product label	11
9	ETH0 ports layout	14
10	Ethernet connector pinout	14
11	PoE PSE funcional scheme	15
12	SFP module installation	17
13	Power connector pinout	18
14	Grounding screw position	18
15	I/O connector pinout	20
16	Functional block diagram of the digital interface	20
17	Serial connector pinout	21
18	USB connector pinout	22
19	microSD card insertion	23
20	Resetting the router	25

List of Tables

1	Router hardware overview – front view	2
2	Router hardware overview – rear view	3
3	Order code overview	4
4	HW revision history	4
5	Package contents	5
6	Ethernet connector pinout	14
7	PoE PSE parameters	16
8	Tested SFP modules	17
9	Power connector pinout	18
10	I/O connector pinout	20
11	RS232 connector pinout	21
12	Connection of CAN bus	21
13	RS485 connector pinout	21
14	USB connector pinout	22
15	microSD card technical specifications	23
16	LED status indication	24
17	Basic technical parameters	26
18	Standards and regulations	27
19	Type testing and environmental conditions	28
20	Technical parameters of Wi-Fi	29
21	Technical parameters of digital input	30
22	Technical parameters of serial interfaces	30
23	System configuration	31

1. Product Overview

1.1 Product Introduction

The ICR-4401 stands as a **LAN Router** and a powerful edge computing gateway targeted at the global market. It is optimally designed for high-demand IoT applications across various sectors, such as industrial routers and gateways, digital signage, and industrial PCs and tablets.

Housed within a robust metal enclosure, the router comes with five **1Gb Ethernet ports** and an **SFP cage**. It includes interfaces for **RS232**, **RS485**, and **CAN bus**, in addition to two **digital inputs** and two **digital outputs**. A **microSD card** slot is accessible under the cover. Wi-Fi-equipped models provide **Wi-Fi** capability with **3x3 MIMO** antennas.

The router features a **Low Power Mode** and a **hardware watchdog** for automated status monitoring and system restarts, supplemented by additional diagnostic functionalities to bolster overall reliability.

Router configuration is accessible through a **secure web interface**, offering detailed insights into the entire configuration, statuses, signal strength, and logs.

Basic features include **two-factor authentication**, **IPv6 Dual Stack**, **DHCP**, **NAT**, **NAT-T**, **DynDNS**, **DNS proxy**, **VLAN**, **QoS**, **NTP**, **VRRP**, **port forwarding**, and **connection backup**, among others. The router supports various VPN protocols, including **IPSec**, **OpenVPN**, **GRE**, **L2TP**, and **PPTP**, ensuring secure communication.

The router allows for the insertion of **Linux scripts** for automated tasks. It supports the definition of up to **four distinct profiles**, switchable via the web interface, SMS, or digital input.

Router Apps enhance router functionality through custom software programs. For Advantech routers, a diverse array of Router Apps is offered, encompassing categories such as connectivity, routing, services, among others, freely accessible on the Advantech [Router Apps](#) webpage. Additionally, directly from the router web interface, you can use an **Advantech public server** for the Router App or router firmware installation/update.

This model is fully compatible with [WebAccess/DMP](#), Advantech's powerful, flexible, and secure remote device management platform. WebAccess/DMP enables comprehensive remote management, monitoring, and troubleshooting of network devices without the need for on-site access. The platform supports features such as VPN management, digital twin functionality, customizable dashboards, multi-tenancy, and strict security controls including PKI, two-factor authentication, auditing, permission management, and alerts.

1.2 Hardware Overview

In this chapter, all components of the router case are described, including links to chapters that provide more details.

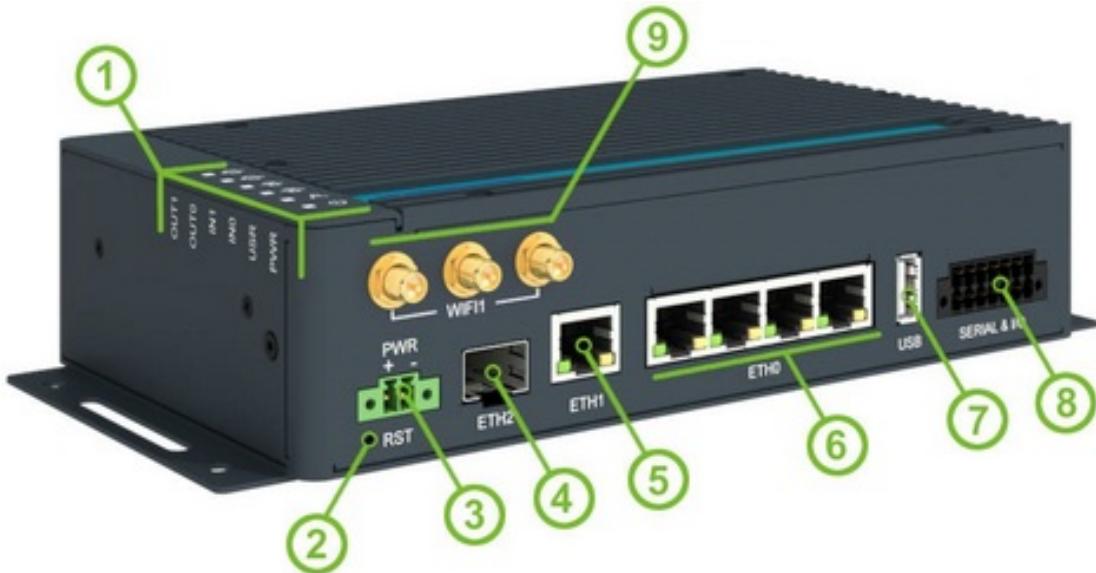


Figure 1: Router hardware overview – front view

#	Item	Type	Description
1	LEDs	—	Status LED indication; see Chapter 2.11.
2	RST	—	Button to reboot the router or to restore the default configuration; see Chapter 2.12.
3	PWR	2-p term.	Power supply socket; see Chapter 2.5.
4	ETH2	SFP cage	SFP cage socket see Chapter 2.4.
5	ETH1	RJ45	1 Gb Ethernet for the second LAN; see Chapter 2.2.
6	ETH0	RJ45	1 Gb Ethernet switched connection (with four ports) for the first LAN; see Chapter 2.2.
7	USB	USB-A	USB 2.0 host port; see Chapter 2.9.
8	SERIAL & I/O	14-pin terminal	RS232, RS485, CAN bus, digital input, and digital output interfaces. See Chapter 2.7 for more information, Chapter 3.5 for I/O parameters, and Chapter 3.6 for serial interface parameters.
9	WIFI1	RP-SMA female	Connectors for the Wi-Fi antennas. See Chapter 2.1 for more information and Chapter 3.4 for Wi-Fi parameters.

Table 1: Router hardware overview – front view



Figure 2: Router hardware overview – rear view

#	Item	Type	Description
10	Grounding screw	M3	Pay attention to proper grounding; see Chapter 2.5 .
11	microSD slot	microSD	microSD card slot; see Chapter 2.10 .
12	Wall clips	—	Wall mounting clips, included as standard accessories; see Chapter 1.8 .

Table 2: Router hardware overview – rear view

1.3 Order Codes

The table below provides an overview of the order codes.

Order code	Configuration
ICR-4401	Gb ETH SWITCH SFP cage, USB, microSD card slot, RS232, RS485, CAN bus, two digital inputs, two digital outputs
ICR-4401S	Gb ETH SWITCH SFP cage, PoE PSE , USB, microSD card slot, RS232, RS485, CAN bus, two digital inputs, two digital outputs
ICR-4401W	Gb ETH SWITCH SFP cage, dual-band Wi-Fi , USB, microSD card slot, RS232, RS485, CAN bus, two digital inputs, two digital outputs
ICR-4401WS	Gb ETH SWITCH SFP cage, PoE PSE , dual-band Wi-Fi , USB, microSD card slot, RS232, RS485, CAN bus, two digital inputs, two digital outputs
ICR-4401W1 ¹	Gb ETH SWITCH SFP cage, dual-band Wi-Fi , USB, microSD card slot, RS232, RS485, CAN bus, two digital inputs, two digital outputs
ICR-4401W1S ¹	Gb ETH SWITCH SFP cage, PoE PSE , dual-band Wi-Fi , USB, microSD card slot, RS232, RS485, CAN bus, two digital inputs, two digital outputs

Table 3: Order code overview

1.4 Product Revisions

For the product revision history of the entire product platform, refer to the table below. Please note that some revisions may not be available for certain order codes. The revision number is printed on both the packaging and product labels.

The router GUI can also display the product revision under *Status* → *General* → *System Information* → *Product Revision*. Please note that the default revision (Rev. 1.0) may not be available here.

Rev.#	Description
1.0	Initial version (revision number not printed on the labels).
2.0	New design of the mainboard and PoE board; see PCN-2023-03 for details.

Table 4: HW revision history

¹This product has no E8 certification and has a limited operating temperature range of -40 °C to +60 °C.

1.5 Package Contents

The standard set of router includes items listed in the following table:

Item#	Description	Figure	Q'ty
1	Router		1 pcs
2	Wall clips for wall-mounting (screwed on the router)		2 pcs
3	2-pin terminal block for power supply (deployed on the router)		1 pcs
4	14-pin terminal block for RS232, RS485, CAN BUS, and I/O (deployed on the router)		1 pcs
5	Printed <i>Quick Start Guide Leaflet</i>		1 pcs

Table 5: Package contents

1.6 Product Dimensions

For the dimensions of the router see the figures below. Note that all sizes are measured in millimeters.

Variant with Wall-Mounting Clip

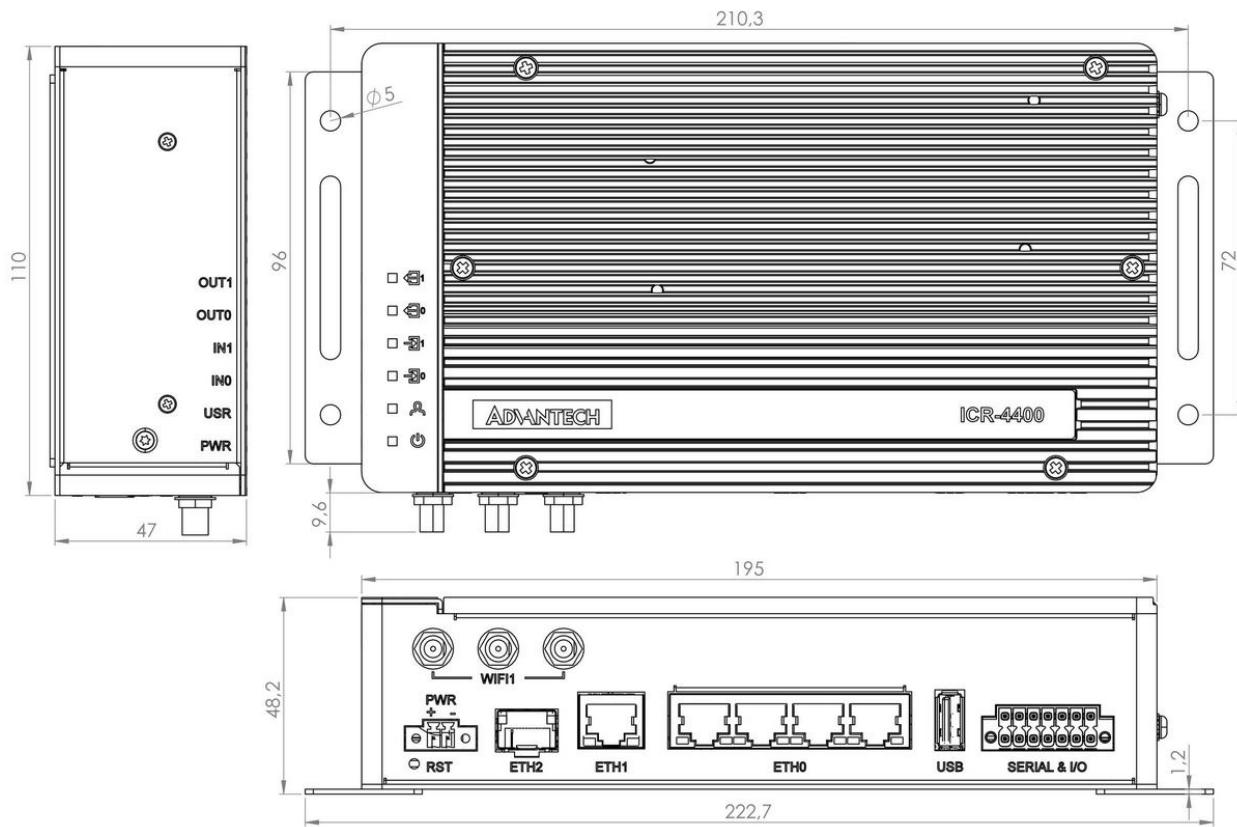


Figure 3: Router dimensions – front, top and right view with wall-mounting holder

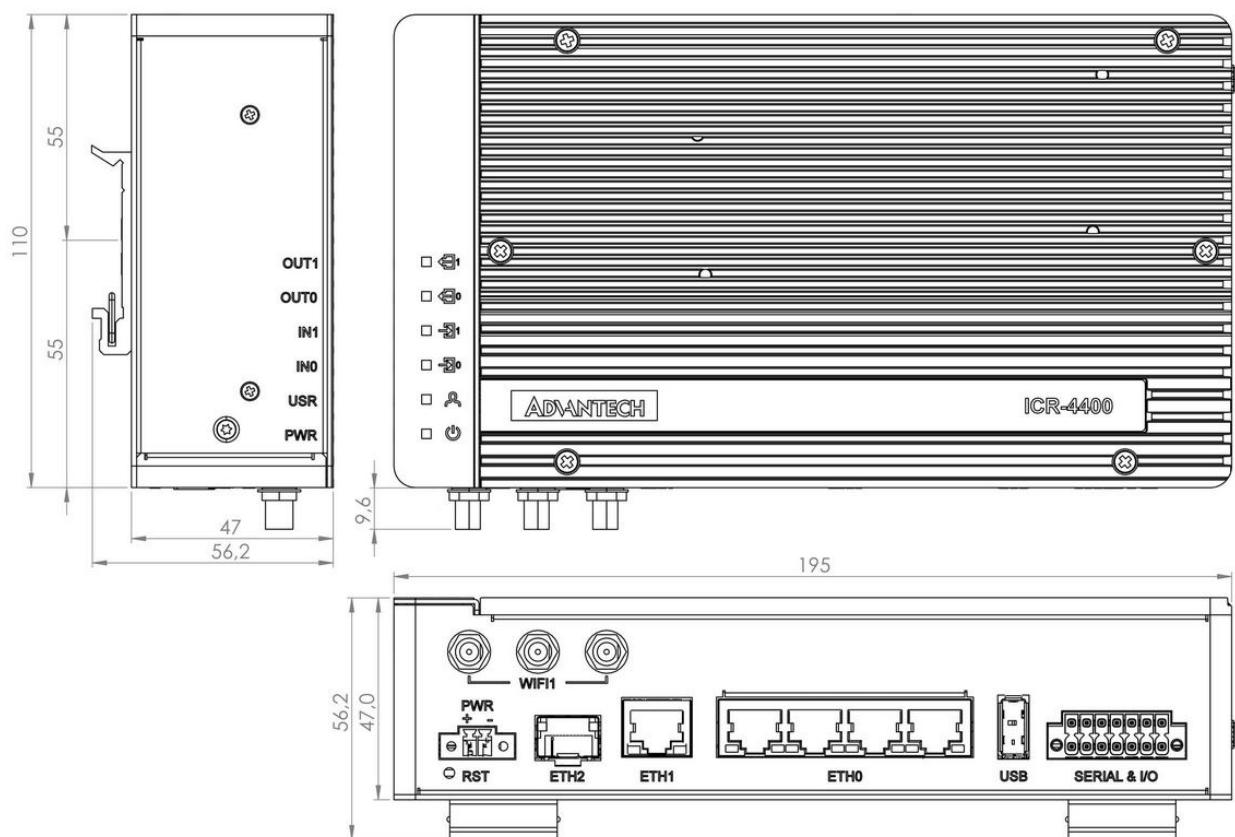
Variant with DIN Rail Clip

Figure 4: Router dimensions – front, top and right view with DIN rail clip

1.7 Mounting Recommendations

The router can be placed in the following ways:

- On a flat surface.
- On a wall using the wall-mounting clip (refer to Chapter 1.8).
- On a DIN rail EN 60715 with the metal DIN rail clip (refer to Chapter 1.9).

For most applications involving a built-in router within a switchboard, two types of environments are typically encountered:

- A non-public industrial environment with low voltage but high interference.
- A public environment with low voltage and without high interference.

For both of these environments, it's feasible to mount the router to a switchboard, eliminating the need for immunity examination or EMC-related issues as per EN 61439-1:2011 standards.

Warning



To comply with the EN 61439-1:2011 specification, follow these assembly instructions when attaching a router to a switchboard:

- When using whip antennas, maintain a minimum distance of 6 cm from cables and metal surfaces on all sides to avoid interference. If an external antenna is used apart from the switchboard, a lightning conductor is necessary.
- When mounting a router on sheet steel, consider using a cable antenna.

For all cables, it's recommended to bundle them, following these guidelines:

- The combined length of the cable bundle (power supply and data cables) should not exceed 1.5 m. If data cable length surpasses 1.5 m or if the cable runs toward the switchboard, installing surge protectors is advisable.
- Data cables must not be bundled with mains voltage cables (230 V/50 Hz or 120 V/60 Hz).
- Ensure sufficient space is left between each connector for cable handling.
- For proper router functionality, use an earth-bonding distribution frame to ground the grounding screw (refer to Chapter 2.5).

1.8 Wall-Mounting

Info



The wall-mounting clip is included as a standard accessory with the router.

The router can be affixed to a wall or another surface using the wall-mounting clips. Two wall-mounting clips are pre-assembled to the router during production and need to be rotated as shown in Figure 5. Each clip features two holes with a diameter of 5 millimeters for screw placement. For precise mounting dimensions, refer to Figure 3 in Chapter 1.6.

Warning



When attaching the wall-mounting clip, tighten the screws with a maximum torque of 0.4 Nm.

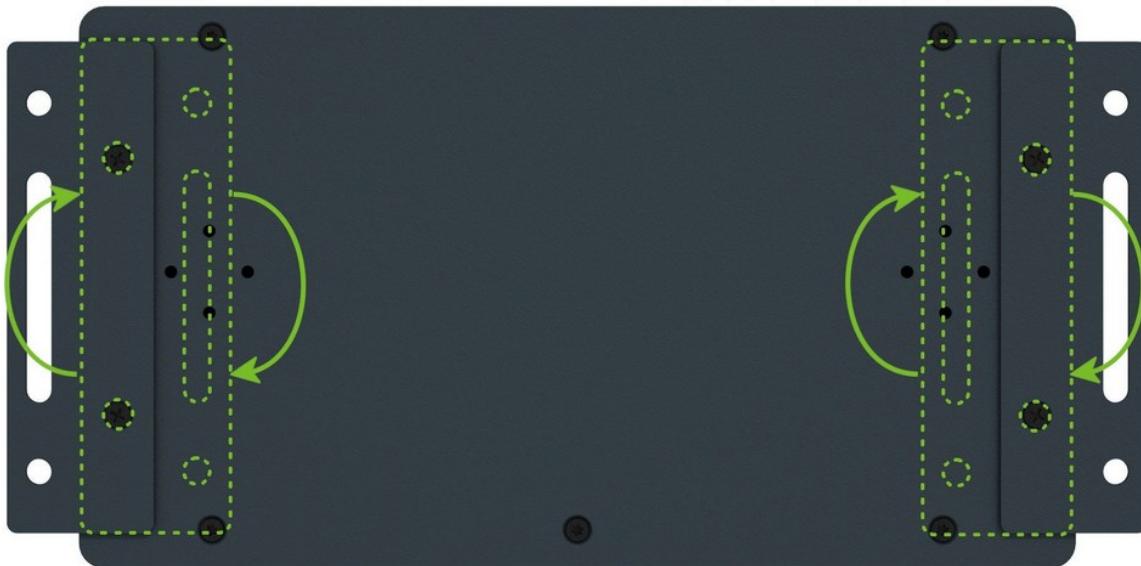


Figure 5: Rotated wall-mounting clips

1.9 DIN Rail Mounting

Info



The DIN rail clips are not included as standard accessories with the router. However, they can be ordered using the order code *BB-DIN-ICR32* (two pieces for one router).

You can attach two DIN rail clips to the router for mounting it onto a DIN rail that complies with the 60715 standards. The default position of the clips is depicted in Figure 6. If necessary, the clips can also be rotated vertically.

Warning



When attaching the clips, tighten the screws with a maximum torque of 0.4 Nm.



Figure 6: Default position of the DIN rail clips

To remove the router from the DIN rail, lightly push down on the router to disengage the bottom part of the DIN rail clip from the rail. Then, pivot the bottom part of the router away from the DIN rail, as demonstrated in Figure 7.

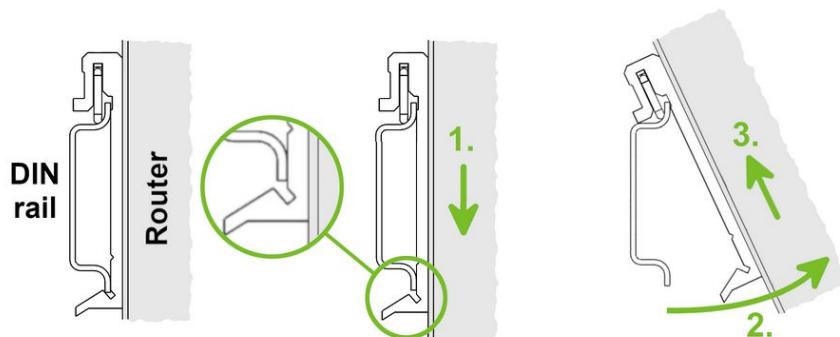


Figure 7: Removing the router from the DIN rail

1.10 Product Label

The figure below shows an example of the product labels with all the information printed on them.



Figure 8: Product label

1.11 First Use

You can perform the initial configuration of the router using a web browser on your PC. This interface enables router monitoring, configuration, and administration.

Warning

- Before putting the router into operation, ensure that all components required for running your applications are connected. Refer to Chapter [1.2 Hardware Overview](#) for an overview of the hardware.
- This device utilizes radio frequency bands that may be subject to specific usage restrictions in certain European Union countries (e.g., indoor use only). Please refer to [Appendix C](#) for detailed regulatory information before operation.

The procedure for connecting to a new router is described in the *Configuration Manual [1]*, Chapter *Getting Started* → *Configuration Environments* → *Web Interface Initial Setup*. This manual also provides detailed descriptions and examples of router configuration using the web interface.

2. Hardware Functionality

See Chapter [1.2](#) for an overview of the product's hardware, along with links to chapters offering detailed explanations.

2.1 Antennas Interfaces

Three RP-SMA female connectors (*WIFI1*) are available for Wi-Fi antenna connections.

 **Info**

Recommended tightening moment for screwing the antenna to the SMA connector is 0.9 Nm.

2.2 Ethernet Interfaces

The router provides four switched ETH0 ports and one ETH1 Ethernet interface. The physical placement of these ports is shown in Figure 9; when viewed from the front, the first of the ETH0 ports is on the left.



Figure 9: ETH0 ports layout

The RJ45 pinout of the socket is shown in Figure 12 and described in Table 6.

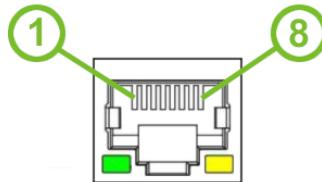


Figure 10: Ethernet connector pinout

Pin	10base-T & 100base-T	1000base-T	PoE PSE (Mode B)
1	Tx+ (Transmit Data+)	BI_DA+ (BiDirectional pair A+)	—
2	Tx- (Transmit Data-)	BI_DA- (BiDirectional pair A-)	—
3	Rx+ (Receive Data+)	BI_DB+ (BiDirectional pair B+)	—
4	—	BI_DC+ (BiDirectional pair C+)	PoE PSE+ (positive pole)
5	—	BI_DC- (BiDirectional pair C-)	PoE PSE+ (positive pole)
6	Rx- (Receive Data-)	BI_DB- (BiDirectional pair B-)	—
7	—	BI_DD+ (BiDirectional pair D+)	PoE PSE- (negative pole)
8	—	BI_DD- (BiDirectional pair D-)	PoE PSE- (negative pole)

Table 6: Ethernet connector pinout

Info

- All four ETH0 ports can be used for **PoE PSE** if the router is equipped with this feature. For more information about the PoE, see Chapter 2.3; for technical parameters, see Chapter 3.7.
- The isolation barrier of the Ethernet ports against the ground is 1500 V.

2.3 Power over Ethernet (PoE) PSE

Info

- Available only for models with the PoE PSE feature; see Chapter 1.3 for the order codes.
- The router supports the *IEEE 802.3af/PoE* (Type 1) and *IEEE 802.3at/PoE+* (Type 2) standards and is Mode B compliant.
- To control the PoE functionality, you can use the `pse` command. For detailed information, please refer to the *Command Line Interface* application note.

Warning

 Please note that the router's power supply must be 48 V DC to operate as the PoE PSE device.

The PoE PSE feature enables the router to provide power to other devices over the Ethernet socket. You can refer to the functional scheme in Figure 11.

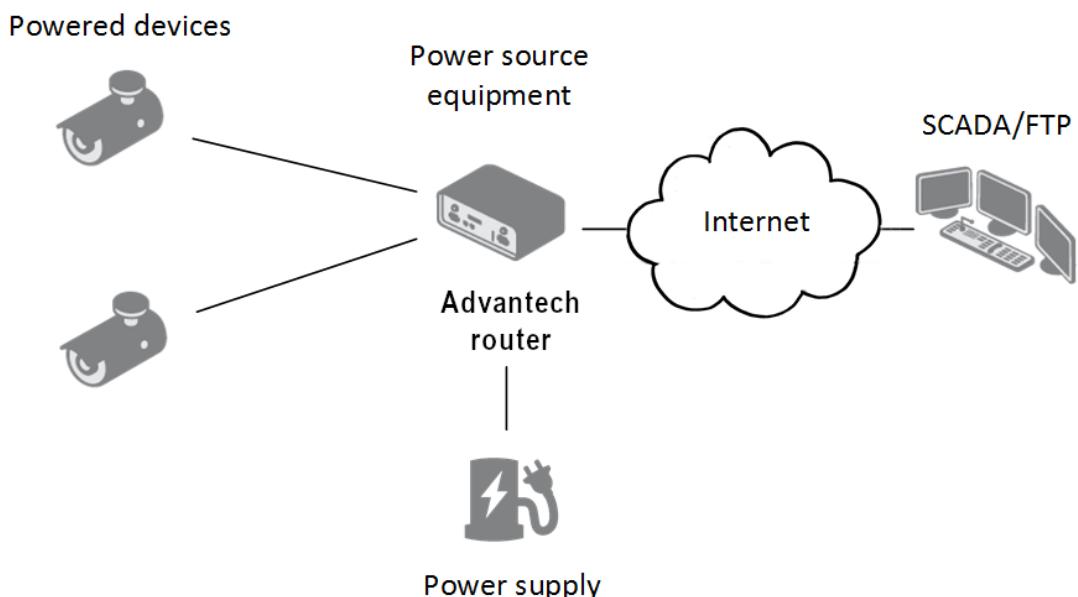


Figure 11: PoE PSE funcional scheme

The PoE PSE feature is supported by all four ETH0 network sockets and can be individually enabled in the *Ethernet* configuration pages. Detailed instructions can be found in the router configuration manual [1], specifically in Chapter *Configuration* → *Ethernet Configuration*. For information about the Ethernet socket pinout, please refer to Chapter 2.2.

To monitor the current PoE state, navigate to the *General* status page in the GUI. When PoE is enabled and an external device is being powered, you can access information about current, voltage, power, and power class here.

The following table summarizes the PoE parameters.

Item	Value
Required power supply parameters	48 V / up to 135 W
Power available to a PoE device	12.95 W / per port
Required power supply wattage for a PoE device	15.40 W / per port
Power available to a PoE(+) device	25.50 W / per port
Required power supply wattage for a PoE(+) device	30.0 W / per port

Table 7: PoE PSE parameters

PoE Power Budget Examples

Example #1

This example is for the Advantech [RPS-ICR4-WR2-PSE](#) power supply, which can supply a power of **65 W**. We will use 15 W as the maximum router power consumption; see Chapter [3.1](#). You can use this power supply to power:

- up to **three PoE devices** ($3 \times 15.4 \text{ W} + 15 \text{ W} = 61.2 \text{ W} < 65 \text{ W}$),
- just **one PoE+ device** ($1 \times 30 \text{ W} + 15 \text{ W} = 45 \text{ W} < 65 \text{ W}$).

Example #2

To power four PoE+ devices, you should use a power supply with a minimum rating of 135 W. You can calculate this as follows:

- Required power supply wattage = $4 \times 30 \text{ W} + 15 \text{ W} = 135 \text{ W}$.

Warning

Ensure that the power supply you use can provide enough power to cover the required power consumption of all connected PoE devices, including the router itself. We recommend using a power supply with some power reserve.

2.4 SFP Cage

A hot-pluggable (SFP) network interface module with a speed of up to 10 Gbps can be settled into the ETH2 SFP cage.

Installing an SFP Module

To install an SFP module, please refer to Figure 12 and follow these steps:

- If the SFP module is equipped with a bale clasp, ensure it is closed before inserting the SFP module.
- Hold the SFP module with the hardware label facing up.
- Gently insert the SFP module into the ETH2 slot and push it until it securely snaps into place.



Figure 12: SFP module installation

See Table 8 for a list of successfully tested SFP modules on the product.

Model	Manufacturer
SFP-GSM-20K	Advantech
ML-S+31Dout-10	MaxLink
S-3553LC20D	MikroTik
SFP-PLUS-LR10-HPE	Hewlett Packard
SFP-TXCIS	OEM
TXM431-LR(UN)	TP-Link
UF-RJ45-1G	Ubiquiti

Table 8: Tested SFP modules

2.5 Power Supply

A two-pin terminal connector (pitch 3.5 mm) is utilized to power the router. The corresponding connector is included as a standard accessory with the router.

Pin	Signal mark	Description
1	VCC(+)	Positive pole of DC supply voltage (+9 to +48 V DC)
2	GND(-)	Negative pole of DC supply voltage

Table 9: Power connector pinout

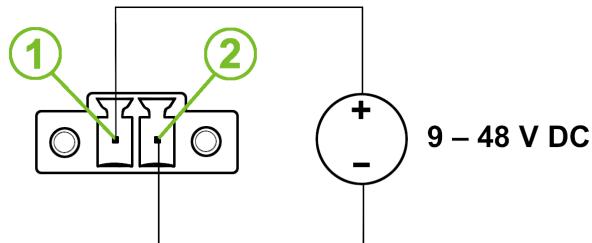


Figure 13: Power connector pinout

The required power supply voltage for the router ranges between +9 V and +48 V DC. Refer to the connection scheme in Figure 13 for proper setup. The router is equipped with built-in protection against reversed polarity, functioning without signaling. To guarantee correct operation, the power source must be capable of providing a sufficient amount of energy, as detailed in the consumption section of Chapter 3.1.

Warning

- Grounding the router using the grounding screw eliminates the protection against reversed polarity. Ensure the negative pole of the DC power supply shares the same voltage reference as the grounding screw. A voltage difference between these points may damage the router, necessitating repairs exclusively by an authorized service center.
- The power voltage for the PoE router version must be 48 V DC for it to function as a PoE PSE device.

All metal parts, including the box, are interconnected with the negative pole of the power supply (common pole). If recommended for the installation environment, protect the router by properly grounding it using the grounding screw, as depicted in Figure 14. The maximum tightening torque for the grounding screw is 1 Nm.



Figure 14: Grounding screw position

2.6 Low Power Mode

Warning



In applications requiring low power consumption, such as solar power (not 24/7 mode), it is strongly recommended to use the Low Power Mode (LPM) before shutting down the entire router.

LPM (Low Power Mode) is a router mode in which the router enters a sleep state with minimal power consumption; you can find details about LPM power consumption in Chapter 3.1. The router can be awakened from this mode either by applying a signal to the BIN1 input or after a predefined period of time. To put the router into LPM mode, you can use the `lpm` command; for more information, refer to the *Command Line Interface* application note.

2.7 I/O Port Interfaces

The I/O user interface is designed for digital input processing and digital output control. The pinout of the I/O interface is described in Figure 15 and Table 10. For detailed electrical parameters see Chapter 3.5. The functional scheme of connection for the digital input and digital output is in Figure 16.

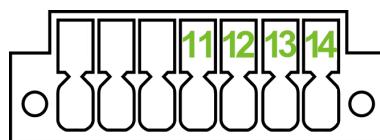


Figure 15: I/O connector pinout

Pin	Signal mark	Description
11	BIN0	The first digital input
12	BOUT0	The first digital output
13	BIN1	The second digital input
14	BOUT1	The second digital output

Table 10: I/O connector pinout

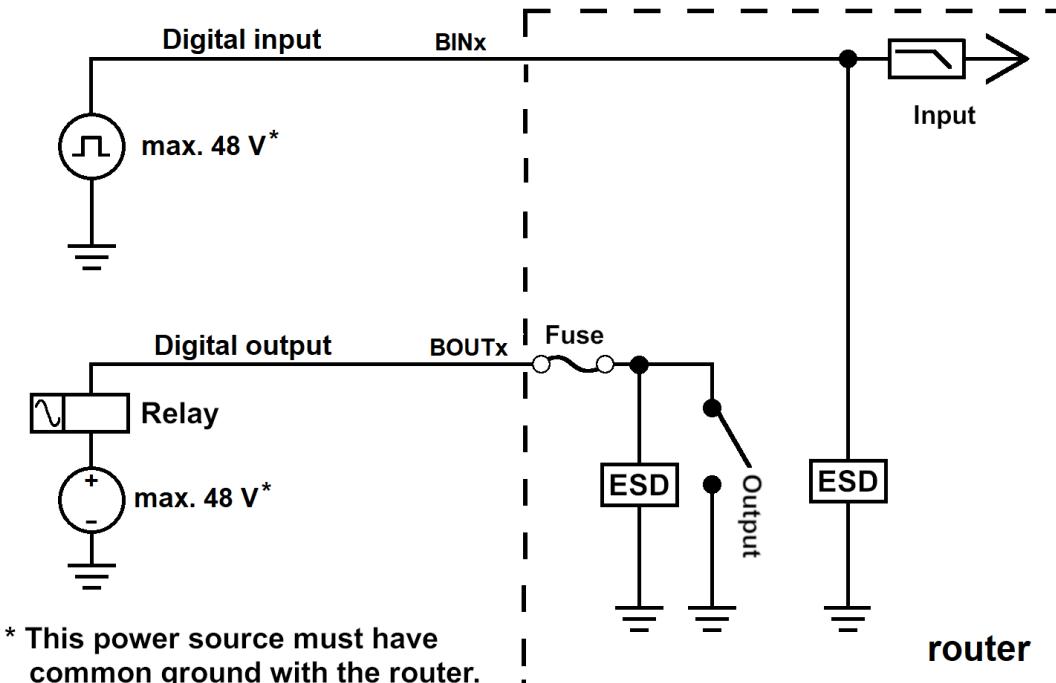


Figure 16: Functional block diagram of the digital interface

2.8 Serial Interfaces

The RS232, RS485 CAN serial interfaces together with the two I/O interfaces are physically connected to the 14-pin terminal block panel socket. All these interfaces are not isolated from the router. The pinout of this connector is described in Figure 17 and the tables below.

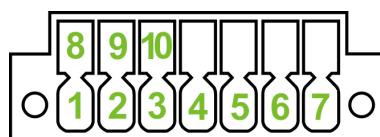


Figure 17: Serial connector pinout

Pin	Signal mark	Description
1	RXD	Received Data
2	CTS	Clear to Send
3	GND	Ground
4	RTS	Request to Send
5	TXD	Transmit Data

Table 11: RS232 connector pinout

Pin	Signal mark	Description
6	CAN_H	CAN High
7	CAN_L	CAN Low

Table 12: Connection of CAN bus

Pin	Signal mark	Description
8	B (+)	In/Out
9	A (-)	In/Out
10	GND	Ground

Table 13: RS485 connector pinout

2.9 USB Port

The router is equipped with a single USB 2.0 host port featuring a USB-A type socket. The pinout details of the USB socket are illustrated in Figure 18 and further described in Table 14.

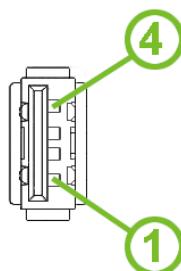


Figure 18: USB connector pinout

Pin 1	Signal Mark	Description	Data Flow Direction
1	+5 V	Positive pole of 5 V DC supply voltage, 0.5 A	
2	USB Data -	USB data signal (negative pole)	Input/Output
3	USB Data +	USB data signal (positive pole)	Input/Output
4	GND	Negative pole of DC supply voltage	

Table 14: USB connector pinout

For detailed USB port configuration options, refer to the configuration manual [1], Chapter *Configuration* → *USB Port*.

2.10 microSD Card Reader

The microSD card reader is located under the SIM cover on the router. This card reader enables the router to utilize microSD memory cards. The technical specifications are presented in table below.

Supported technologies	SD, SDHC, SDXC	
Supported capacity	SDHC SDXC	up to 32 GB from 32 GB to 512 GB
Supported microSD card filesystems	vfat, ext2, ext3, ext4	

Table 15: microSD card technical specifications

Warning

Inserting the microSD card:

!

- To remove an inserted microSD card, use the flat end of a spudger, or your fingernail, and press the card slightly into its slot until you hear a click. Release the card, and it will pop out of its slot.
- To insert a microSD card, push the card into the slot with the correct orientation as shown in the picture until it clicks into place.

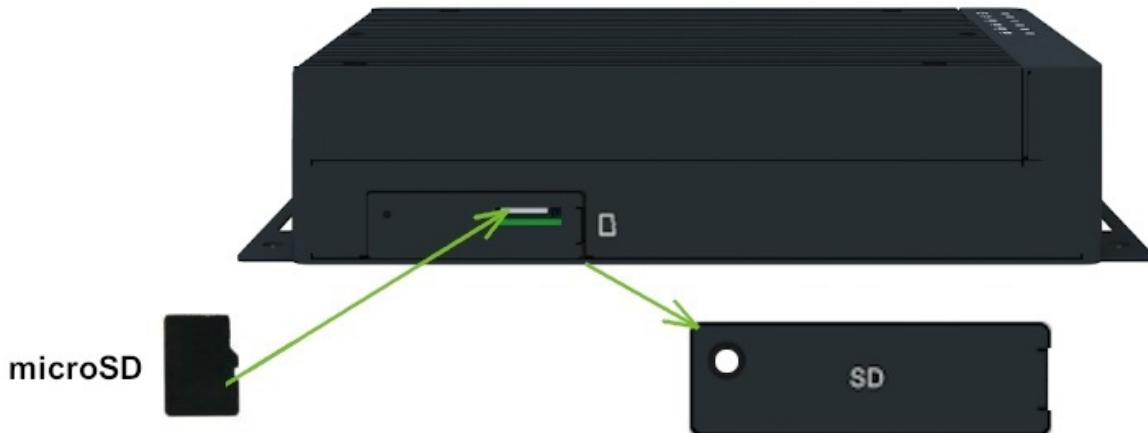


Figure 19: microSD card insertion

Mounting microSD Card to the System

To access the microSD card within the router's system, it must be mounted. Follow these steps to mount the card:

- Use the `dmesg` command to view the list of recently connected devices.
- Identify the entry for the microSD card in the command's output, for example:
`mmcblk0: p1`
- To mount the card to the `/mnt` directory, use the `mount` command:
`mount /dev/mmcblk0p1 /mnt`

Info

For more information about the commands for creating, mounting, checking, and unmounting a file system on a microSD card, refer to the application note for the *Ext4 Filesystem Utilities* router app.

2.11 LED Status Indication

There are status LEDs on the top side of the router to provide router status information. Moreover, ETH0 and ETH1 connectors, located on the front panel, have two additional LEDs providing information about the port status.

	Caption	Color	State	Description
	PWR	Green	On	The router is booting up.
		Green	Blinking	The router booted up and is ready.
		Green	Fast blinking	The router firmware is being updated.
	USR	Green	—	The function of this LED is user-defined.
	IN0	Green	On	The first digital input is active.
	IN1	Green	On	The second digital input is active.
	OUT0	Green	On	The first digital output is active.
	OUT1	Green	On	The second digital output is active.
	ETH0	Green	On	Selected 1 Gbps bit rate.
	ETH1	Green	Off	Selected 100/10 Mbps bit rate.
	ETH0	Yellow	On	The network cable is connected.
	ETH1	Yellow	Brief off blinks	Data transmission.
		Yellow	Off	The network cable is not connected.

Table 16: LED status indication

2.12 Reset Functions

The *RST* button has multiple functions. For more details, refer to the configuration manual [1], Chapter *Introduction* → *Device* → *Reset*.

Info



Use a narrow screwdriver or a small tool to press the *RST* button.



Figure 20: Resetting the router

3. Technical Parameters

3.1 Basic Technical Parameters

Parameter	Conditions	Description
Temperature range	Operating Storage	-40 °C to +75 °C (-40 °F to +167 °F) ¹ -40 °C to +85 °C (-40 °F to +185 °F)
Humidity	Operating Storage	5 to 95 % relative humidity non condensing 5 to 95 % relative humidity non condensing
Altitude	Operating	2000 m / 70 kPa
Degree of protection		IP30
Supply voltage		9 – 48 V DC
Battery for RTC		CR1225
Consumption for non-Wi-Fi / Wi-Fi version	Idle Average Maximum LPM mode	5.4 W / 7.3 W 5.6 W / 7.9 W 11.6 W / 15.1 W (142 W) ² 3 mW (170 mW) ³
Dimensions of device (w/o clips)		195 × 110 × 47 mm (7.68" × 4.33" × 1.85")
DIN rail clip specification		2 pcs of DIN 35 mm, EN 60715
Total weight		1250 g (2.76 lbs)

Table 17: Basic technical parameters

¹ Models having ICR-4401W1x order codes have an operating temperature range of -40 °C to +60 °C.

² Maximal power consumption for model with the PoE PSE (for maximal power load on all ETH0 ports).

³ For device equipped with the PoE PSE.

3.2 Standards and Regulations

Parameter	Description
Radio	ETSI EN 301 893, ETSI EN 300 328
EMC	ETSI EN 301 489-1, ETSI EN 301 489-17, EN 55032, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-6-2, EN 61000-6-3
Safety	EN IEC 62368-1, EN IEC 62311, IEEE 802.3
Mechanical	EN 60068-2-27, EN 60068-2-64, EN 60529
Climatic	EN 60068-2-2, EN 60068-2-1, EN 60068-2-14, EN 60068-2-30
Transportation	E-Mark (E8), homologation number: 10R - 06 11459 ¹
Cybersecurity	EN 18031-1
National	CE, UKCA compliant
Environmental	REACH, RoHS3 and WEEE compliant

Table 18: Standards and regulations

¹ Models having ICR-4401W1x order codes have no E8 certification.

3.3 Type Testing and Environmental Conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact	± 6 kV (crit. A)
RF field AM modulated	EN 61000-4-3	Enclosure	20 V/m (crit. A) (80 – 1000 MHz) 10 V/m (crit. A) (1 – 6 GHz)
Fast transient	EN 61000-4-4	Signal ports Power ports Ethernet ports	± 1 kV (crit. A) ± 2 kV (crit. A) ± 1 kV (crit. A)
Surge	EN 61000-4-5	Ethernet ports Power ports	± 1 kV (crit. A), shielded cab. ± 1 kV (crit. A)
RF conducted	EN 61000-4-6	All ports	10 V/m (crit. A) (0.15 – 80 MHz)
Radiated emission	EN 55032	Enclosure	Class B
Conducted emission	EN 55032	Signal ports Power ports Ethernet ports	Class B Class B Class B
Dry heat	EN 60068-2-2	Test Bb, storage +85 °C, operation +75 °C	
Cold	EN 60068-2-1	Test Ab, storage -40 °C, operation -40 °C	
Damp heat	EN 60068-2-78	95 % rel. humidity (+40 °C)	
Dry heat, cyclic	EN 60068-2-30	+55 °C / +25 °C, rel. humidity 95 %, 6 h - 6 h	
Dry heat	EN 60068-2-2	Test Bb, storage +85 °C, operation +75 °C	
Thermal shock/ temp. variation	EN 60068-2-14	Test Nb, -40 °C/+75 °C, 3h/3h, 2 cycles, 3 K/min	
Degrees of protection provided by enclosures	EN 60529	IP30	
Vibration, broadband random	EN 60068-2-64	Spectrum A.3 cat 1, breakpoints A.6 cat 1	
Shock	EN 60068-2-27	50 m/s ² , 11 ms, half sine, 10 in each dir.	

Table 19: Type testing and environmental conditions

3.4 Parameters of Wi-Fi

Warning

The 5 GHz Wi-Fi interface operates in frequency bands (specifically 5150–5350 MHz) that are restricted to **indoor use only** in certain EU member states. Please refer to [Appendix C](#) for detailed regulatory information.

Parameter	Description
Short Module Description	Dual Band 2.4/5GHz 3x3 Wi-Fi 5 (802.11ac Wave 1)
Supported Standards	IEEE: 802.11ac compliant & compatible with 802.11a/b/g/n
Antenna Connectors	3x3 MIMO RP-SMA Input impedance: 50 Ω
Data Rate (3x3 MIMO OFDM)	Up to 600 Mbps @ 2.4 GHz Up to 1300 Mbps @ 5 GHz
Frequency Ranges	2.412 – 2.472 GHz 4.920 – 5.825 GHz
Spectrum Widths	20/40MHz @ 2.4GHz 20/40/80MHz @ 5GHz
Modulation Techniques	OFDM: BPSK, QPSK, DBPSK, DQPSK, 16-QAM, 64-QAM, 256-QAM
2.4 GHz supported channels	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
5 GHz supported channels	36, 38, 40, 42, 44, 46, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165
Type of device	Access point (AP) Station (STA) Multi-role (AP & STA)
Key Features	Spatial Multiplexing, Cyclic-Delay Diversity (CDD), Low-Density Parity Check (LDPC) Codes, Maximal Ratio Combining (MRC), Space Time Block Code (STBC), Dynamic Frequency Selection (DFS), IEEE 802.11d, e, h, i, j, k, r, v time stamp, and w standards
Security – Standards	WPA, WPA2, WPA3, 802.1X
Security – Encryption	WEP, TKIP, AES
Security – EAP Types	EAP-FAST, EAP-TLS, EAP-TTLS, PEAP-GTC, PEAP-MSCHAPv2, PEAP-TLS, LEAP
TX Power (3 chains) ¹	Max. 26 dBm @ 2.4 GHz Max. 23/25 dBm @ 5 GHz (version W/W1)

Table 20: Technical parameters of Wi-Fi

¹The maximum transmit power is determined by the *Country* setting in the router's GUI; for more details, please refer to the [Configuration Manual](#).

3.5 Parameters of I/O Ports

Electrical characteristics of the digital input are in Table 21. Status of the digital input can be retrieved in the router's web interface (on the *General Status* page) or by the `status ports` and `io get` commands, see [Command Line Interface](#) application note.

Logical ¹	Voltage	Current	Status ²
1	3 V	0.5 mA	Off
0	5 V	0.8 mA	On
0	12 V	1.6 mA	On
0	48 V	3.4 mA	On

Table 21: Technical parameters of digital input

The maximum digital output load is **500 mA** at **48 V**.

3.6 Parameters of Serial Interfaces

Supported parameters of the RS232 and RS485 interfaces, which can be configured in *Expansion Port 1* resp. *Expansion Port 2* menu items, are in Table 22.

Parameter	Description
Baudrate	300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400.
Data Bits	5, 6, 7, 8.
Parity	none, even, odd.
Stop Bits	1, 2.
Flow Control	none, hardware.

Table 22: Technical parameters of serial interfaces

3.7 Parameters of PoE

For more information about the PoE PSE feature, including the parameters, see Chapter [2.3](#).

¹The digital status returned by the `io get` shell command.

²The digital status returned by the `status ports` shell command and displayed on the *General Status* page.

3.8 System Configuration

The main parameters of the system are listed in Table 23.

Parameter	Description
CPU architecture	64-bit Quad-Core ARMv8-A (core Cortex-A72)
CPU frequency	1200 MHz
CPU power	4.72 DMIPS/MHz
Flash memory	4 MB of NOR 4 096 MB of eMMC <ul style="list-style-type: none">• 838 MB for Router Apps• 512 MB for customer data• The remaining space is reserved for the system.
RAM size	1 024 MB
Watchdog	HW watchdog
RTC	Battery backup RTC
TPM	Trusted Platform Module (TPM) 2.0

Table 23: System configuration

Appendix A: Troubleshooting

Warning

If you cannot connect to the router from your PC, your network card may be configured in such a way that it is not possible to connect to the router. Take one or more of the following steps in order to solve the problem:



- Make sure your PC's network card is configured to obtain the IP address from the DHCP server (by default the DHCP server is running in the router).
- Connect the router to the PC via Switch.
- Connect the router to the PC, start the router first and then start the PC after the router's initialization.

Ethernet connection fails or is not establishing.

- It is possible to turn auto negotiation off and set a rate and duplex manually on the Ethernet interface of the router. Available on "LAN Configuration" page in the router.

I cannot connect from the Internet to the device behind the router. I have NAT enabled.

- The device's gateway has to be configured so it points to the router.

I can't access my Web server placed behind the router over NAT.

- The remote HTTP access to the router has to be disabled on "NAT Configuration" page in the router. Also enable "Send all remaining incoming packets to default server" feature and fill in the IP address of your Web server. On the Web server, the default gateway has to be the IP address of the router.

DynDNS doesn't work.

- If the same IP address is recorded in your canonic name as a dynamically assigned address, it means that the provider is using NAT or a firewall.
- You can verify NAT using ping to your server with static address and then compare with router's IP address.
- You can verify a Firewall by accessing remotely to the router's Web interface.
- The operator may not provide the address of DNS server and without DNS server's address it is impossible to connect to the dyndns.org server. The following messages will be shown in the System Log:
 - DynDNS daemon started
 - Error resolving hostname: no such file or directory
 - Connect to DynDNS server failed

L2TP or IPsec isn't establishing.

- Check the "System Log" page for error messages.

IPsec tunnel establishes but the communication does not run.

- Probably there are bad routing rules defined in the connected devices, or the default gateway.

Serial communication is not working.

- Verify that the router model supports serial communications. Also verify the serial communication settings. To do so, open the router's configuration menu via the web browser, select the appropriate "Expansion Port" from "Configuration" part of the menu and verify the settings.

Is the router Cisco compatible? Can I use the Cisco configuration?

- No, the Firmware in the router (ICR-OS) is based on Linux with BusyBox. Thus the Cisco configuration cannot be used. But network connections are defined by standards so connecting the router to the Cisco or other networking devices is possible and will be compatible.

FTP or SFTP does not work

- FTP will work on v2 routers only. You can use SFTP on all routers to transfer files to/from the router. If having troubles with FTP on v2 routers, make sure you have FTP enabled: "Configuration" section, "Services", "FTP". Then you can connect with any client on port 21 with name and password same as for the Web interface. If having troubles with SFTP, make sure you have SSH enabled: "Configuration" section, "Services", "SSH". Then you can connect with any client on port 22 with name and password same as for the Web interface.

How can I connect to the router's command line? (SSH, Telnet)

- You can use SSH on all routers or Telnet on v2 routers only. SSH is enabled by default, but you can verify in Web interface in "Configuration" section, "Services", "SSH". Then connect with any SSH client on port 22 of the router. User and password is the same as for the Web interface. Telnet on v2 routers can be enabled here: "Configuration" section, "Services", "Telnet".

Appendix B: Customer Support

Customer Support for Europe

Advantech Czech s.r.o.

Sokolska 71
562 04, Usti nad Orlici
Czech Republic

Phone: +353 91 792444
Fax: +353 91 792445
E-mail: iiotcustomerservice@advantech.eu
Web: www.advantech.com

Customer Support for NAM

Advantech North America

707 Dayton Road
Ottawa, IL 61350 USA

Phone: +1-800-346-3119 (Monday – Friday, 7 a.m. to 5:30 p.m. CST)
Fax: +1-815-433-5109
E-mail: support.iiot.ana@advantech.com
Web: www.advantech.com

Customer Support for Asia

Phone: +886-2-2792-7818 #1299 (Monday – Friday, 9 a.m. to 5:30 p.m. UTC+8)
Fax: +886-2-2794-7327
E-mail: icg.support@advantech.com.tw
Web: www.advantech.com

Appendix C: Regulatory & Safety Information

Safety Notices

For your safety and proper operation of the device, please observe the following instructions:

- The router must comply with all applicable international, national, and local regulations, including any specific restrictions concerning its use in designated applications and environments.
- To avoid personal injury or damage to the device, use only accessories that are approved or supplied by the manufacturer. Unauthorized modifications or the use of non-approved accessories may damage the router, violate regulations, and void the warranty.
- Do not attempt to open the router enclosure under any circumstances.

Important



This equipment is not suitable for use by or near young children.

- Always ensure that the power supply voltage does not exceed 48 V DC.
- Do not expose the router to harsh environmental conditions. Protect it from dust, moisture, and excessive temperatures.
- Use only routers with proper certifications and markings in areas containing flammable or explosive materials (such as gas stations, chemical plants, or locations with explosives). In these environments, always follow the applicable restrictions regarding the use of radio devices.
- When traveling by airplane, always switch off the router. Using the router on board may endanger flight safety, interfere with mobile networks, and violate local regulations. Non-compliance can result in suspension or cancellation of telecommunications services or legal penalties.
- Take special care when operating the router in close proximity to personal medical devices such as cardiac pacemakers or hearing aids. If in doubt, consult the manufacturer of the medical device or your physician.
- This device may cause interference if used near television sets, radio receivers, or personal computers.
- Maintain a minimum separation distance of at least 20 cm between the router and the human body during operation.
- It is strongly recommended to regularly back up all critical configuration data stored in the router's memory.
- **Specific Usage Restrictions for 5 GHz Wi-Fi:** This device operates in the 5150–5350 MHz frequency band, which is restricted to **indoor use only** within the European Union, EFTA countries, and Northern Ireland. Outdoor use in this frequency band is prohibited to prevent harmful interference with other radio services.

	AT	BE	BG	CY	CZ	DE	DK	EE	EL	ES	FI
	FR	HR	HU	IE	IT	LT	LU	LV	MT	NL	PL
	PT	RO	SE	SI	SK	IS	LI	NO	CH	TR	UK

Product Disposal Instructions

The WEEE directive (Waste Electrical and Electronic Equipment: 2012/19/EU) ensures the environmentally responsible recycling and recovery of electronic products. This device contains high-quality materials and components suitable for recycling. At the end of its life, **do not dispose of this product with ordinary commercial waste**. The router also contains a battery. Remove the battery before disposing of the device, and ensure the battery is disposed of separately and in accordance with local regulations. For detailed information on product and battery disposal, consult your supplier's terms and conditions.

Appendix D: Related Documents

[1] *ICR-4400 Configuration Manual* (see *Documents to download* → *Manuals* section)

[EP] Product-related documents and applications can be obtained on **Engineering Portal** at <https://icr.advantech.com/download> address.



We, Advantech Czech s.r.o., declare that the radio equipment narrated in this user's manual complies with Directive **2014/53/EU** (WiFi version) and with the essential requirements and other relevant provisions of Directives **2014/30/EU** and **2014/35/EU** (non-WiFi version).



We, Advantech Czech s.r.o., declare that the radio equipment narrated in this user's manual complies with Radio Equipment Regulations 2017 (**S.I. 2017 No. 1206**) and with the Electromagnetic Compatibility Regulations 2016 (**S.I. 2016 No. 1091** and **S.I. 2016 No. 1101**).

The full text of the EU Declaration of Conformity is available at the following internet address:
icr.advantech.com/doc