

ADVANTECH



Serial to TCP





© 2024 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and it does not represent a commitment on the part of Advantech.


Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.


All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

Used symbols

 *Danger* – Information regarding user safety or potential damage to the router.

 *Attention* – Problems that can arise in specific situations.

 *Information* – Useful tips or information of special interest.

 *Example* – Example of function, command or script.

Contents

1. Changelog	1
1.1 Serial to TCP Changelog	1
2. Router App Description	2
3. Configuration	3
4. System Log	6
5. Related Documents	7

List of Figures

1	<i>Serial2TCP</i> router app function principle	2
2	Menu of the router app	3
3	Menu of the router app	4
4	System Log	6

List of Tables

1	Configuration of the serial port connection.	5
2	TCP Clients configuration	5

1. Changelog



This Router App has been tested on a router with firmware version 6.3.10. After updating the router's firmware to a higher version, make sure that a newer version of the Router App has not also been released, as it is necessary to update it as well for compatibility reasons.

1.1 Serial to TCP Changelog

v1.0.1 (2013-11-12)

- First release.

v1.0.2 (2014-11-25)

- Reworked tcp connection to server.

v1.1.0 (2017-03-21)

- Recompiled with new SDK.

v1.2.0 (2018-09-27)

- Added support of ttyUSB.

v1.2.1 (2018-09-27)

- Added expected ranges of values to JavaScript error messages.

v1.3.0 (2020-10-01)

- Updated CSS and HTML code to match firmware 6.2.0+

v1.4.0 (2022-11-03)

- Reworked license information

v1.5.0 (2024-03-20)

- Added description and summary files
- Recompiled with ModulesSDK 2.1.4
- Unified menu categories

2. Router App Description



Router app *Serial to TCP* is not contained in the standard router firmware. Uploading of this router app is described in the Configuration manual (see Chapter [Related Documents](#)).

Serial to TCP module allows connecting of the serial line device and TCP Server or Servers. Communication in both ways – serial to TCP and TCP to serial – is possible. It can be used in data collecting and measurement applications – sending data from serial line connected meter or sending commands and control data to any meters or serial line devices remotely via TCP. Function principle is demonstrated in figure 1.



To make the router app work, a serial expansion port has to be installed in the router. After uploading of the router app, you can set the serial line communication parameters and up to 5 TCP Servers. Router then performs as a TCP Client and arranges the communication of TCP Servers and serial line. The module is designed specifically for RS232 standard of serial line communication.

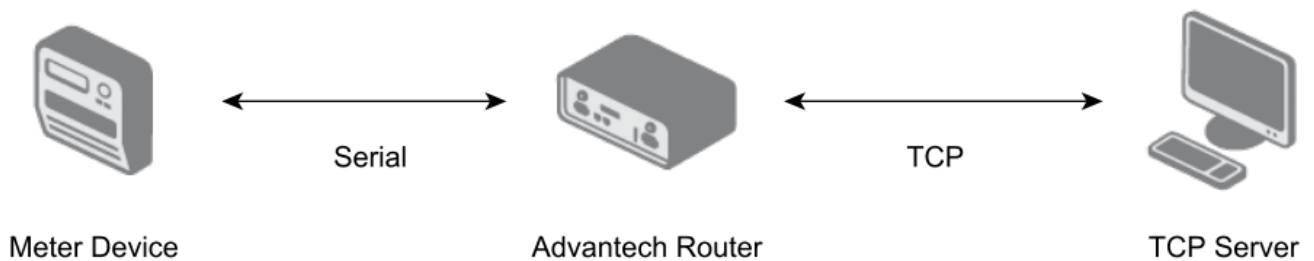


Figure 1: *Serial2TCP* router app function principle

3. Configuration

Configuration of the *Serial to TCP* module is accessible via web interface of the router in the *Customization* section. Clicking on the *Router apps*, installed router apps can be viewed. Clicking on the *Serial to TCP*, it can be configured.

Menu contain *Status* section containing *System Log*, which shows System log, *Configuration* menu section containing *Global* menu item where the configuration takes place and *Administration* menu section where *Return* menu item can be found, which return the user into router's configuration.

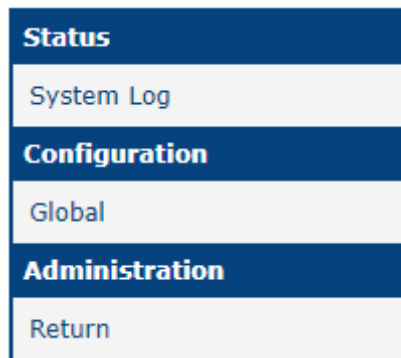


Figure 2: Menu of the router app

When clicked on the Global menu Item the configuration of the Router App shows.

Serial to TCP Module Configuration

Expansion Ports Overview

Exp. Port 1

Exp. Port 2

Enable Serial2TCP

Use Exp. Port ▼

Baudrate ▼

Data Bits ▼

Parity ▼

Stop Bits ▼

Split Timeout msec

TCP Clients Setup

No.	Status	Server Address	TCP Port
1.	<input type="text" value="Disable"/> ▼	<input type="text"/>	<input type="text"/>
2.	<input type="text" value="Disable"/> ▼	<input type="text"/>	<input type="text"/>
3.	<input type="text" value="Disable"/> ▼	<input type="text"/>	<input type="text"/>
4.	<input type="text" value="Disable"/> ▼	<input type="text"/>	<input type="text"/>
5.	<input type="text" value="Disable"/> ▼	<input type="text"/>	<input type="text"/>

Figure 3: Menu of the router app



In the upper part of the configuration – *Expansion Ports Overview* – there are installed expansion ports shown. In case of using all the expansion ports the other way (e.g. TCP/UDP access enabled in the *Expansion Port 1/2* section in the routers’s configuration) the attention appears.

To activate the module, check the *Enable Serial2TCP* item (change applies after clicking the *Apply* button). There is definition of a serial line connection parameters below – see the table.

Item	Description
Use Exp. Port	Expansion port select – which one will be used.
Baudrate	Applied communication speed.
Data Bits	Number of data bits.
Parity	Control parity bit: <ul style="list-style-type: none"> • none – will be sent without parity • even – will be sent with even parity • odd – will be sent with odd parity
Stop Bits	Number of stop bits.
Split Timeout	Time to rupture messages. If the receiver identifies the gap between two characters longer than this parameter in milliseconds, then all of the received data will be compiled and sent in a message.

Table 1: Configuration of the serial port connection.

In the last part – *TCP Clients Setup* – there can be up to 5 TCP Clients (for connecting to 5 TCP Servers) configured. Configuration items for particular TCP Client are described in the table below:


Položka	Popis
Status	Enable/Disable
Server Address	IP address of the TCP Server
TCP Port	Port of the TCP Server

Table 2: TCP Clients configuration

When configured properly, serial line data are sent by TCP Clients to TCP servers – all the configured and listening servers will receive the same data from the serial line. Data sent from any configured TCP Servers will reach the serial line as well (it is received by the particular TCP Client and sent to the serial line).

4. System Log

In case of any problems with connection it is possible to view the system log – pressing the *System Log* menu item. There are detailed reports from individual applications running in the router displayed. Activity of the *Serial to TCP* module is indicated in rows starting with "serial2tcp". *System Log* also displays informations about the successful or unsuccessful connection establishment. Press the emphSave button to save the system log to your computer.

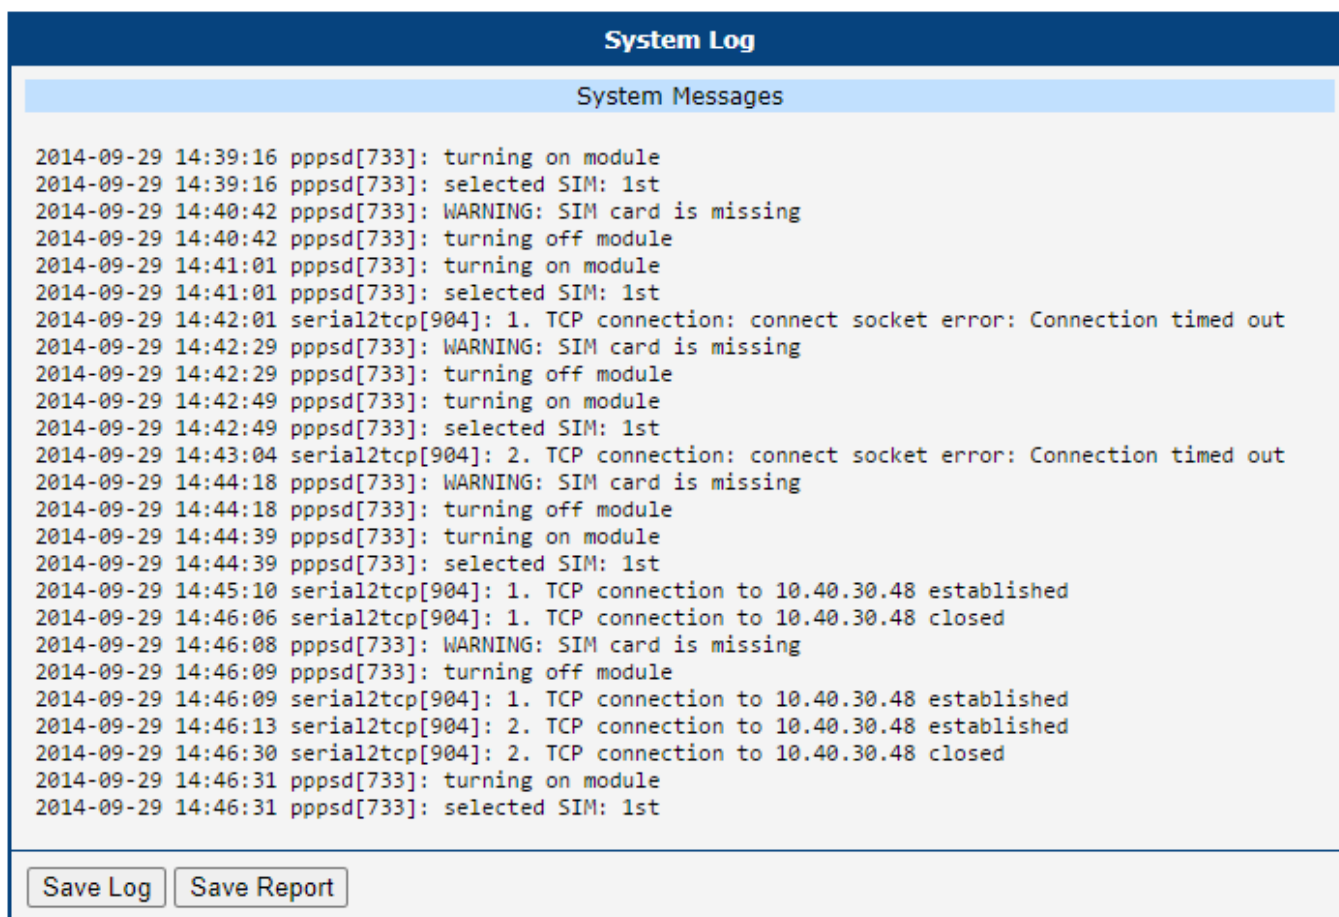

The screenshot displays a web interface for viewing system logs. At the top, there is a dark blue header with the text "System Log". Below this is a light blue sub-header labeled "System Messages". The main content area is a white box containing a list of log entries, each with a timestamp, a process name in brackets, and a message. The entries include module status changes, SIM card warnings, and TCP connection logs for the serial2tcp module. At the bottom of the log area, there are two buttons: "Save Log" and "Save Report".

```
2014-09-29 14:39:16 pppsd[733]: turning on module
2014-09-29 14:39:16 pppsd[733]: selected SIM: 1st
2014-09-29 14:40:42 pppsd[733]: WARNING: SIM card is missing
2014-09-29 14:40:42 pppsd[733]: turning off module
2014-09-29 14:41:01 pppsd[733]: turning on module
2014-09-29 14:41:01 pppsd[733]: selected SIM: 1st
2014-09-29 14:42:01 serial2tcp[904]: 1. TCP connection: connect socket error: Connection timed out
2014-09-29 14:42:29 pppsd[733]: WARNING: SIM card is missing
2014-09-29 14:42:29 pppsd[733]: turning off module
2014-09-29 14:42:49 pppsd[733]: turning on module
2014-09-29 14:42:49 pppsd[733]: selected SIM: 1st
2014-09-29 14:43:04 serial2tcp[904]: 2. TCP connection: connect socket error: Connection timed out
2014-09-29 14:44:18 pppsd[733]: WARNING: SIM card is missing
2014-09-29 14:44:18 pppsd[733]: turning off module
2014-09-29 14:44:39 pppsd[733]: turning on module
2014-09-29 14:44:39 pppsd[733]: selected SIM: 1st
2014-09-29 14:45:10 serial2tcp[904]: 1. TCP connection to 10.40.30.48 established
2014-09-29 14:46:06 serial2tcp[904]: 1. TCP connection to 10.40.30.48 closed
2014-09-29 14:46:08 pppsd[733]: WARNING: SIM card is missing
2014-09-29 14:46:09 pppsd[733]: turning off module
2014-09-29 14:46:09 serial2tcp[904]: 1. TCP connection to 10.40.30.48 established
2014-09-29 14:46:13 serial2tcp[904]: 2. TCP connection to 10.40.30.48 established
2014-09-29 14:46:30 serial2tcp[904]: 2. TCP connection to 10.40.30.48 closed
2014-09-29 14:46:31 pppsd[733]: turning on module
2014-09-29 14:46:31 pppsd[733]: selected SIM: 1st
```

Figure 4: System Log

5. Related Documents

You can obtain product-related documents on *Engineering Portal* at icr.advantech.com address.

To get your router's *Quick Start Guide*, *User Manual*, *Configuration Manual*, or *Firmware* go to the [Router Models](#) page, find the required model, and switch to the *Manuals* or *Firmware* tab, respectively.

The *Router Apps* installation packages and manuals are available on the [Router Apps](#) page.

For the *Development Documents*, go to the [DevZone](#) page.