HSPA+ Industrial Router

UR5i v2

USER MANUAL





ADVANTECH



Advantech B+B SmartWorx - Americas

Advantech B+B SmartWorx 707 Dayton Road Ottawa, IL 61350 USA

Website

www.advantech-bb.com

Advantech – Europe

Advantech Czech s.r.o. Sokolska 71 562 04, Usti nad Orlici, Czech Republic

Website

www.advantech-bb.com

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

^{© 2020} Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and does not represent a commitment on the part of Advantech.

Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.



Used symbols



Danger – Information regarding user safety or potential damage to the router.



Attention – Problems that can arise in specific situations.



Information, notice - Useful tips or information of special interest.

GPL licence

Source codes under GPL licence are available free of charge by sending an email to: techSupport@advantech-bb.com.

Please see http://ep.advantech-bb.cz/devzone for more information.





Advantech Czech s.r.o., Sokolska 71, 562 04 Usti nad Orlici, Czech Republic Document No. MAN-0016-EN, revision from May 19, 2020. Released in the Czech Republic.



Contents

1	Safety Instructions	2
2	WEEE directive	3
3	Router Description	4
4	Contents of Package	5
5	Router Design	6
	 5.1 Router versions 5.2 Delivery identification 5.3 Order codes 5.3.1 Order code structure 5.3.2 Order code examples 5.4 Basic dimensions of the router box 5.4.1 Plastic box 5.4.2 Metal box 5.5 Mounting recommendations 5.6 Removal from the DIN rail 5.7 Description of the front panel 5.7.1 Status indication 5.7.2 Power connector PWR 5.7.3 Antenna connector ANT, DIV and GPS (alternatively WIFI or WMBUS) 5.7.4 SIM card reader 5.7.5 Ethernet Port ETH 5.7.6 PORT1 5.7.7 PORT2 5.7.8 USB Port 5.7.9 I/O Port 5.7.10 Reset 	6 7 8 8 10 11 11 12 14 15 16 17 18 20 21 22 23 25
6	First Use	26
7	6.1 Connecting the router before first use	26 27 27 27 28 29
	recinitar i aranicicis	23

UR5i v2



	7.1	Basic parameters	29
	7.2	Standards and regulations	30
	7.3	Technical parameters of module	30
	7.4	Technical parameters of GPS	31
	7.5	Other Technical Parameters	32
	7.6	Technical parameters of I/O port	32
		Technical parameters of expansion port	32
8	Rela	ated Documents	33
9	Trou	ubleshooting	34
	9.1	FAQ	34
10	Cus	tomers Support	37
		Customer Support for NAM	
	10.2	Customer Support for Europe	37
	10.3	Customer Support for Asia	37



List of Figures

1	Contents of package
2	Front panel UR5i v2B
3	Front panel UR5i v2F
4	Front panel UR5i v2B SL
5	Front panel UR5i v2F SL
6	Label examples
7	Basic dimensions of plastic box (bottom and front view)
8	Basic dimensions of metal box (bottom and front view)
9	Space around antennas (plastic)
10	Space around antennas (metal)
11	Cable routing (plastic)
12	Cable routing (metal)
13	Space in front of connectors (plastic)
14	Space in front of connectors (metal)
15	Default position of plastic and metal DIN rail clip
16	Removal from the DIN rail
17	Front panel UR5i v2F
18	Power connector
19	Connection of power supply
20	Connecting of the antenna
21	Ejected SIM holder
22	Ethernet connector
23	Connection of ethernet cable
24	PORT1 cable connection
25	PORT2 cable connection
26	USB connector
27	I/O connector
28	Connection of I/O cable
29	Connection of input and output to the router
30	Router reset
31	Router connection
32	Entering the IP address of the router
33	Entering login information
34	Router web interface



List of Tables

1	Router versions	6
2	Delivery identification	7
3	Type of port #1	8
4	Type of port #2	9
5	Type of router box	9
6	Type of power supply	9
7	Specific variation	10
8	Order code examples	10
9	Front panel description	15
10		16
11	Connection of power connector	17
12	Connection of Ethernet connector	20
13	Connection of USB connector	22
14	Connection of I/O port	23
15	Description of reset and restart router	25
16	Basic parameters	29
17	Standards and regulations	30
18	Technical parameters of module	30
19	Technical parameters of GPS	31
20		32
21	Technical parameters of I/O port	32



1. Safety Instructions



Please, observe the following instructions:

- The router must be used in compliance with all applicable international and national laws and in compliance with any special restrictions regulating the utilization of the router in prescribed applications and environments.
- To prevent possible injury and damage to appliances and to ensure compliance with all relevant provisions, use only the original accessories. Unauthorized modifications or the use of unapproved accessories may result in damage to the router and/or a breach of applicable regulations. Unauthorized modifications or use of unapproved accessories may void the warranty.
- The router can not be opened.
- Turn off the router and disconnect it from power supply before handling the SIM card.



- Caution! The SIM card could be swallowed by small children.
- Input voltage must not exceed 36 V DC max.
- Do not expose the router to extreme ambient conditions. Protect the router against dust, moisture and high temperature.
- Only routers with appropriate certification and labelling should be used in locations where
 flammable and explosive materials are present, including gas stations, chemical plants,
 or locations in which explosives are used. We remind users of the duty to observe the
 restrictions concerning the utilization of radio devices at such places.
- Switch off the router when traveling by plane. Utilization of the router on a plane may endanger the operation of the plane or interfere with the mobile telephone network, and may be unlawful. Failure to observe these instructions may result in the suspension or cancellation of telephone services for the respective client and/or may result in legal sanctions.
- When using the router in close proximity to personal medical devices, such as cardiac pacemakers or hearing aids, you must proceed with heightened caution.
- The router may cause interference when used in close proximity to TV sets, radio receivers or personal computers.
- It is recommended that you create an appropriate copy or backup of all important settings that are stored in the memory of the device.



2. Product Disposal Instructions

The WEEE (Waste Electrical and Electronic Equipment: 2012/19/EU) directive was introduced to ensure that electrical/electronic products are recycled using the best available recovery techniques in order to minimize impact on the environment. This product contains high quality materials and components which can be recycled. At the end of it's life this product MUST NOT be mixed with other commercial waste for disposal. The device contains the battery. Remove the battery from the device before disposal. The battery in the device needs to be disposed apart accordingly. Check the terms and conditions of your supplier for disposal information.

3. Router Description

3G UMTS/HSPA router UR5i v2 is used to wirelessly connect various equipments and devices via Ethernet interface 10/100 to the internet or intranet. Thanks to high data transfer speed of up to 14,4 Mbps (download) and upload speed up to 5,76 Mbps it is an ideal wireless solution for traffic and security camera systems, individual computers, LAN networks, automatic teller machines (ATM) and other self-service terminals, etc.

As a standard, this exceptionally fast 3G router UR5i v2 is equipped with one Ethernet 10/100, one USB Host port, one binary input/output (I/O) port and one SIM card. To save and backup communication data a version with two SIM cards is available. The wide range of interface options of the 3G router further expands expansion Port1 and Port2, which are selected by the customer. For Port1 are available: Ethernet port 10/100, serial interface ports RS232, RS485, RS422, MBUS or inputs/outputs (I/O – CNT). Port2 may be equipped with serial interfaces RS232, RS485, RS422, MBUS, wireless interfaces WIFI or WMBUS, SDH expansion port or inputs/outputs (I/O – CNT). Both of ports can be fitted with internal switch (exp. port SWITCH). This 3G wireless router is supplied either in a plastic or metal casing, based on the requirements of the customer.

Configuration is done via web interface protected by password. The router supports creation of VPN tunnels using technologies IPsec, OpenVPN and L2TP to ensure safe communication. Web interface provides detail statistics about the 3G router activities, signal strength, detailed log, etc. Cellular router supports functions: DHCP, NAT, NAT-T, DynDNS, NTP, VRRP, control by SMS and many other function.

Other diagnostic functions ensuring continuous communication include automatic inspection of PPP connection offering an automatic restart feature – in case of connection losses, or hardware watchdog which monitors the status of the router. With the help of a special window (start up script window) you may insert Linux scripts for various actions. For some applications the key option to create several different configurations for one 3G cellular router, the so-called profiles (maximum of 4), and the option to switch between them (for example via SMS, binary input status, etc.) is essential. Cellular routers may automatically upgrade configuration and firmware from server. This allows mass reconfiguration of many routers in one time.

The router also supports additional software like R-SeeNet for permanent traffic monitoring of routers or communication VPN server Digicluster.



Examples of possible applications

- · mobile office
- fleet management
- security system
- telematic

- telemetric
- · remote monitoring
- · vending and dispatcher machines



4. Contents of Package



Basic delivered set of router includes:

- router,
- power supply,
- crossover UTP cable,
- up to three external antennas,
- clip for the DIN rail,
- paper start guide.



Figure 1: Contents of package



Temperature range for power supply is reduced to 0 °C to +40 °C!

As optional accessories can also be supplied the following expansion ports (one for Basic version or two for Full version):

- RS232, RS485/422, MBUS, ETHERNET, CNT, SWITCH, WIFI, WMBUS or SDH.
- Separation columns for mounting expansion boards are included.



5. Router Design

5.1 Router versions

UR5i v2 router is supplied in the following versions (see table below). All versions are available in plastic or metal box according to customer requirements.

Router versions	Router Box	SIM1	SIM2	0/1	USB	PORT1	PORT2	ЕТН
UR5i v2B	Plastic	1 x		1 x	1 x	1 x		1 x
UR5i v2B SL	Metal	1 x		1 x	1 x	1 x		1 x
UR5i v2F	Plastic	1 x	1 x	1 x	1 x	1 x	1 x	1 x
UR5i v2F SL	Metal	1 x	1 x	1 x	1 x	1 x	1 x	1 x

Table 1: Router versions



Figure 2: Front panel UR5i v2B



Figure 4: Front panel UR5i v2B SL



Figure 3: Front panel UR5i v2F

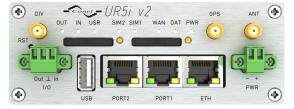


Figure 5: Front panel UR5i v2F SL



5.2 Delivery identification

Trade name	Order code ¹	Description
UR5i v2B	BB-UR2B61v01y-zzzz	Basic version in the plastic box
UR5i v2B SL	BB-UR2B61v02y-zzzz	Basic version in the metal box
UR5i v2F	BB-UR2F61vw1y-zzzz	Full version in the plastic box
UR5i v2F SL	BB-UR2F61vw2y-zzzz	Full version in the metal box

Table 2: Delivery identification

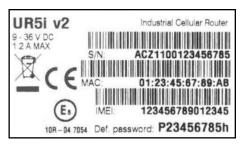




Figure 6: Label examples

¹Order codes are described in detail in a separate chapter.



5.3 Order codes

5.3.1 Order code structure

Order code for **basic** version has following structure:

BB-UR2B61v0xy-zzzz, where:

 $\mathbf{v} = \text{port } #1,$

 \mathbf{x} = type of router box,

y = type of power supply,

z = specific variation.

Order code for full version has following structure:

BB-UR2F61vwxy-zzzz, where:

 $\mathbf{v} = \text{port } #1,$

 $\mathbf{w} = \text{port } #2,$

 \mathbf{x} = type of router box,

y = type of power supply,

z = specific variation.

Letter "v" - port #1

Port type	Letter "v" incode
none	0
ETH	1
RS232	2
RS485	3
RS422	4
MBUS	5
CNT	6
SWITCH	9 ²

Table 3: Type of port #1

۶

²Occupies both, port #1 and port #2. Available for full version only.



Letter "w" – port #2

Port type	Letter "w" in code
none	0
RS232	2
RS485	3
RS422	4
MBUS	5
CNT	6
WiFi	7
WMBUS	8
SDH	9

Table 4: Type of port #2

Letter "x" - type of the router box

Type of router box	Letter "x" in code		
Plastic	1		
Metal	2		

Table 5: Type of router box

Letter "y" - type of the power supply

Type of power supply	Letter "y" in code
none	0
Europe	1
UK & Ireland	2
Australia	3
USA	4

Table 6: Type of power supply



Letter "z" - specific variation

Variation	Letter "z" in code
basic variation	not specified
v2F3 (2x SMA, 1x R-SMA: ANT + GPS + WiFi, router does not have diversity antenna)	-3
v2F4 (2x SMA, 1x R-SMA: ANT + DIV + WMBUS, router has R-SMA antenna connector for WMBUS)	-4
v2F5 (3x SMA: ANT + GPS + WiFi, router does not have diversity antenna)	-5
v2F3 (ANT + GPS + WiFi - RSMA version) & SmartWorx HUB	-3SWH
v2F4 (ANT + DIV + WMBUS - RSMA version) & SmartWorx HUB	-4SWH
v2F5 (ANT + GPS + WiFi - SMA version) & SmartWorx HUB	-5SWH
SmartWorx HUB	-SWH ³

Table 7: Specific variation

5.3.2 Order code examples

Examples of order codes are listed in the table bellow:

Order code	Features – interfaces	Box	Power supply
BB-UR2B610010	HSPA+ module - 1x SIM reader, 1x ETH, 1x USB, 1x I/O,	plastic	none
BB-UR2B611021	HSPA+ module - 1x SIM reader, 2x ETH, 1x USB, 1x I/O	metal	Europe
BB-UR2F614710	HSPA+ module - 2x SIM reader, 1x ETH, 1x USB, 1x I/O, 1x RS422, WiFi	plastic	none
BB-UR2F616322	HSPA+ module - 2x SIM reader, 1x ETH, 1x USB, 1x I/O, 1x CNT (4x BI), 1x RS485	metal	UK & Ireland

Table 8: Order code examples



You can use the order codes configurator on the www.bb-smartcellular.eu webpages.

³The only option for basic version.



5.4 Basic dimensions of the router box

5.4.1 Plastic box

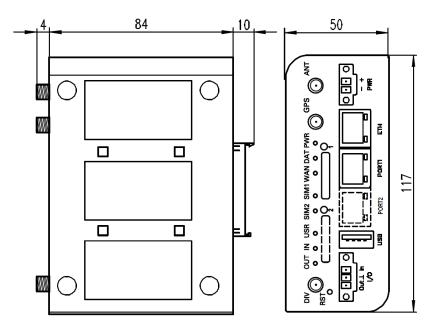


Figure 7: Basic dimensions of plastic box (bottom and front view)

5.4.2 Metal box

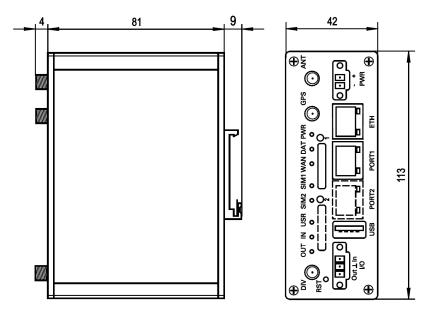


Figure 8: Basic dimensions of metal box (bottom and front view)



5.5 Mounting recommendations

- possibility to be put on a work surface,
- DIN rail EN 60715 with included plastic or metal clip.

For the most of applications with a built-in router in a switch board it is possible to recognize two kinds of environments:

- no public and industry environment of low voltage with high interference,
- public environment of low voltage without high interference.

For both of these environments it is possible to mount router to a switch board, the following there is no need to have examination immunity or issues in connection with EMC according to EN 60439-1 ed.2:00 + A1:04.



If the negative pole of the router is grounded, there is no protection against reversed polarity!



Compliance of EN 60439-1 ed.2:00 + A1:04 specification it is necessary to observe next assembly of the router to the switch – board:

- For whip antennas we recommend to observe a distance of 6 cm from cables and metal surfaces on every side due to the elimination of interference. While using an external antenna except for the switch-board it is necessary to fit a lightening conductor.
- Before mounting a router on sheet-steel we recommend using a "cable" antenna.


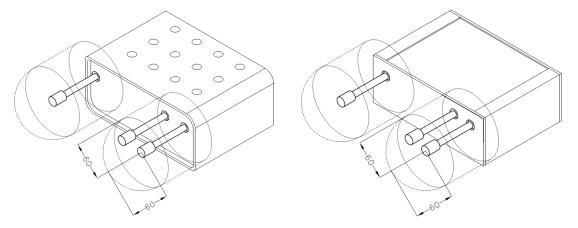


Figure 9: Space around antennas (plastic) Figure 10: Space around antennas (metal)

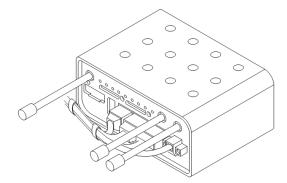

- For every cables we recommend to bind the bunch, we recommend for this use:
 - Length of the bunch (combination of power supply and data cables) can be maximum 1.5 m. If the length of data cables exceeds 1.5 m or in the event of, the cable leads towards the switch board. We recommend installing over voltage protectors (surge suppressors).
 - With data cables they mustn't carry cables with reticular tension \sim 230 V/50 Hz.



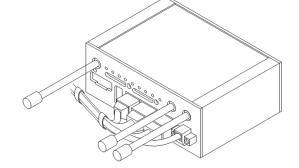


Figure 11: Cable routing (plastic)

Figure 12: Cable routing (metal)

• Sufficient space must be left in front of individual connectors for handling of cables,

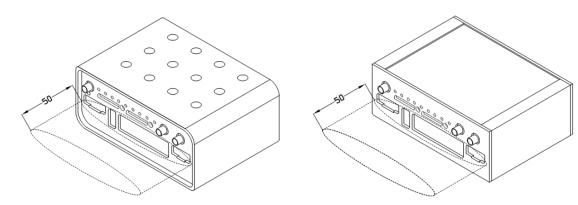


Figure 13: Space in front of connectors (plastic) Figure 14: Space in front of connectors (metal)

• For correct function of the router we recommend to use in the switch-board earth-bonding distribution frame for grounding of power supply of router, data cables and antenna.

5.6 Removal from the DIN rail



The DIN rail clip is suitable for a DIN rail according to EN 60715 standard only. The default position of plastic or metal rail clip, which is used for mounting the router on a DIN rail, is shown in the following figure. Its position can be changed on some models (back or bottom). When changing the position of the DIN rail clip, tighten the screws with max. 0.4 Nm torque.



Figure 15: Default position of plastic and metal DIN rail clip

To remove the router from the DIN rail, push the router down lightly, so the bottom part of the DIN rail clip (hitched to the DIN rail) gets out of the rail and then pull out the bottom part of the router away from the DIN rail.

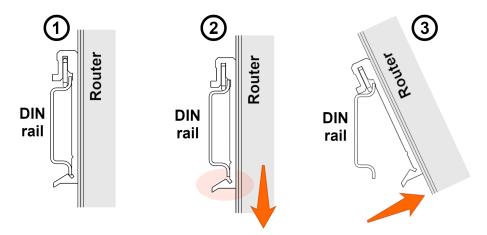


Figure 16: Removal from the DIN rail



5.7 Description of the front panel

On the front panel is the following:

Caption	Connector	Description
PWR	2-pin	Connector for the power supply.
ETH	RJ45	Connector for connection into the local computer network.
PORT1	RJ45	Connector for expansion port RS232, RS458/422, MBUS, ETHERNET, CNT or SWITCH.
PORT2	RJ45	Connector for expansion port RS232, RS485/422, MBUS, SWITCH, WIFI, WMBUS or SDH (only FULL versions).
ANT	SMA	Connector for main antenna.
DIV	SMA	Connector for diversity antenna.
GPS	SMA	Connector for GPS antenna. It can be replaced with connector for WIFI or WMBUS antenna.
WIFI	R-SMA	Connector for WIFI antenna. Available only when the router is equipped with an expansion port WIFI.
WMBUS	SMA	Connector for WMBUS antenna. Available only when the router is equipped with an expansion port WMBUS.
USB	USB-A Host	Connector for connection of USB devices to the router. Supports devices with PL-2303 and FTDI USB/RS232 converters.
I/O	3-pin	Connector for connection of the binary input and output.
SIM1	_	Holder for the first SIM card.
SIM2	_	Holder for the second SIM card (only FULL versions).

Table 9: Front panel description



Figure 17: Front panel UR5i v2F



5.7.1 Status indication

About router status inform eight LED indicators on the front panel. ETH port, PORT1 and PORT2 have two additional LEDs that provide information about port status.

Caption	Color	State	Description
PWR	Green	Blinking On Fast blinking	Router is ready. Starting of the router. Updating firmware.
DAT	Red	Blinking	Communication in progress on radio channel.
WAN	Yellow	1x flash per sec. 2x flash per sec. 3x flash per sec.	Signal strength is good. Signal strength is fair ¹ . Signal strength is poor ² . For value ranges of signal strength see <i>Configuration manual</i> , chapter <i>Mobile WAN Status</i> .
USR	Yellow	Function of this LE	D diode can be selected by user.
OUT	Green	On	Binary output active.
IN	Green	On	Binary input active.
ETH	Green	On Off	Selected 100 Mbit/s. Selected 10 Mbit/s.
ETH	Yellow	On Blinking Off	The network cable is connected. Data transmission. The network cable is not connected.
PORT	Green	Depends on the expansion port (see user's manual for used port).	
PORT	Yellow	Depends on the expansion port (see user's manual for used port).	
SIM1	Yellow	On	The first SIM card is active.
SIM2	Yellow	On	The second SIM card is active.

Table 10: Status indication



State indication of WAN LED is updated every 10 seconds.

¹Or the difference between neighbouring cells is exactly 3 dBm.

²Or the difference between neighbouring cells is smaller than 3 dBm.



5.7.2 Power connector PWR

Panel socket 2-pin.

Pin number	Signal mark	Description
1	VCC(+)	Positive pole of DC supply voltage (+9 to +36 V DC)
2	GND(-)	Negative pole of DC supply voltage

Table 11: Connection of power connector

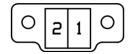


Figure 18: Power connector

Power supply for router is required between +9 V to +36 V DC supply. Protection against reversed polarity without signaling is built into the router. **Note:** The protection against reversed polarity is lost if the negative pole is grounded!

The power consumption during receiving is 2.6 W. The peak power consumption during data sending is 5.5 W. However, values of consumption can be increased, if some expansion port is equipped. For correct operation it is necessary that the power source is able to supply a peak current of 1.2 A.

Circuit example:

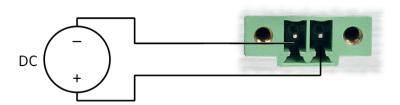


Figure 19: Connection of power supply

- The positive pole VCC is marked by a red socket on the power.
- All metal parts are connected together with the negative pole of power supply (common pole). However, the router box may not be connected to the negative pole properly.



5.7.3 Antenna connector ANT, DIV and GPS (alternatively WIFI or WMBUS)

Main and diversity antennas are connected to the router using the SMA connector on the front panel. Full version of the router also contains the third SMA antenna connector, through which the additional antenna can be connected (if WIFI expansion port is used, this connector is reverse – RSMA).



The router can not operate without connected main antenna marked as ANT!

ANT connector is used to connect the main antenna. For connecting the diversity antenna use the second antenna connector DIV. The third connector (GPS) in the full version of the router is used for additional antenna intended for GPS (router supports active GPS antenna). On user's request, this antenna connector can be modified to WIFI or WMBUS.

The antenna is connected by screwing this antenna to the SMA connector on the front panel of the router (see the figure below).

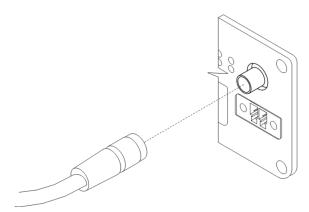


Figure 20: Connecting of the antenna



Diversity antenna improves radio features of the router at low signal strength.



5.7.4 SIM card reader

The SIM card reader for 3 V and 1,8 V SIM cards is placed on the front panel of the router. For getting the router to work is necessary to insert an activated SIM card with an unblocked PIN code. The SIM cards might be of different adjusted APN (Access Point Name).



Supported type of SIM cards: Mini SIM (2FF), dimensions 25.0 x 15.0 x 0.76 mm.

Changing the SIM card:



- Before handling of the SIM card disconnect the router from power supply!
- Press the small yellow button to eject the reader holder.
- Insert the SIM card into the reader holder and slide it in the reader (see the figure below).

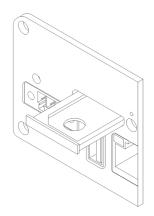


Figure 21: Ejected SIM holder



5.7.5 Ethernet Port ETH

The panel socket RJ45 is used for this interface. The isolation barrier of the Ethernet signal ports against the ground is 1500 V.

Pin	Signal mark	Description	Data flow direction
1	TXD+	Transmit Data – positive pole	Input/Output
2	TXD-	Transmit Data – negative pole	Input/Output
3	RXD+	Receive Data – positive pole	Input/Output
4	_	_	
5	_	_	
6	RXD-	Receive Data – negative pole	Input/Output
7	_	_	
8	_	-	

Table 12: Connection of Ethernet connector



Figure 22: Ethernet connector



ETH port is not PoE (Power over Ethernet) compatible!

Plug Ethernet cable into the RJ45 connector labeled as ETH (see the figure below).

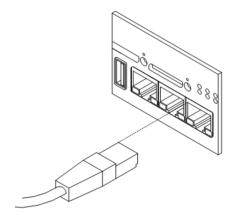


Figure 23: Connection of ethernet cable



5.7.6 PORT1

The PORT1 is equipped on customer's request with one of the offered expansion ports:

- RS232
- RS485
- RS422
- ETHERNET
- MBUS
- CNT
- SWITCH (together with PORT2)



Description and examples of expansion ports connection can be found in user's guide for corresponding expansion port.

Plug cable for the first expansion port into the RJ45 connector labeled as PORT1 (see the figure below).

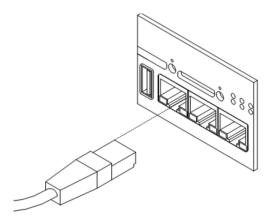


Figure 24: PORT1 cable connection

5.7.7 PORT2

The PORT2 is equipped on customer's request with one of the offered expansion ports:

- RS232
- RS485
- RS422
- MBUS

- SDH
- SWITCH (together with PORT1)
- WIFI
- WMBUS



PORT2 is available only in the Full version of the router! Description and examples of expansion ports connection can be found in user's guide for corresponding expansion port.



Plug cable for the second expansion port into the RJ45 connector labeled as PORT2 (see the figure below).

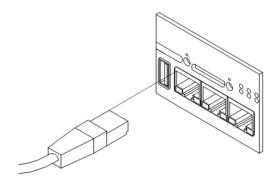


Figure 25: PORT2 cable connection

5.7.8 USB Port

Panel socket USB-A.

Pin	Signal mark	Description	Data flow direction
1	+5 V	Positive pole of 5 V DC supply voltage, 0.5 A	
2	USB data -	USB data signal – negative pole	Input/Output
3	USB data +	USB data signal – positive pole	Input/Output
4	GND	Negative pole of DC supply voltage	

Table 13: Connection of USB connector



Figure 26: USB connector



Mounting USB flash drive to the system: To use the USB flash drive in the Linux system of the router, it is necessary to mount it. Use dmesg command to see the name of recently connected device (E. g. sda: sda1) and then use mount command. Example: mount /dev/sda1 /mnt



5.7.9 I/O Port

Panel socket 3-pin.

Pin	Signal mark	Description	Data flow direction
1	BIN0	Binary input	Input
2	GND	Signal ground	
3	OUT0	Binary output	Output

Table 14: Connection of I/O port

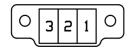


Figure 27: I/O connector

I/O user interface is designed for processing of binary input and control (setting) binary output. Binary output is not switched to ground in the default configuration. Maximum load binary output is 30 V / 100 mA. The constant current supplied by the binary input is 3 mA.

Connect I/O cable into the I/O connector on the front panel of the router and tighten locking screws (see the figure below).

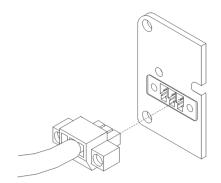


Figure 28: Connection of I/O cable

Example of a circuit describing connection of binary input and output to the router:

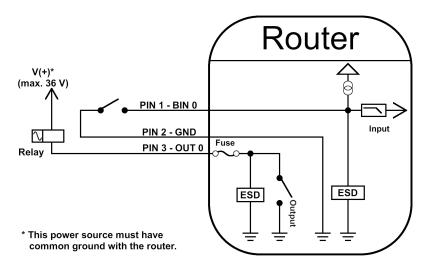


Figure 29: Connection of input and output to the router



5.7.10 Reset

When *PWR* LED starts flashing on the front panel, it is possible to restore the default configuration of the router by pressing the *RST* button on the front panel. After pressing this button the default configuration is restored and then router reboots (green LED will be on).



For pressing the *RST* button could be used a narrow screwdriver.

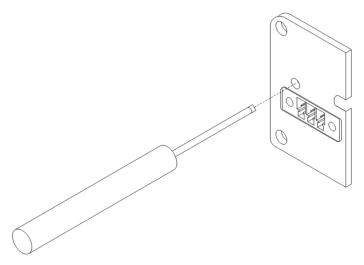


Figure 30: Router reset



We recommend backing up configuration of the router (see *Configuration manual for v2 routers*) because reset of the router sets the configuration to the default state.

It is important to distinguish between reset and reboot the router.

Action	Router behavior	Invoking events
Reboot	Turn off and then turn on router	Disconnect and connect the power, Press the <i>Reboot</i> button in the web configuration
Reset	Restore default configuration and reboot the router	Press RST button

Table 15: Description of reset and restart router

6. First Use

6.1 Connecting the router before first use

Before putting the router into operation it is necessary to connect all components which are required to run your applications. Don't forget to insert SIM card.



The router can not operate without connected antenna, SIM card and power supply. If the antenna is not connected, router can be damaged.

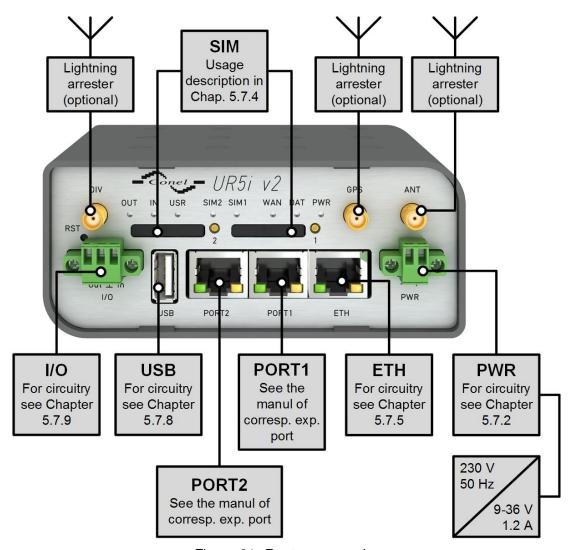


Figure 31: Router connection

6.2 Start

The router is put into operation when the power supply is connected to this router. By default, the router will automatically start to log on to the default APN. DHCP server will start to assign addresses for devices on the Ethernet port ETH0. Router's behavior can be changed via the web interface. This is described in detail in the *Configuration manual for v2 routers*.

The power consumption during receiving is 2.6 W. The peak power consumption during data sending is 5.5 W. However, values of consumption can be increased, if some expansion port is equipped. For correct operation it is necessary that the power source is able to supply a peak current of 1 A.

6.3 Configuration



If no SIM card is inserted in the router, it is not possible to operate. Inserted SIM card must have activated data transmission.

6.3.1 Configuration over web browser

For status monitoring, configuration and administration of the router is available a web interface which can be accessed by entering the IP address of the router into the web browser. The default IP address of the router is 192.168.1.1.

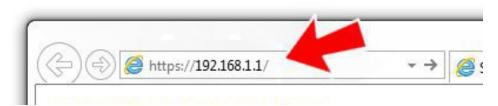


Figure 32: Entering the IP address of the router

Configuration may be performed only by the user "root". The default password is printed on the router's label. Change the default password as soon as possible!



Figure 33: Entering login information

¹If the router's label does not contain a unique password, use the password "root".



After successfully entering login information user gains access to the router via his internet browser.

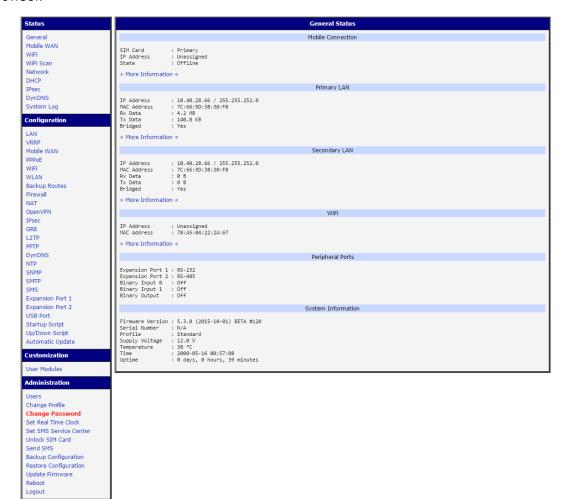


Figure 34: Router web interface



A detailed description of the router settings via the Web interface can be found in the document *Configuration manual for v2 routers.*

6.3.2 Configuration over SSH or Telnet

Device management can be done by accessing the device through the *Secure Shell* (SSH) or the *Telnet* protocol. The default IP address of the device is 192.168.1.1. Standard TCP ports are used, 22 for the *SSH* and 23 for the *Telnet*. Please note, that access is permitted for users of the admin role only and that the *Telnet* protocol is disabled by default. For a detailed description of *SSH* and *Telnet* configuration, see the *Configuration Manual*.



7. Technical Parameters

7.1 Basic parameters

UR5i v2		
Temperature range	Operating Storage	-40 °C to +75 °C -40 °C to +85 °C
Humidity	Operating Storage	0 to 95 % relative humidity non condensing 0 to 95 % relative humidity non condensing
Altitude	Operating	2000 m/70 kPa
Degree of protection		IP30
Supply voltage		9 to 36 V DC
Battery for RTC		CR1225
Consumption	Idle GPRS UMTS	2.6 W to 3.5 W (GPRS transmission) to 5.5 W (UMTS transmission)
Dimensions	Plastic box Metal box	51 x 87 x 116 mm (DIN 35 mm) 42 x 87 x 113 mm (DIN 35 mm)
Weight		UR5i v2 – 150 g UR5i v2 SL – 280 g
Antenna connector		3x SMA – 50 Ohm
User interface	ETH USB PORT1 PORT2	Ethernet (10/100 Mbps) USB 2.0 On customer's request On customer's request

Table 16: Basic parameters



7.2 Standards and regulations

The router complies with the following standards and regulations.

Standards and regulations		
Telecom and emission	ETSI EN 301 511 V12.5.1, ETSI EN 300 440 V2.1.1, ETSI EN 301 908-1 V11.1.1, ETSI EN 301 908-2 V11.1.1, ETSI EN 300 328 V2.1.1, ETSI EN 300 220-2 V3.1.1	
EMC	ETSI EN 301 489-1 V2.1.1, ETSI EN 301 489-3 V2.1.1, Draft ETSI EN 301 489-52 V1.1.0, ETSI EN 301 489-17 V3.1.1	
Safety	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013 + AC:2011, EN 62311:2008	
E-Mark – EMC for devices in transportation	E-Mark homologation number: 10R – 04 7054	

Table 17: Standards and regulations

7.3 Technical parameters of module

HSPA+ module	
HSPA+ parameters	Bit rate 14,4 Mbps (DL) / 5,76 Mbps (UL) 3GPP rel. 6/7 standard Data compress 3GPP
UMTS parameters	Bit rate 384 kbps (DL) / 384 kbps (UL) 3GPP rel. 4 standard
GPRS/EDGE parameters	EDGE bit rate 237 kbps (DL) / 237 kbps* (UL) GPRS bit rate 85,6 kbps (DL) / 85,6 kbps* (UL) Multislot class 12, CS 1 to 4, 3GPP rel. 99/4 standard
Support channels	UMTS/HSDPA/HSUPA/HSPA+: B6 (800 MHz), B5 (850 MHz), B8 (900 MHz), B2 (1900 MHz), B1 (2100 MHz) GSM/GPRS/EDGE: 850/900/1800/1900 MHz Max power – typical 26–33 dBm

Table 18: Technical parameters of module



7.4 Technical parameters of GPS

GPS specifications	
Antenna	SMA 50 Ω – active
Protocols	NMEA 0183 v3.0
Frequency	1575.42 MHz
Sensitivity	Tracking: -161 dBm* Acquisition (Assisted): -158 dBm** Acquisition (Standalone): -145 dBm**
Acquisition time	Hot start: 1 s Warm start: 29 s Cold start: 32 s
Accuracy	Horizontal: < 2m (50 %); < 5 m (90 %) Altitude: < 4 m (50 %); < 8 m (90 %) Velocity: < 0.2 mps

Table 19: Technical parameters of GPS

^{*} Tracking sensitivity is the lowest GPS signal level for which the device can still detect an in-view satellite 98 % of the time when in sequential tracking mode.

^{**} Acquisition sensitivity is the lowest GPS signal level for which the device can still detect an in-view satellite 50 % of the time.



7.5 Other Technical Parameters

Other technical parameters		
CPU	32b ARM microprocessor 0.25 DMIPS per MHz	
Flash memory	16 MB DDR SDRAM	
RAM	64 MB	
M-RAM	128 kB	

Table 20: Other technical parameters

7.6 Technical parameters of I/O port

Binary input and output		
Input/Output	Binary input	Reed contact with trigger level 1.3 up to 1.4 V
	Binary output	100 mA/max. 30 V

Table 21: Technical parameters of I/O port

7.7 Technical parameters of expansion port

Technical parameters of expansion ports are provided in separate manuals.



8. Related Documents

- [1] Advantech Czech: Start Guide for v2 routers,
- [2] Advantech Czech: Configuration Manual for v2 Routers,
- [3] Advantech Czech: User's manual Expansion port RS232,
- [4] Advantech Czech: User's manual Expansion port RS485/422,
- [5] Advantech Czech: User's manual Expansion port MBUS,
- [6] Advantech Czech: User's manual Expansion port CNT,
- [7] Advantech Czech: User's manual Expansion port ETH,
- [8] Advantech Czech: User's manual Expansion port SWITCH,
- [9] Advantech Czech: User's manual Expansion port WIFI,
- [10] Advantech Czech: User's manual Expansion port WMBUS,
- [11] Advantech Czech: User's manual Expansion port SD,
- [12] Advantech Czech: Application note Expansion port mounting,
- [13] Advantech Czech: Application note Programmer guide.

9. Troubleshooting

If you cannot connect to the router from your PC, your network card may be configured in such a way that it is not possible to connect to the router. Take one or more of the following steps in order to solve the problem:

- Make sure your PC's network card is configured to obtain the IP address form the DHCP server (by default the DHCP server is running in the router).
- Set the communication rate to 10 MB/s in the properties of your network card.
- Connect the router to the PC via Switch.
- Connect the router to the PC, start the router first and then start the PC after the router's initialization.

9.1 FAQ

In the router reboots itself and the Ethernet connection fails.

• The router will not work well without an antenna. Keep the antenna as far as possible from the power supply.

Ethernet connection fails or is not establishing.

• It is possible to turn auto negotiation off and set a rate and duplex manually on the Ethernet interface of the router. Available on "LAN Configuration" page in the router.

Mobile WAN connection fails.

- Check the signal power ("Mobile WAN status" page). If the signal power is weak, you will have to use a better antenna. If the neighbouring cells have a similar signal strength, you will need to use a directional antenna. For proper operation, the signal levels have to be good.
- Try to enable automatic ping from the router, which will check the connection when there are no data running and in the case of a failed ping, restart the connection. This can be done on the "Mobile WAN Configuration" page in the router in the "Check connection" section. "Enable + bind" option is to ensure the ping goes always through Mobile WAN network interface.

Mobile WAN connection cannot be established.

- Check the "Mobile WAN Configuration" APN, name, password and IP address (all can be blank).
- Try to enter the SIM card PIN verify that the SIM card has the PIN code entered. Available on "Unlock SIM Card" page in the "Administration" section.





- In a private APN it is not recommended to get the DNS settings from operator (on "Mobile WAN" page)
- Go to "System Log" page in "Status" section and observe where the error occurs.

I cannot connect from the Internet to the device behind the router. I have NAT enabled.

• The device's gateway has to be configured so it points to the router.

Lan't access my Web server placed behind the router over NAT.

• The remote HTTP access to the router has to be disabled on "NAT Configuration" page in the router. Also enable "Send all remaining incoming packets to default server" feature and fill in the IP address of your Web server. On the Web server, the default gateway has to be the IP address of the router.

DynDNS doesn't work.

- With private APN this will not work.
- If the same IP address is recorded in your canonic name as a dynamically assigned address, it means that the operator is using NAT or a firewall.
- You can verify NAT using ping to your server with static address and then compare with router's IP address.
- You can verify a Firewall by accessing remotely to the router's Web interface.
- The operator may not provide the address of DNS server and without DNS server's address it is impossible to connect to the dyndns.org server. The following messages will be shown in the System Log:
 - DynDNS daemon started
 - Error resolving hostname: no such file or directory
 - Connect to DynDNS server failed

L2TP or IPSec isn't establishing.

• Check the "System Log" page for error messages.

IPSec tunnel establishes but the communication does not run.

• Probably there are bad routing rules defined in the connected devices, or the default gateway.

I switched the router to offline mode by SMS message, but the router is in online mode after reboot.

• SMS messages do not change the router configuration. They remain in effect only until the router is rebooted.



Serial communication is not working.

 Verify that the router model supports serial communications. Also verify the serial communication settings. To do so, open the router's configuration menu via the web browser, select the appropriate "Expansion Port" from "Configuration" part of the menu and verify the settings.

Is the router Cisco compatible? Can I use the Cisco configuration?

• No, the Firmware in the router (Conel OS) is based on Linux with BusyBox. Thus the Cisco configuration cannot be used. But network connections are defined by standards so connecting the router to the Cisco or other networking devices is possible and will be compatible.

FTP or SFTP does not work

• FTP will work on v2 routers only. You can use SFTP on all routers to transfer files to/from the router. If having troubles with FTP on v2 routers, make sure you have FTP enabled: "Configuration" section, "Services", "FTP". Then you can connect with any client on port 21 with name and password same as for the Web interface. If having troubles with SFTP, make sure you have SSH enabled: "Configuration" section, "Services", "SSH". Then you can connect with any client on port 22 with name and password same as for the Web interface.

How can I connect to the router's command line? (SSH, Telnet)

 You can use SSH on all routers or Telnet on v2 routers only. SSH is enabled by default, but you can verify in Web interface in "Configuration" section, "Services", "SSH". Then connect with any SSH client on port 22 of the router. User and password is the same as for the Web interface. Telnet on v2 routers can be enabled here: "Configuration" section, "Services", "Telnet".



10. Customers Support

10.1 Customer Support for NAM

E-mail: support@advantech-bb.com Web: www.advantech-bb.com

10.2 Customer Support for Europe

E-mail: iiotcustomerservice@advantech.eu

Web: www.advantech-bb.com

10.3 Customer Support for Asia

E-mail: icg.support@advantech.com.tw

Web: www.advantech.com



Upkeep - Advices:

- The SIM-card must be handled carefully as with a credit card. Don't bend, don't scratch on this and do not expose to static electricity.
- During cleaning of the router do not use aggressive chemicals, solvents and abrasive cleaners!

Hereby, Advantech Czech s.r.o. company declares that the radio equipment narrated in this user's guide is in compliance with EU Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet address: www.advantech-bb.cz/eudoc