


Hardware Manual

LAN Cellular Router **SmartFlex SR300**

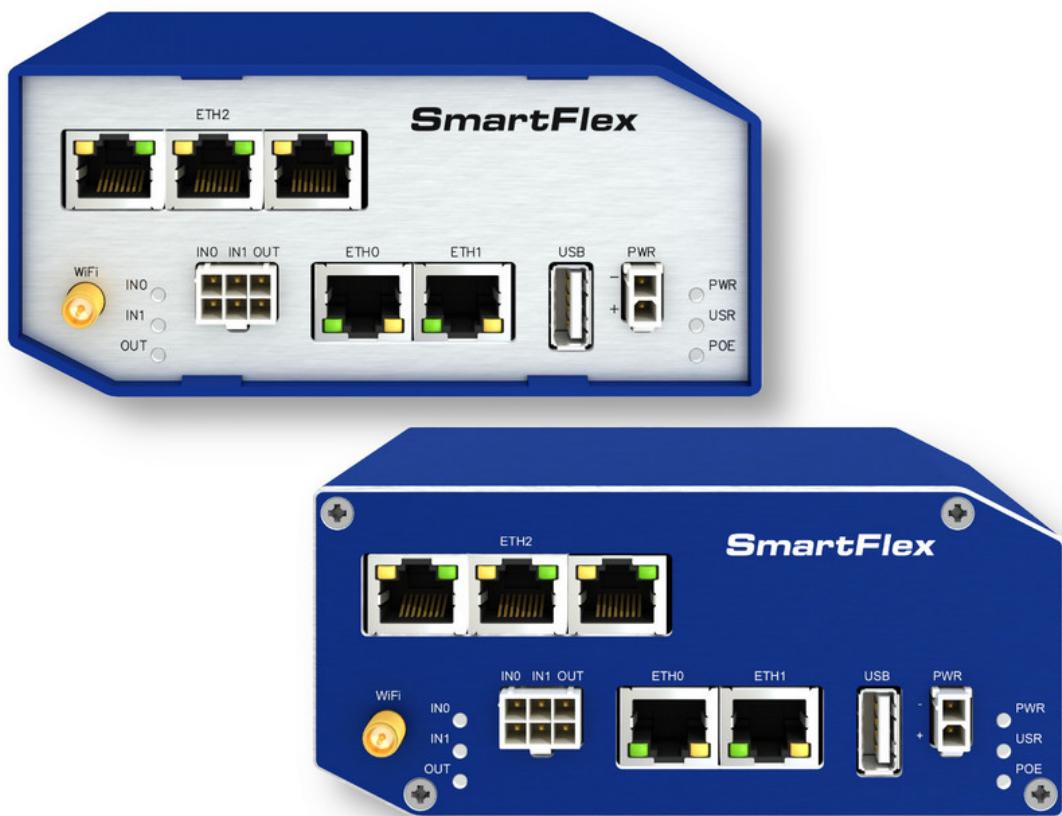

© 2026 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system, without prior written consent. Information in this manual is subject to change without notice and does not represent a commitment by Advantech.

Advantech Czech s.r.o. shall not be liable for any incidental or consequential damages arising from the use, performance, or furnishing of this manual.

All brand names used in this manual are registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not imply endorsement by the trademark holder.

Used symbols

Important



Important — Indicates a risk to personal safety or potential damage to the router. Follow these instructions precisely to prevent injury or equipment damage.

Warning



Warning — Highlights conditions that may cause malfunction, loss of data, or unexpected behavior in specific situations. Read carefully before proceeding.

Info



Info — Provides helpful tips, context, or references that improve understanding but are not strictly required to complete the task.

Code Example



Code Example – Copy-pasteable configuration snippets or CLI commands.

Contents

1. Router Description	1
2. Package Contents	2
3. Router Design	3
3.1 Router Versions	3
3.2 Identification of Delivery	4
3.3 Order Codes	5
3.4 Basic Router Box Dimensions	7
3.5 Mounting Recommendations	7
3.6 Removal From the DIN Rail	8
3.7 Description of the Rear Panel	9
3.8 Description of the Front Panel	9
3.8.1 Status Indication	10
3.8.2 Power Connector PWR	11
3.8.3 Antenna Connector Wi-Fi	13
3.8.4 microSD Card Reader	14
3.8.5 Ethernet Ports (ETH0 and ETH1)	15
3.8.6 Power over Ethernet (PoE)	16
3.8.7 USB Port	18
3.8.8 I/O Port	19
3.8.9 Reset	21
3.9 Interfaces Description	22
3.9.1 SWITCH Interface	22
4. First Use	23
4.1 Connecting the Router Before First Use	23
4.2 Start	24
4.3 Configuration	24
4.3.1 Configuration over Web Browser	24
5. Technical Parameters	26
5.1 Basic Technical Parameters	26
5.2 Standards and Regulations	27
5.3 Type Testing and Environmental Conditions	28
5.4 Parameters of Wi-Fi	29
5.5 Parameters of I/O Ports	29
5.6 Parameters of PoE	30
5.7 Other Parameters	30
Appendix A: Troubleshooting	31
Appendix B: Customer Support	33
Appendix C: Regulatory & Safety Information	34

List of Figures

1	Package contents	2
2	Switch version (plastic)	3
3	Switch and Wi-Fi version (plastic)	3
4	Switch version (metal)	3
5	Switch and Wi-Fi version (metal)	3
6	Label example	4
7	Basic router box dimensions	7
8	Default position of plastic and metal DIN rail clip	8
9	Removal from the DIN rail	8
10	SPECTRE v3 ERT front panel	9
11	Power connector	11
12	Power supply connection	11
13	Antenna connector	13
14	microSD card	14
15	Ethernet connector	15
16	Ethernet cable connection	15
17	PoE PD use	16
18	PoE PSE use	17
19	USB connector	18
20	I/O connector	19
21	Functional block diagram of the digital interface	20
22	Router reset	21
23	Version with switch board	22
24	Router connection	23
25	Entering the IP address of the router	24
26	Entering login information	24
27	Router web interface	25

List of Tables

1	Router versions	3
2	Identification of delivery	4
3	Order code overview	5
4	Power over Ethernet	5
5	Router box type	6
6	Power supply type	6
7	Order code examples	6
8	Front panel description	9
9	LED status indication	10
10	Connection of power connector	11
11	Technical specifications of the microSD card	14
12	Ethernet connection	15
13	Ethernet port insulation strength	15
14	Connection of USB connector	18
15	Connection of I/O port	19
16	Characteristics of inputs	19
17	Description of router reset and restart	21
18	Switch interface state indication	22
19	Switch interface parameters	22
20	Basic parameters	26
21	Standards and regulations	27
22	Type testing and environmental conditions	28
23	Technical parameters of Wi-Fi	29
24	Characteristics of inputs	29
25	PoE PD: parameters for corresponding PSE	30
26	PoE PSE parameters	30
27	Other technical parameters	30

1. Router Description

LAN Industrial router SmartFlex SR300 is an ideal device for the realization of a secure connection of two local area networks (LANs). Interconnection is carried out using two ETHERNET 10/100 interfaces and secure tunnel (IPSec, OpenVPN, L2TP).

The other equally important ways to use this router is to connect any device with RS232, RS485 or I/O interface to the local network (LAN). For this purpose, SmartFlex SR300 is equipped with two ETHERNET 10/100 ports and other interfaces based on the version of the router chosen by the user.

As a standard, this router is equipped with two ETHERNET 10/100 ports, one USB 2.0 Host port, two binary inputs and one output (I/O connector). An integral part of the router is also a memory card reader placed on the rear panel. This reader allows SmartFlex SR300 to operate with microSD cards and increase storage space of the router up to 64 GB (32 GB in case of SDHC cards). The router can be equipped with Wi-Fi module on customer's request, however it is not possible to order it and add to the router later. The router can be equipped with PoE PD (Power over Ethernet – powered device) to power the router via Ethernet, or PoE PSE (power source equipment) to power other devices by the router. Richer range of interfaces is available in versions containing three switched Ethernets. SmartFlex SR300 is supplied either in a plastic or metal casing, based on the requirements of the customer.

For configuration of the industrial router is available web interface protected by password. Web interface provides (after logging in) detailed statistics about the router activities, signal strength, detailed system log etc. This device supports the creation of VPN tunnels using technologies IPSec, OpenVPN and L2TP for secure communications. There are also supported functions such as DHCP, NAT, NAT-T, DynDNS, NTP, VRRP, backup primary connection and many other functions.

Other diagnostic functions ensuring continuous communication include hardware watchdog which monitors the status of the router. Using a special window (start up script window) you may insert Linux scripts for various actions. For some applications is crucial the possibility to create several different configurations for one router. These configurations can be switched as necessary (for example by binary input status, etc.). SmartFlex routers may automatically upgrade configuration and firmware from server. This allows mass reconfiguration of many routers in one time.

This model is fully compatible with [WebAccess/DMP](#), Advantech's powerful, flexible, and secure remote device management platform. WebAccess/DMP enables comprehensive remote management, monitoring, and troubleshooting of network devices without the need for on-site access. The platform supports features such as VPN management, digital twin functionality, customizable dashboards, multi-tenancy, and strict security controls including PKI, two-factor authentication, auditing, permission management, and alerts.



Examples of possible applications

- fleet management
- security system
- telematic
- telemetric
- remote monitoring
- vending and dispatcher machines

2. Package Contents



Basic delivered set of router includes:

- router,
- power supply,
- crossover UTP cable,
- 2.4 GHz Wi-Fi antenna (**only for version with Wi-Fi**),
- loose power and I/O connector (+8 pins¹),
- clip for the DIN rail,
- printed *Quick Start Guide Leaflet*.



Figure 1: Package contents



Temperature range for power supply is reduced to 0 °C to +40 °C!

¹These pins are designed for cables with a diameter from 0.2 to 0.8 mm²

3. Router Design

3.1 Router Versions



Check with your local Advantech sales representative for available options and HW configurations.

SmartFlex SR300 router is supplied in the following versions (see table below). All versions are available in plastic or metal box according to customer requirements. All versions are available with PoE PD (Power over Ethernet – powered device) so you can power the router from both ETH0 and ETH1 interfaces, or with PoE PSE (power source equipment) so you can power other devices by the router.

Router versions	BIN	BOUT	USB	SD	ETH	Wi-Fi
Version with SWITCH board	2 x	1 x	1 x	1 x	5 x	
Version with SWITCH board & Wi-Fi	2 x	1 x	1 x	1 x	5 x	1 x

Table 1: Router versions

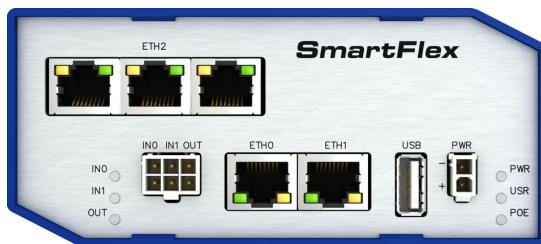


Figure 2: Switch version (plastic)



Figure 4: Switch version (metal)

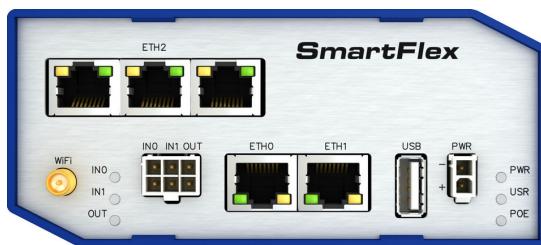


Figure 3: Switch and Wi-Fi version (plastic)



Figure 5: Switch and Wi-Fi version (metal)

3.2 Identification of Delivery

Trade name	Product name	Description
SmartFlex SR300	SmartFlex	Router in a plastic or metal box

Table 2: Identification of delivery

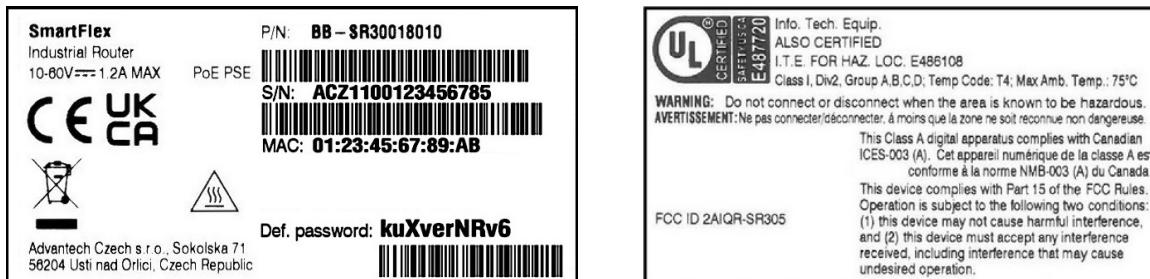


Figure 6: Label example

3.3 Order Codes

The table below provides an overview of the order codes.

Product Name	Order code	Features – interfaces
SR300	BB-SR3000x1yz*	5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader,
SR300	BB-SR3001x1yz*	5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, Wi-Fi

Table 3: Order code overview



* Replace the letters "x", "y" and "z" with the values from the following tables:

Letter "x" – Power over Ethernet (PoE)

Power over Ethernet (PoE)	Number "x" in code
Version without PoE	0
PoE PSE – Power Source Equipment – powers other devices	8
PoE PD – Powered Device – can be powered via Ethernet	9

Table 4: Power over Ethernet

Letter "y" – type of the router box

Type of box	Number "y" in code
Plastic	1
Metal	2

Table 5: Router box type

Letter "z" – type of the power supply connector

Type of power supply	Number "z" in code
Without accessories	0
European	1
Interchangeable plug adapters (EU, US, UK, AUS)	5

Table 6: Power supply type

Examples of complete order code:

Order code	Features – interfaces	Box	Power supply
BB-SR30008111	5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, PoE PSE	plastic	Europe
BB-SR30019121	5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, Wi-Fi, PoE PD	metal	Europe
BB-SR30000113	5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader	plastic	Australia
BB-SR30010120	5x ETH, 1x USB, 2x BI, 1x BO, 1x microSD reader, Wi-Fi	metal	None

Table 7: Order code examples

3.4 Basic Router Box Dimensions

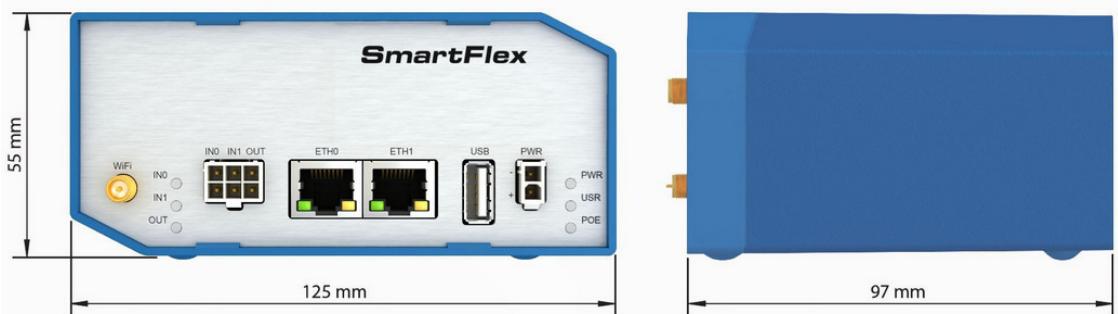


Figure 7: Basic router box dimensions

3.5 Mounting Recommendations

- Possibility to be put on a work surface,
- DIN rail EN 60715 with included plastic or metal clip.

For the most of applications with a built-in router in a switch board it is possible to recognize two kinds of environments:

- no public and industry environment of low voltage with high interference,
- public environment of low voltage without high interference.

For both of these environments, it is possible to mount router to a switch board, the following there is no need to have examination immunity or issues in connection with EMC according to EN 60439-1 ed.2:00 + A1:04.



Compliance of EN 60439-1 ed.2:00 + A1:04 specification it is necessary to observe next assembly of the router to the switch – board:

- For every cables we recommend to bind the bunch, we recommend for this use:
 - Length of the bunch (the combination of power supply and data cables) can be maximum 1.5 m. If the length of data cables exceeds 1.5 m or in the event of, the cable leads towards the switch – board. We recommend installing over – voltage protectors (surge suppressors).
 - With data cables they mustn't carry cables with reticular tension ~ 230 V/50 Hz.
- Sufficient space must be left before individual connectors for handling of cables,
- For correct function of the router we recommend to use in the switch-board earth-bonding distribution frame for grounding of power supply of router, data cables and antenna.

3.6 Removal From the DIN Rail

The DIN rail clip is suitable for a DIN rail according to EN 60715 standard only. The default position of plastic or metal rail clip, which is used for mounting the router on a DIN rail, is shown in the following figure. Its position can be changed on some models (back or bottom). When changing the position of the DIN rail clip, tighten the screws with max. 0.4 Nm torque.

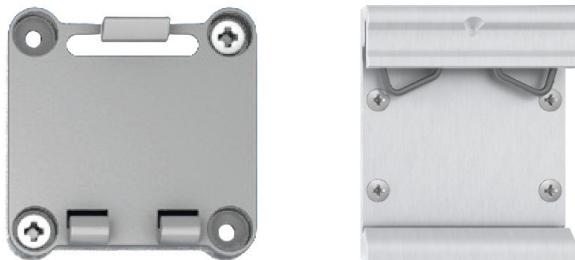


Figure 8: Default position of plastic and metal DIN rail clip

To remove the router from the DIN rail, push the router down lightly, so the bottom part of the DIN rail clip (hitched to the DIN rail) gets out of the rail and then pull out the bottom part of the router away from the DIN rail.

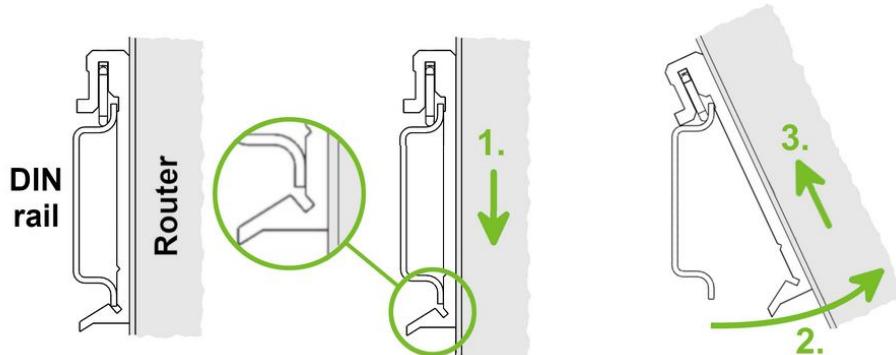


Figure 9: Removal from the DIN rail

3.7 Description of the Rear Panel

The rear panel contains only one holder for SD card (*SD*) and *RST* button used to restore default configuration and reboot the router.

3.8 Description of the Front Panel

On the front panel is the following:

Caption	Connector	Description
PWR	2-pin	Connector for the power supply
ETH0	RJ45	Connector for connection into the computer network, PoE (only for PoE PSE or PoE PD versions)
ETH1	RJ45	Connector for connection into the computer network, PoE (only for PoE PSE or PoE PD versions)
Wi-Fi	R-SMA	Connector for Wi-Fi antenna (only for versions with Wi-Fi module!)
USB	USB-A 2.0 Host	Connector for connection of USB devices to the router. Supports devices with PL-2303 and FTDI USB/RS232 converters.
I/O	6-pin	Connector for connection of the binary inputs and output

Table 8: Front panel description

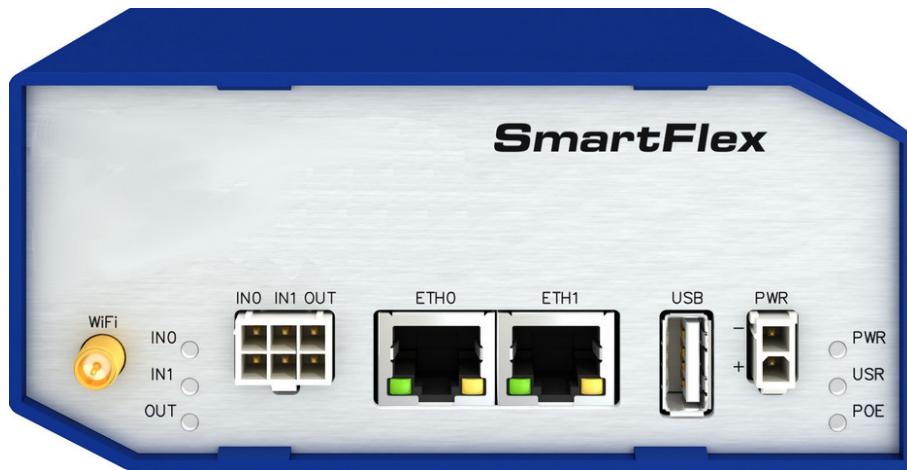


Figure 10: SPECTRE v3 ERT front panel

3.8.1 Status Indication

There are status LEDs on the front panel to provide router status information. Each ETH port has two additional LEDs that provide information about the port status.

Caption	Color	State	Description
PWR	Green	On Blinking Fast blinking	The router is booting up. The router booted up and is ready. The router firmware is being updated.
USR	Yellow	—	The function of this LED is user-defined.
POE	Yellow Green	On Blinking On Blinking Off	PSE: The insufficient voltage on the PWR connector. PSE: The powered device takes too much power. ¹ PD: The power supply is present on an ETH port. PSE: A correct power supply on the PWR connector. PSE: A device is powered via one of the ETH ports. PD: The power supply is not present on an ETH port. PSE: The PoE disabled in the Ethernet configuration.
IN0	Green	On	The first binary input is active.
IN1	Green	On	The second binary input is active.
OUT	Yellow	On	The binary output is active.
ETH0 ETH1	Green	On Off	Selected 100 Mbit/s Selected 10 Mbit/s
ETH0 ETH1	Yellow	On Blinking Off	The network cable is connected Data transmission The network cable is not connected

Table 9: LED status indication

¹ Additionally it can indicate a device without PoE support connected on the other side of the cable. In this case the indication is caused by low impedance (lower than 500 Ω) of the device without PoE support. This can be solved by disabling the PoE PSE feature on the relevant ETH port in the router's Web interface, see *Configuration manual* [1].

3.8.2 Power Connector PWR

Panel socket 2-pin.

Pin number	Signal mark	Description
1	GND(-)	Negative pole of DC supply voltage
2	VCC(+)	Positive pole of DC supply voltage

Table 10: Connection of power connector

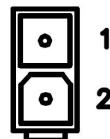


Figure 11: Power connector

i The unit must be supplied by a power supply specified as a Limited Power Source (LPS) according to Annex Q of IEC 62368-1. If the power supply or cable provided with the device is not used, always use cables with a minimum wire size (nominal cross-section) of 0.5 square mm for the power supply connection.

For the power supply parameters, see chapter [5.1 Basic Technical Parameters](#). Protection against reversed polarity, without signaling, is built into the router.

Note: The protection against reversed polarity is lost if the negative pole is grounded!

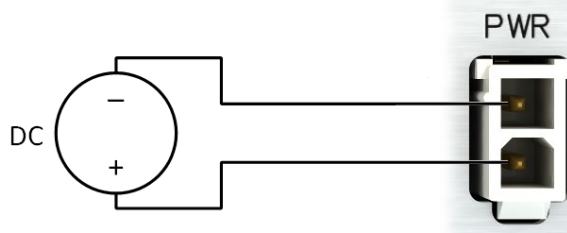


Figure 12: Power supply connection



Note for PoE: See Chapter [3.8.6](#) for information on how PoE versions of the router impact the power supply usage. The power supply for a PoE router has to meet other specific requirements.



All metal parts are connected together with the negative pole of power supply (common pole).

Low Power Mode



In applications requiring low power consumption (such as solar power - not 7/24 mode) is strictly recommended to use LPM mode prior to powering down the entire router.

LPM (Low Power Mode) is a router mode where the router is in sleep mode with minimal power consumption. The router can be woken up from this mode by a signal applied to the BIN1 input or after a pre-determined period of time. Putting the router into LPM mode can be done using the `lpm` command, see [Command Line Interface](#) application note for more details. Consumption in LPM mode may vary depending on the configuration of the router.

3.8.3 Antenna Connector Wi-Fi

If the router is equipped with Wi-Fi module on the customer's request, appropriate antenna is connected to the reverse SMA connector (*Wi-Fi*).

i The external antenna is connected by screwing this antenna to the reverse SMA connector on the router's front panel (see the figure below).

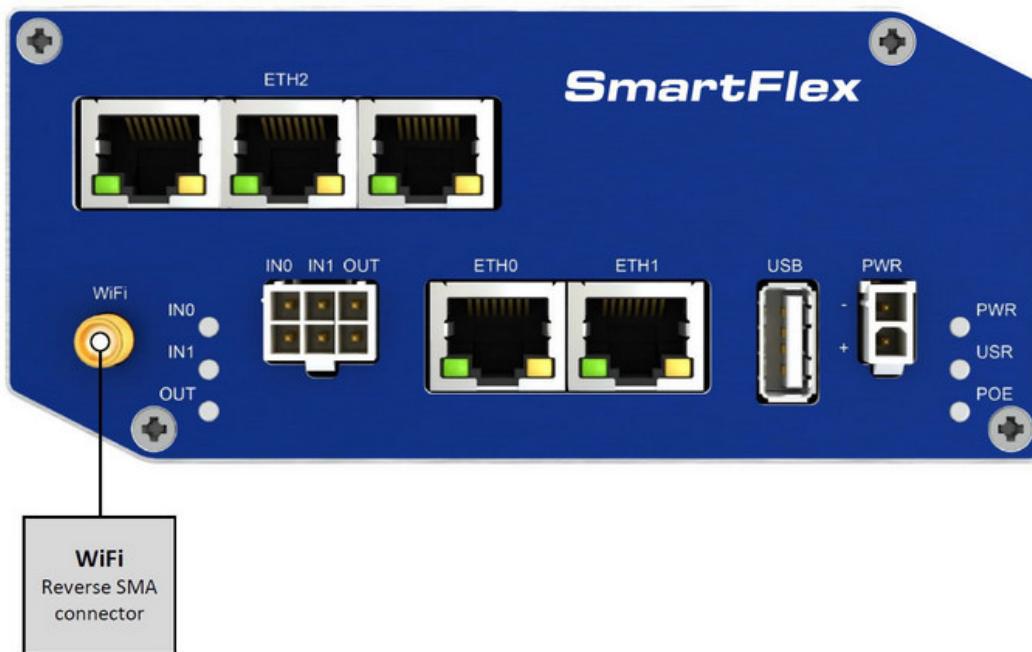


Figure 13: Antenna connector

3.8.4 microSD Card Reader

The microSD card reader is placed on the rear panel of the router (there is only a single slot). This card reader allows the router to operate with memory cards microSD. Technical specifications are stated in the table below.

Technical specifications of microSD card		
Supported technologies		SDHC, SDXC
Supported capacity	SDHC SDXC	up to 32 GB from 32 GB to 64 GB
Supported microSD card filesystems		vfat, ext2, ext3, ext4

Table 11: Technical specifications of the microSD card

Changing the microSD card:

- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- Remove the microSD card and push any other microSD card into the slot until it clicks in place.



Figure 14: microSD card

Mounting microSD Card to the System

It is necessary to mount the microSD card to be able to access it in the system of the router. Follow these steps to mount the card:

- Use the `dmesg` command to see the list of recently connected devices.
- In the output of the command find out the entry for the microSD card, for example:
`mmcblk0: p1`
- To mount the card to to `mnt` directory, use the `mount` command:
`mount /dev/mmcblk0p1 /mnt`

i For more information about the commands for creating, mounting, checking and unmounting a file system on a microSD card, see the application note for [Ext4 Filesystem Utilities](#) router app.

3.8.5 Ethernet Ports (ETH0 and ETH1)

The panel socket RJ45 is used for this interface. The isolation barrier of the Ethernet signal ports against the ground is 1500 V.

Pin	10base-T & 100base-T	PoE (Mode B)
1	Tx+ (Transmit Data+)	—
2	Tx- (Transmit Data-)	—
3	Rx+ (Receive Data+)	—
4	—	PoE + (positive pole)
5	—	PoE + (positive pole)
6	Rx- (Receive Data-)	—
7	—	PoE - (negative pole)
8	—	PoE - (negative pole)

Table 12: Ethernet connection

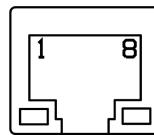


Figure 15: Ethernet connector

The crossover UTP cable (Ethernet cable) plugs into the RJ45 connector labeled as ETH0 or ETH1 (see the figure below).

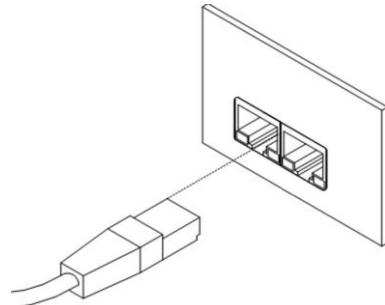


Figure 16: Ethernet cable connection

i The insulation strength of Ethernet ports from each other and from the rest of the router (grounding) is dependent on the router version:

Router Version	Insul. Strength from Router	Insul. Strength between Ports
Without PoE	1.5 kV	1.5 kV
PoE PD	1.5 kV	none
PoE PSE	none	none

Table 13: Ethernet port insulation strength

3.8.6 Power over Ethernet (PoE)

- Available only for models with the PoE feature; see Chapter 3.3 for the order codes.
- You cannot power the router via the ETH2 ports on router versions with an integrated switch (often referred to as "SWITCH" versions). PoE PD functionality is available on the ETH0 and ETH1 ports only.
- The *IEEE 802.3af/PoE* (Type 1) and *IEEE 802.3at/PoE+* (Type 2) standards are supported. The device is Mode B compliant.
- You can use the `pse` command to control the PoE functionality; see the *Command Line Interface* application note.



The power supply voltage for a PoE-equipped router must be between **24 – 60 V DC** for the router to boot up correctly.

Based on the model configuration, the PoE PSE or PoE PD feature can be supported for both Ethernet ports (ETH0 and ETH1).

The PoE PSE version allows the router to power other devices over the Ethernet. The PoE PD version enables the router to be powered by another PoE PSE device over the Ethernet.

PoE PD

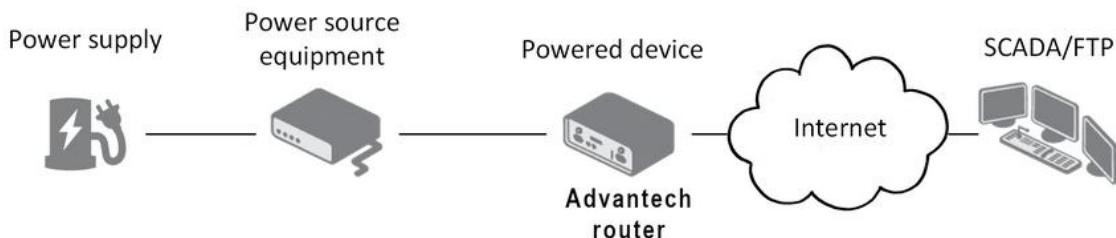


Figure 17: PoE PD use

The PoE PD parameters can be found in Chapter 5.6. The POE LED on the front panel of the router lights up green when voltage is present on an Ethernet port, so the user knows the router can be PoE powered. You can still power the router with this connector even if the router is powered with PoE (in PoE PD version), but the input voltage must be **higher than 15 V DC**. If the input voltage is lower than 15 V DC and the PoE voltage is present (POE LED green on), the router will still be powered from the Ethernet connector via PoE.

PoE PSE

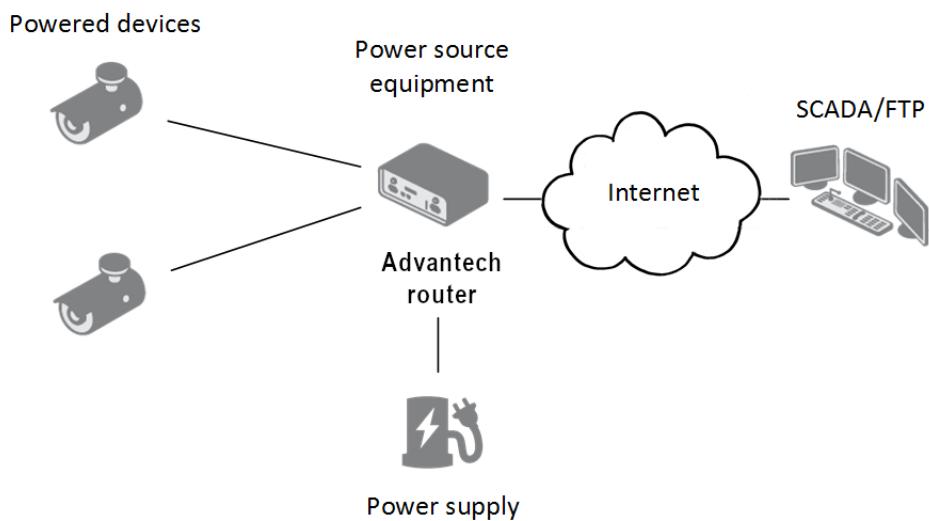


Figure 18: PoE PSE use



The power supply used with the PoE PSE router has to provide voltage from **44 to 57 V DC** and the output power has to be at least **65 W** for full PoE+ use (Class 4) in both Ethernet ports (ETH0 and ETH1).

The PoE PSE parameters can be found in Chapter 5.6. The PoE state is indicated by the POE LED on the front panel of the router, see Chap. 3.8.1. When sufficient voltage (44 to 57 V) and power is available is indicated by the green light. A yellow POE LED indicates insufficient power or voltage through the PWR connector. When a device is being powered from the router, the POE LED will be blinking green. Yellow blinking is shown for an overload (the powered device is using too much power) or a short circuit (incorrect wiring of the cable or of the device without PoE support).

You can enable or disable the PoE PSE feature separately on the ETH0 and ETH1 ports via the Web interface of the router. This can be found in the *LAN* configuration pages (*Primary* for ETH0, *Secondary* for ETH1). When PoE PSE is enabled, you can find the current, voltage, power and power class information on the *General* page of the router's Web interface; see the *Configuration manual* [1].

3.8.7 USB Port

Panel socket USB-A.

Pin	Signal mark	Description	Data flow direction
1	+5 V	Positive pole of 5 V DC supply voltage, 0.5 A	
2	USB data -	USB data signal – negative pole	Input/Output
3	USB data +	USB data signal – positive pole	Input/Output
4	GND	Negative pole of DC supply voltage	

Table 14: Connection of USB connector



Figure 19: USB connector

i The USB port is disabled on overload to prevent its damage (connected device is trying to get too high current). The port is enabled again after the reboot of the router.

Mounting USB Flash Drive to the System

It is necessary to mount the USB flash drive to be able to access it in the system of the router. Follow these steps to mount the drive:

- Use the *dmesg* command to see the list of recently connected devices.
- In the output of the command find out the entry for the microSD card, for example:
`sda: sda1`
- To mount the card to to *mnt* directory, use the *mount* command:
`mount /dev/sda1 /mnt`

i For more information about the commands for creating, mounting, checking and unmounting a file system on a USB Flash Drive, see the application note for [Ext4 Filesystem Utilities](#) router app.

3.8.8 I/O Port

Panel socket 6-pin.

Pin	Signal mark	Description
1	IN0	Binary input 0
2	IN0	Binary input 0
3	IN1	Binary input 1
4	IN1	Binary input 1
5	OUT	Binary output
6	OUT	Binary output

Table 15: Connection of I/O port

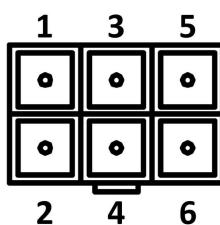


Figure 20: I/O connector

The I/O user Interface is designed for the processing of binary input and control (setting) of binary output. Binary output is open in the default configuration. The isolation strength is 1.5 kV. The pins are isolated from each other with the same strength.

The input circuits are bipolar and allow connection as needed with common plus or minus (according to the connection of an external voltage).

Binary inputs

- Characteristics of inputs:

Logical 0 / 1*	Voltage	Current	Web interface status
log. 1 max	3 V	0.4 mA	Off
log. 0 min	5 V	0.7 mA	On
log. 0 type	12 V	2 mA	On
log. 0 max	60 V	7 mA	On

Table 16: Characteristics of inputs

* The binary input status in the Shell is returned via `io get bin0` or `io get bin1`.

Binary output

- Binary output parameters:
 - 60 V AC / 300 mA
 - 60 V DC / 300 mA
- The current of the binary output is limited by a resettable fuse (300 mA).

Binary inputs and output connections

Binary inputs and output connections example:

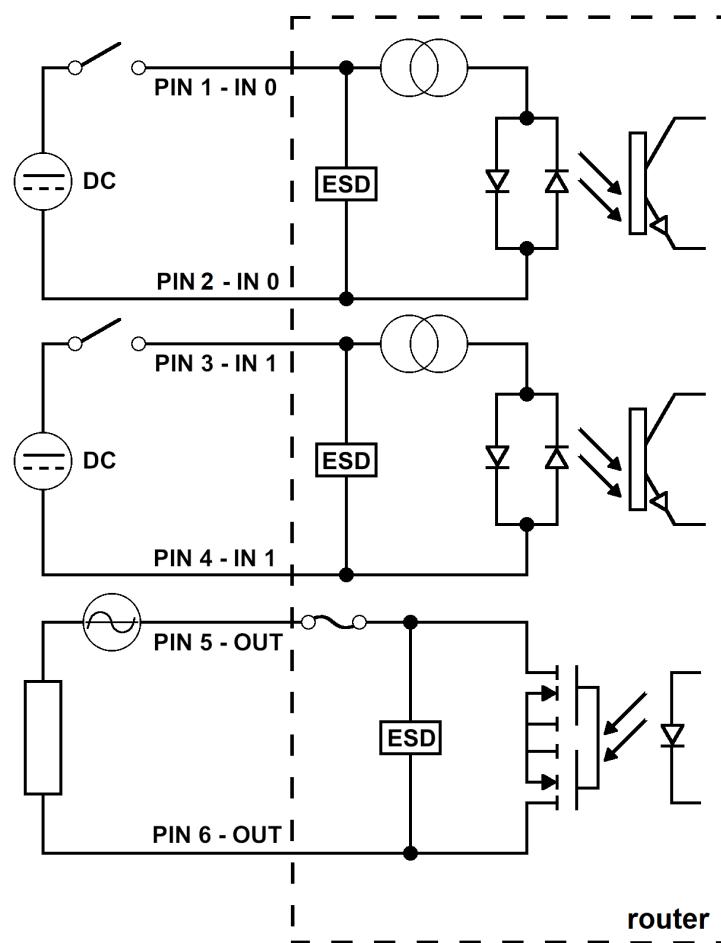


Figure 21: Functional block diagram of the digital interface

3.8.9 Reset

When *PWR* LED starts flashing on the front panel, it is possible to restore the default configuration of the router by pressing the *RST* button on the rear panel. After pressing this button the default configuration is restored and then router reboots (green LED will be on).



For pressing the *RST* button could be used a narrow screwdriver.

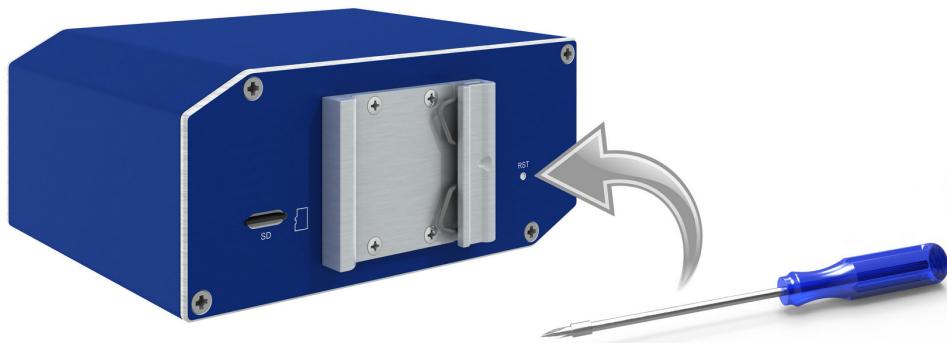


Figure 22: Router reset



We recommend backing up configuration of the router (see *Configuration manual*) because reset of the router sets the configuration to the default state.

It is important to distinguish between reset and reboot the router.

Action	Router behavior	Invoking events
Reboot	Turn off and then turn on router	Disconnect and connect the power, Press the <i>Reboot</i> button in the web configuration
Reset	Restore default configuration and reboot the router	Press <i>RST</i> button

Table 17: Description of router reset and restart

3.9 Interfaces Description

There are available versions with one of the following interfaces:

- SWITCH interface

3.9.1 SWITCH Interface

Three LAN ports of SWITCH interface for SmartFlex routers (RJ45 connectors for connecting Ethernet devices) act as a typical switch device. This means that the router reads Ethernet frames (data packets on an Ethernet link) from any port on SWITCH interface and transmits them on other ports of the SWITCH interface. Each port can transmit frames independently on the other ports. State indication is provided on every connector. Router in this version complies with the standards and temperature ranges declared in Chap. 5.1 except for the lower maximum operating temperature which is +70 °C.

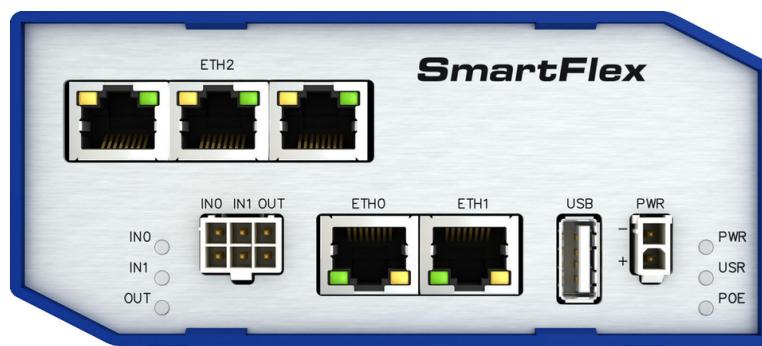


Figure 23: Version with switch board

State indication of the interface:

Description of indication		
Green LED	On Off	Selected 100 Mbps Selected 10 Mbps
Yellow LED	On Blinking Off	The network cable is connected Data transmission The network cable is not connected

Table 18: Switch interface state indication

Technical specification of Ethernet IEEE 802.3:

Ethernet interface, IEEE 802.3 standard	
Maximum data rate	100 Mbps
Max. total cable length (300 Bd, 200 nF/km)	100 m

Table 19: Switch interface parameters

4. First Use

4.1 Connecting the Router Before First Use

You can perform the initial configuration of the router using a web browser on your PC. This interface enables router monitoring, configuration, and administration.



- Before putting the router into operation, ensure that all components required for running your applications are connected.
- Do not operate the router without an antenna connected to the main antenna connector. Transmitted energy will be reflected by an open connector, which could potentially damage the equipment.
- This device utilizes radio frequency bands that may be subject to specific usage restrictions in certain European Union countries (e.g., indoor use only). Please refer to [Appendix C](#) for detailed regulatory information before operation.

The procedure for connecting to a new router is described in the [Configuration Manual \[1\]](#), Chapter *Getting Started* → *Configuration Environments* → *Web Interface Initial Setup*. This manual also provides detailed descriptions and examples of router configuration using the web interface.

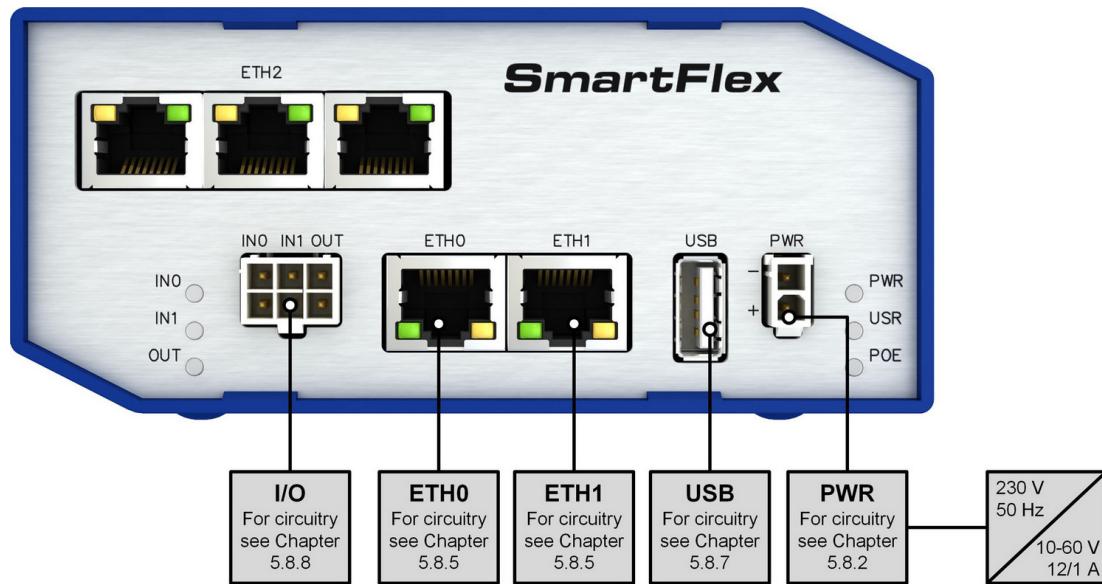


Figure 24: Router connection

4.2 Start

The router is put into operation when the power supply is connected to this router. By default, the router will automatically start to log on to the default APN. DHCP server will start to assign addresses for devices on the Ethernet port ETH0. Router's behavior can be changed via the web interface. This is described in detail in the *Configuration manual for SmartFlex routers*.

4.3 Configuration

4.3.1 Configuration over Web Browser

For status monitoring, configuration and administration of the router is available a web interface which can be accessed by entering the IP address of the router into the web browser. The default IP address of the router is 192.168.1.1. Attention, it is necessary to use HTTPS protocol for secure communication over a network!

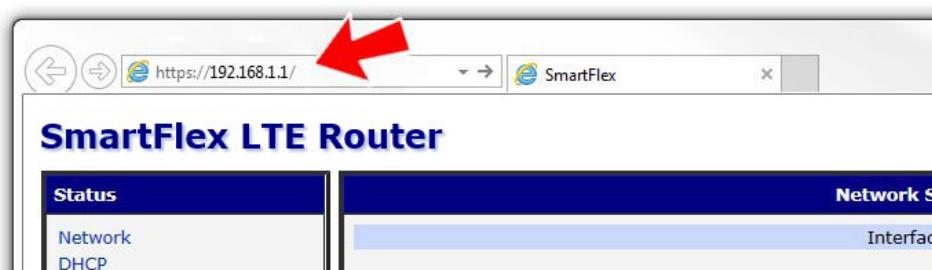


Figure 25: Entering the IP address of the router

Configuration may be performed only by the user "root". The default password is printed on the router's label.¹ Change the default password as soon as possible!



All routers have the *WebAccess/DMP* client pre-installed by default. The activated client periodically uploads router identifiers and configuration to the *WebAccess/DMP* server. See the configuration manual [1], chapter *Basic Information* → *WebAccess/DMP Configuration*, for more information.

A screenshot of a web browser showing a "Login" form. The form has a blue header with the word "Login". It contains two text input fields: "Username" and "Password", and a single "Login" button below them.

Figure 26: Entering login information

After successfully entering login information user gains access to the router via his internet browser.



A detailed description of the router settings via the Web interface can be found in the document *Configuration manual for SmartFlex routers*.

¹If the router's label does not contain a unique password, use the password "root".

Status

- General
- WiFi
- WiFi Scan
- Network
- DHCP
- IPsec
- DynDNS
- System Log

Configuration

- LAN
- VRPP
- PPPoE
- WIFI
- WLAN
- Backup Routes
- Firewall
- NAT
- OpenVPN
- IPsec
- GRE
- L2TP
- PTP
- DynDNS
- NTP
- SNMP
- SMTP
- Expansion Port 1
- Expansion Port 2
- USB Port
- Startup Script
- Up/Down Script
- Automatic Update

Customization

- User Modules

Administration

- Change Profile
- Change Password**
- Set Real Time Clock
- Backup Configuration
- Restore Configuration
- Update Firmware
- Reboot

General Status

Primary LAN

IP Address : 10.40.28.66 / 255.255.252.0
 MAC Address : 7C:66:9D:38:30:F0
 Rx Data : 10.4 KB
 Tx Data : 21.0 KB

» More Information «

Secondary LAN

IP Address : Unassigned
 MAC Address : 7C:66:9D:38:30:F2

» More Information «

WiFi

IP Address : Unassigned
 MAC Address : 78:A5:04:22:2A:67

» More Information «

Peripheral Ports

Expansion Port 1 : RS-232
 Expansion Port 2 : RS-485
 Binary Input 0 : Off
 Binary Input 1 : Off
 Binary Output : Off

System Information

Firmware Version : 5.2.1 (2015-07-17)
 Serial Number : N/A
 Profile : Standard
 Supply Voltage : 11.9 V
 Temperature : 39 °C
 Time : 2000-03-27 01:07:57
 Uptime : 0 days, 0 hours, 0 minutes

Figure 27: Router web interface

5. Technical Parameters

5.1 Basic Technical Parameters

SmartFlex SR300		
Temperature range	Operating Storage	-40 °C to +80 °C -40 °C to +85 °C
Cold start		-40 °C
Humidity	Operating Storage	0 to 95 % relative humidity non condensing 0 to 95 % relative humidity non condensing
Altitude	Operating	2000 m / 70 kPa
Degree of protection		IP30
Supply voltage		10 to 60 V DC (for PoE version see 3.8.6)
Battery for RTC		CR1225
Consumption	Idle Average Peak Sleep mode	2 W 3.3 W 4.5 W 10 mW
Dimensions		55 x 97 x 125 mm (DIN 35 mm, EN 60715)
Weight	Plastic box Metal box	approximately 211 g (depends on interface) approximately 327 g (depends on interface)
Antenna connectors		Reverse SMA – 50 Ω (only for versions with Wi-Fi module)
User interface	2x ETH USB I/O Micro SD	Ethernet (10/100 Mbps) USB 2.0 6-pin panel socket SDHC, SDXC

Table 20: Basic parameters

5.2 Standards and Regulations

The router complies with the following standards and regulations:

Parameter	Description
Radio	ETSI EN 300 328, ETSI EN 301 893
EMC	ETSI EN 301 489-1, ETSI EN 301 489-17, EN 55032, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-6-2, EN 61000-6-3
Safety	EN IEC 62368-1 (UL E487720), EN IEC 62311, IEEE 802.3
Cybersecurity	EN 18031-1
National	CE, UKCA, FCC compliant

Table 21: Standards and regulations

5.3 Type Testing and Environmental Conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact Enclosure air	± 6 kV (crit. A) ± 8 kV (crit. A)
RF field AM modulated	EN 61000-4-3	Enclosure	20 V/m (crit. A) (80 – 2700 MHz) 3 V/m (crit. A) (2700 – 6000 MHz)
Fast transient	EN 61000-4-4	Signal ports Power ports Ethernet ports	± 2 kV (crit. A) ± 2 kV (crit. A) ± 2 kV (crit. A)
Surge	EN 61000-4-5	Ethernet ports Power ports I/O ports	± 2 kV (crit. B), shielded cab. ± 0,5 kV (crit. B) ± 1 kV, L to L (crit. A) ± 2 kV, L to GND (crit. A)
RF conducted	EN 61000-4-6	All ports	10 V/m (crit. A) (0,15 – 80 MHz)
Radiated emission	EN 55022	Enclosure	Class B
Conducted emission	EN 55022	DC power ports Ethernet ports	Class B Class B
Power frequency magnetic field	EN 61000-4-8	Enclosure	160 A/m (crit. A)
Dry heat	EN 60068-2-2	+75 °C *, 40 % rel. humidity	
Cold	EN 60068-2-1	-40 °C *	
Vibration	EN 60068-2-64 ed. 2	Vibration spectrum A.3 (rolling stock)	Category 1 (3 axis, 8 hours per axis)
Shock	EN 60068-2-27 ed. 2	half-sine, 50 g peak, 11 ms	

Table 22: Type testing and environmental conditions

* The temperatures given are for the basic version of the router. These can vary for other versions.

5.4 Parameters of Wi-Fi



The 5 GHz Wi-Fi interface operates in frequency bands (specifically 5150–5350 MHz) that are restricted to **indoor use only** in certain EU member states. Please refer to [Appendix C](#) for detailed regulatory information.

Wi-Fi	
Antenna connector	R-SMA – 50 Ω
Supported Wi-Fi band	2.4 GHz, 5 GHz
Standards	802.11a, 802.11b, 802.11g, 802.11n
2.4 GHz supported channels	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13
5 GHz supported channels ¹	36, 38, 40, 42, 44, 46, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165
Type of device	Access point, station
Max. clients in AP mode	10
TX Power ¹	Max. 16.5 dBm @ 2.4 GHz Max. 18 dBm @ 5 GHz
RX Sensitivity	-96,3 dBm
AP maximum users	10 users (Wi-Fi module supports multi-role operation in STA and AP. Multi-role does not affect the maximum number of users).

Table 23: Technical parameters of Wi-Fi

5.5 Parameters of I/O Ports

- Characteristics of inputs:

Logical 0 / 1*	Voltage	Current	Web interface status
log. 1 max	3 V	0.4 mA	Off
log. 0 min	5 V	0.7 mA	On
log. 0 type	12 V	2 mA	On
log. 0 max	60 V	7 mA	On

Table 24: Characteristics of inputs

* The binary input status in the Shell is returned via `io get bin0` or `io get bin1`.

- Binary output parameters:
 - 60 V AC / 300 mA
 - 60 V DC / 300 mA

¹Depends on selected Country Code.

5.6 Parameters of PoE

Standards IEEE 802.3at-2009 (PoE+) and IEEE 802.3af-2003 (PoE) are supported. Cabling needed is Category 5, up to 12.5Ω . It is possible to use a passive PoE injector.

PoE PD: parameters for opposite PSE	
Input voltage range	42.5 – 57 V
Power available	25.50 W
Maximum current	600 mA

Table 25: PoE PD: parameters for corresponding PSE

PoE PSE parameters	
Power supply needed	44 – 57 V, 65 W
Power available	2x 25.50 W (ETH0, ETH1)

Table 26: PoE PSE parameters

5.7 Other Parameters

Parameter	Description
CPU power	2 DMIPS per MHz
Flash memory	256 MB
RAM	512 MB
M-RAM	128 kB

Table 27: Other technical parameters

Appendix A: Troubleshooting

If you cannot connect to the router from your PC, your network card may be configured in a way that prevents a connection. Try one or more of the following steps to resolve the issue:



- Ensure your PC's network card is configured to obtain an IP address automatically from a DHCP server (the router's DHCP server is enabled by default).
- Connect the router to the PC via a network switch.
- Connect the PC directly to the router, but start the router first and wait for it to initialize completely before starting the PC.

Ethernet Connection Fails or Is Unstable

- On the router's *Configuration* → *LAN* page, you can disable auto-negotiation and manually set a specific link speed and duplex mode. This can resolve compatibility issues with some network devices.

Mobile WAN Connection Fails or Is Intermittent

- Check the signal strength on the *Status* → *Mobile WAN* page. If the signal is weak, a more powerful antenna is required. If neighboring cells have similar signal strength, a directional antenna may be necessary to lock onto the optimal cell tower.
- Enable the connection check feature on the *Configuration* → *Mobile WAN* page in the *Check connection* section. Select the *Enable + bind* option. This will send periodic pings to check connectivity and restart the connection if it fails. The "bind" option ensures the ping is always sent through the Mobile WAN interface.

Cannot Establish Mobile WAN Connection

- Verify all settings on the *Configuration* → *Mobile WAN* page, including the *APN*, *username*, *password*, and *IP address*. For many public networks, these fields can be left blank.
- Check if the SIM card requires a PIN. If so, enter it on the *Administration* → *Unlock SIM Card* page.
- For private APN networks, it is often not recommended to obtain DNS server addresses from the operator. Disable this option on the *Configuration* → *Mobile WAN* page.
- Check the *Status* → *System Log* for error messages that can help diagnose the issue.

Cannot Connect to a Device Behind the Router from the Internet (NAT)

- The device behind the router must be configured to use the router's IP address as its default gateway.

Cannot Access a Web Server Behind the Router via NAT

- Remote HTTP access to the router itself must be disabled. This can be done on the *Configuration* → *NAT* page.
- On the same page, enable the *Send all remaining incoming packets to default server* feature and enter the IP address of your web server.
- Ensure the web server's default gateway is set to the router's IP address.

DynDNS Does Not Work

- DynDNS will not work with a private APN if the router's IP address is not publicly accessible.
- If your DynDNS hostname resolves to the same private IP address that is assigned to the router, it means your mobile operator is using NAT or a firewall, preventing direct connections.
- You can verify operator NAT by pinging a server with a static public IP and comparing the source IP (seen by the server) with the IP address shown on the router's status page.
- You can test for a firewall by trying to access the router's web interface remotely.
- The operator may not be providing DNS server addresses. Without DNS, the router cannot resolve the DynDNS service hostname. The System Log would show errors like:
 - `Error resolving hostname: no such file or directory`
 - `Connect to DynDNS server failed`

L2TP or IPsec Tunnel Fails to Establish

- Check the *Status* → *System Log* for specific error messages related to the VPN tunnel negotiation.

IPsec Tunnel Establishes, but No Data Is Transferred

- This is typically caused by incorrect routing rules or a misconfigured default gateway on either the client device or the remote network.

Router Reverts to Online Mode After a Reboot, Despite Being Set to Offline via SMS

- State changes made via SMS commands are temporary and do not alter the saved configuration. They remain in effect only until the router is rebooted.

Serial Communication Is Not Working

- Verify that your router model is equipped with a serial port. Check the serial communication settings on the *Configuration* → *Expansion Port* page.

Is the Router Cisco Compatible?

- No. The router's operating system (ICR-OS) is based on Linux, not Cisco IOS. Therefore, Cisco configuration commands cannot be used.
- However, since all network connections are based on open standards, the router is fully compatible and can be connected to Cisco devices or any other standard networking equipment.

FTP or SFTP Does Not Work

- **FTP** is available on v2 platform routers only. Ensure it is enabled in *Configuration* → *Services* → *FTP*. Connect using any FTP client to port `21` with the same username and password as the web interface.
- **SFTP** (SSH File Transfer Protocol) is available on all routers. Ensure SSH is enabled in *Configuration* → *Services* → *SSH*. Connect using any SFTP-capable client (like FileZilla or WinSCP) to port `22` with the same credentials as the web interface.

How to Access the Router's Command Line

- You can connect to the router's command line using SSH (all routers) or Telnet (v2 routers only).
- **SSH** is enabled by default. You can verify this in *Configuration* → *Services* → *SSH*. Use any SSH client to connect to the router's IP address on port `22`.
- **Telnet** can be enabled on v2 routers in *Configuration* → *Services* → *Telnet*.
- For both methods, use the same username and password as for the web interface.

Appendix B: Customer Support

Customer Support for Europe

Advantech Czech s.r.o.

Sokolska 71
562 04, Usti nad Orlici
Czech Republic

Phone: +353 91 792444
Fax: +353 91 792445
E-mail: iiotcustomerservice@advantech.eu
Web: www.advantech.com

Customer Support for NAM

Advantech North America

707 Dayton Road
Ottawa, IL 61350 USA

Phone: +1-800-346-3119 (Monday – Friday, 7 a.m. to 5:30 p.m. CST)
Fax: +1-815-433-5109
E-mail: support.iiot.ana@advantech.com
Web: www.advantech.com

Customer Support for Asia

Phone: +886-2-2792-7818 #1299 (Monday – Friday, 9 a.m. to 5:30 p.m. UTC+8)
Fax: +886-2-2794-7327
E-mail: icg.support@advantech.com.tw
Web: www.advantech.com

Appendix C: Regulatory & Safety Information

Safety Notices

For your safety and proper operation of the device, please observe the following instructions:

- The router must comply with all applicable international, national, and local regulations, including any specific restrictions concerning its use in designated applications and environments.
- To avoid personal injury or damage to the device, use only accessories that are approved or supplied by the manufacturer. Unauthorized modifications or the use of non-approved accessories may damage the router, violate regulations, and void the warranty.
- Do not attempt to open the router enclosure under any circumstances.
- Before handling the SIM card, always switch off the router and disconnect it from the power supply. Handle the SIM card with care to avoid damage or electrostatic discharge.

 This equipment is not suitable for use by or near young children. Small children could accidentally swallow the SIM card.

- Always ensure that the power supply voltage does not exceed 48 V DC.
- Do not expose the router to harsh environmental conditions. Protect it from dust, moisture, and excessive temperatures.
- Use only routers with proper certifications and markings in areas containing flammable or explosive materials (such as gas stations, chemical plants, or locations with explosives). In these environments, always follow the applicable restrictions regarding the use of radio devices.
- When traveling by airplane, always switch off the router. Using the router on board may endanger flight safety, interfere with mobile networks, and violate local regulations. Non-compliance can result in suspension or cancellation of telecommunications services or legal penalties.
- Take special care when operating the router in close proximity to personal medical devices such as cardiac pacemakers or hearing aids. If in doubt, consult the manufacturer of the medical device or your physician.
- This device may cause interference if used near television sets, radio receivers, or personal computers.
- Maintain a minimum separation distance of at least 20 cm between the router and the human body during operation.
- It is strongly recommended to regularly back up all critical configuration data stored in the router's memory.
- **Specific Usage Restrictions for 5 GHz Wi-Fi:** This device operates in the 5150–5350 MHz frequency band, which is restricted to **indoor use only** within the European Union, EFTA countries, and Northern Ireland. Outdoor use in this frequency band is prohibited to prevent harmful interference with other radio services.

	AT	BE	BG	CY	CZ	DE	DK	EE	EL	ES	FI
FR	HR	HU	IE	IT	LT	LU	LV	MT	NL	PL	
PT	RO	SE	SI	SK	IS	LI	NO	CH	TR	UK	

Product Disposal Instructions

The WEEE directive (Waste Electrical and Electronic Equipment: 2012/19/EU) ensures the environmentally responsible recycling and recovery of electronic products. This device contains high-quality materials and components suitable for recycling. At the end of its life, **do not dispose of this product with ordinary commercial waste**. The router also contains a battery. Remove the battery before disposing of the device, and ensure the battery is disposed of separately and in accordance with local regulations. For detailed information on product and battery disposal, consult your supplier's terms and conditions.

Appendix D: Related Documents

[1] Configuration Manual for SmartFlex Routers

[EP] Product-related documents and applications can be obtained on **Engineering Portal** at <https://icr.advantech.com/download> address.



We, Advantech Czech s.r.o., declare that the radio equipment narrated in this user's manual complies with Radio Equipment Regulations 2017 (**S.I. 2017 No. 1206**).

We, Advantech Czech s.r.o., declare that the radio equipment narrated in this user's manual complies with Directive **2014/53/EU**.

The full text of the EU Declaration of Conformity is available at the following internet address:
icr.advantech.com/doc