

# ADVANTECH



## Event Notificator



© 2024 Advantech Czech s.r.o. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and it does not represent a commitment on the part of Advantech.

Advantech Czech s.r.o. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual.

All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

# Used symbols



*Danger* – Information regarding user safety or potential damage to the router.



*Attention* – Problems that can arise in specific situations.



*Information* – Useful tips or information of special interest.



*Example* – Example of function, command or script.

# Contents

<b>1. Changelog</b>	<b>1</b>
1.1 Event Notificator Changelog . . . . .	1
<b>2. Description of the module</b>	<b>2</b>
<b>3. Web Interface</b>	<b>3</b>
3.1 Configuration . . . . .	4
3.1.1 Events . . . . .	4
3.1.2 E-mail . . . . .	4
3.1.3 SNMP . . . . .	5
3.2 Administration . . . . .	7
3.2.1 Test Event . . . . .	7
<b>4. Related Documents</b>	<b>8</b>

## List of Figures

1	Menu . . . . .	3
2	Configuration . . . . .	4
3	Emails . . . . .	4
4	SNMP Version 1 . . . . .	5
5	SNMP Version 2c . . . . .	5
6	SNMP Version 3 . . . . .	6
7	Test event . . . . .	7

## List of Tables

1	SNMP Version 1 Configuration items description . . . . .	5
2	SNMP Version 2c Configuration items description . . . . .	5
3	SNMP Configuration items description . . . . .	7

# 1. Changelog



This Router App has been tested on a router with firmware version 6.3.10. After updating the router's firmware to a higher version, make sure that a newer version of the Router App has not also been released, as it is necessary to update it as well for compatibility reasons.

## 1.1 Event Notificator Changelog

### v1.0.0 (2021-10-06)

- First release (8 event types, notifications through e-mail and SNMP traps).

### v1.1.0 (2022-11-03)

- Reworked license information

### v2.0.0 (2024-21-02)

- Added support for SNMP v2c and v3 protocols
- The Enterprise OID attribute transmitted with SNMP v1 Trap requests now specifies router series which makes Event Notificator SNMP requests consistent with those generated by the built-in SNMP notification service
- Added description and summary files
- Recompiled with ModulesSDK 2.1.0

## 2. Description of the module



This Router app is not contained in the standard router firmware. Uploading of this router app is described in the Configuration manual (see Chapter [Related Documents](#)).



The router app requires firmware 6.4.1 or higher.

Router App *Event Notificator* creates a way, how to get e-mail notifications to defined addresses based on selected events.

### 3. Web Interface

Once the installation of the module is complete, the module's GUI can be invoked by clicking the module name on the Router apps page of router's web interface.

Left part of this GUI contains menu with Configuration menu section and Administration menu section. Administration menu section contains Test Event item and Return item, which switches back from the module's web page to the router's web configuration pages. The main menu of module's GUI is shown on Figure 2.

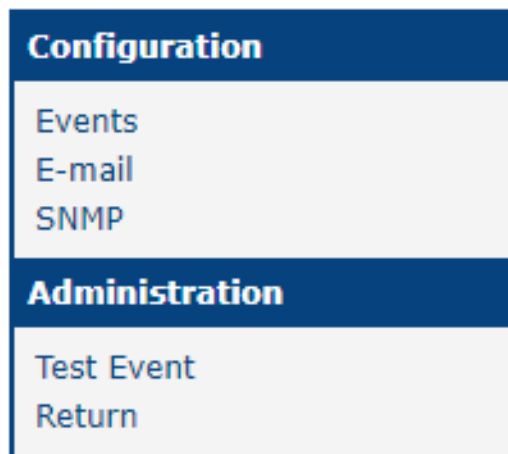


Figure 1: Menu





### 3.1.3 SNMP

The SNMP Configuration varies on SNMP version selected

#### SNMP Version 1

**Event Notificator Configuration**

Note: traps are sent with an unsigned integer value 1 with OID 1.3.6.1.4.1.30140.3.101.<event\_id>.0. See event configuration page for event IDs.

SNMP manager IPv4 address

SNMP version

Community

Figure 4: SNMP Version 1

Item	Description
SNMP manager IPv4 address	IP address of SNMP manager.
Community	String used as a form of security measure for controlling access to network management information

Table 1: SNMP Version 1 Configuration items description

#### SNMP Version 2c

**Event Notificator Configuration**

Note: traps are sent with an unsigned integer value 1 with OID 1.3.6.1.4.1.30140.3.101.<event\_id>.0. See event configuration page for event IDs.

SNMP manager IPv4 address

SNMP version

PDU Type

Community

Figure 5: SNMP Version 2c

Item	Description
SNMP manager IPv4 address	IP address of SNMP manager.
PDU Type	Select PDU Type: <ul style="list-style-type: none"> <li>• Inform - Confirmed delivery.</li> <li>• Trap - Unconfirmed notification.</li> </ul>
Community	String used as a form of security measure for controlling access to network management information

Table 2: SNMP Version 2c Configuration items description

## SNMP version 3

Event Notificator Configuration	
Note: traps are sent with an unsigned integer value 1 with OID 1.3.6.1.4.1.30140.3.101.<event_id>.0. See event configuration page for event IDs.	
SNMP manager IPv4 address	<input type="text"/>
SNMP version	3
PDU Type	Inform
Engine ID Payload Type	Lowest MAC address
Engine ID Payload *	<input type="text"/>
Engine ID	800075BC0302ADFF000097
Context Name *	<input type="text"/>
Username	admin
Authentication	none
Authentication Password	<input type="text"/>
Privacy	none
Privacy Password	<input type="text"/>
* can be blank	
<input type="button" value="Apply"/>	

Figure 6: SNMP Version 3

Item	Description
SNMP manager IPv4 address	IP address of SNMP manager.
PDU Type	Select PDU Type: <ul style="list-style-type: none"> <li>• Inform - Confirmed delivery.</li> <li>• Trap - Unconfirmed notification.</li> </ul>
Engine ID Payload Type	Select Engine ID Payload Type: <ul style="list-style-type: none"> <li>• Lowest MAC Address (default value)</li> <li>• ASCII Text</li> <li>• Hexadecimal Value</li> </ul>
Engine ID Payload	When selected ASCII text of Hexadecimal Value in the Payload Type enter desired value for further identification of Engine
Engine ID	ID of the Engine with added payload used as a unique identifier for SNMP entities generated from values selected above. It helps in distinguishing between different SNMP entities within the same network, allowing for secure communication and message processing. The Engine ID is used as part of the SNMPv3 message header for authentication and privacy purposes.

Continued on the next page

Continued from previous page

Item	Description
Context Name <i>(optional)</i>	String used to differentiate between different logical subsets of managed objects within an SNMP entity. Each context can have its own set of managed objects and access control settings. Contexts help in organizing and isolating management data, improving scalability, security, and efficiency of SNMP-based management systems.
Username	Username used for authentication purposes
Authentication	Select authentication from the list below <ul style="list-style-type: none"> <li>• none</li> <li>• SHA-512</li> <li>• SHA-386</li> <li>• SHA-256</li> <li>• SHA-224</li> <li>• SHA</li> <li>• MD5</li> </ul>
Authentication Password	Password for authentication selected above.
Privacy	Choose privacy. Options are <b>none</b> , <b>DES</b> and <b>AES</b> .
Privacy Password	When the Privacy above is selected to be DES or AES, enter the password.

Table 3: SNMP Configuration items description

## 3.2 Administration

### 3.2.1 Test Event

Here you can trigger the test event. After triggering the test event here, notifications should be sent out through all the channels configured on the previous pages. You can use this to test whether your configuration is correct. Note that you have to both enable the notification method in the Events page, and properly set up details in the *E-mail* page and/or the *SNMP* page first.




Figure 7: Test event

## 4. Related Documents

You can obtain product-related documents on *Engineering Portal* at [icr.advantech.com](http://icr.advantech.com) address.

To get your router's *Quick Start Guide*, *User Manual*, *Configuration Manual*, or *Firmware* go to the [Router Models](#) page, find the required model, and switch to the *Manuals* or *Firmware* tab, respectively.

The *Router Apps* installation packages and manuals are available on the [Router Apps](#) page.

For the *Development Documents*, go to the [DevZone](#) page.